



JX60 – JX70 – JX80 – JX90 – JX95 MODEL TRACTORS SERVICE MANUAL

SECTIONS	
GENERAL	00
ENGINE	10
CLUTCH	18
GEARBOX	21
TRANSMISSION OF MOTION	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
AUXILIARY EQUIPMENT	50
ELECTRICAL SYSTEM	55
CAB	90

S E R V I C E

INTRODUCTION

- ◇ *This manual is divided into sections identified by two-figure numbers. Each section has independent page numbering.
For ease of reference, these sections have the same numbers and names as the Repairs Rate Book sections.*
- ◇ *The different sections can easily be found by consulting the table of contents on the following pages.*
- ◇ *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- ◇ *The information contained in this manual was current on the date printed on each section. As CASE IH constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons or to meet legal requirements in different countries.
In the event of conflicting information, consult the CASE IH Sales and Service Departments.*

IMPORTANT WARNINGS

- ◇ *All maintenance and repair work described in this manual must be performed exclusively by CASE IH service technicians in strict accordance with the instructions given and using any specific tools necessary.*
- ◇ *Anyone who performs the operations described herein without strictly following the instructions is personally responsible for resulting injury or damage to property.*
- ◇ *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS ARE THE PROPERTY
OF CNH ITALIA S.p.A.



No part of the text or illustrations
may be reproduced

PRINTED IN ??????

CNH ITALIA S.p.A. - Viale delle Nazioni, 55 - 41100 MODENA - Italy

Technical Support - Technical Information

Print No. ?????? - ?? - ????



Repair Manual - JX Series Tractors

CONTENTS

GENERAL

SECTION 00

General Instructions and Health and Safety

Chapter 1

Section	Description	Page
00 000	General instructions	1
	Notes for spare parts	2
	Notes for equipment	2
	Safety rules	3
	Consumables	6

ENGINE

SECTION 10

Engine System

Chapter 1

Section	Description	Page
10 000	General specification	2
	Injection pump calibration data	5
	General specifications	16
	Tightening torques	24
	Tools	25
	Cross-sectional views	28
	Lubrication and cooling system diagrams	32
	Fault diagnosis	35
10 001 10	Engine <i>Removal-Installation</i>	39
10 001 54	Engine <i>Bench overhaul</i>	53
	Checks, measurements and repairs	78
10 406 10	Radiator <i>Removal-Installation</i>	102
10 102 70	Crankshaft front oil seal <i>removal installation</i>	106
10 402 10	Coolant pump <i>removal installation</i>	112
10 402 30	Cooling system thermostat	115
10 206 14	Bosch injection pump <i>removal installation</i>	118
	Bosch injection pump <i>timing</i>	121
	Bosch injection pump <i>air bleeding</i>	123
10 218 30	Injectors <i>removal installation</i>	124
10 106 12	Valve clearance adjustment	126

10 402 28	Coolant pump overhaul	129
10 001 30	Compression test	130

CLUTCH

SECTION 18

Clutches

Chapter 1

Section	Description	Page
18 000	General specifications	1
	Tightening torques	2
	Tools	3
	Cross-sectional views	4
	Clutch Troubleshooting	5
18 110 10	Removal - Installation	6
	Overhaul	14
	Minimum permissible dimensions after refacing	18
	Adjustments	19
18 100 40	Adjustment of the main and PTO clutch control linkage	21

GEARBOX

SECTION 21

Mechanical Transmission (12x4)

Chapter 1

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3&5
	Description and operation	8
	Fault diagnosis	8
21 110	Removal - Refitting	see sect 27

Reverser (12x12)

Chapter 2

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3
	Description and operation	5
	Fault diagnosis	5
21 110	Removal-Refitting	6

Reverser and Creeper (20x12)

Chapter 3

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	4

	Description and operation	6
	Fault diagnosis	6
21 110	Removal-Refitting	7

DRIVE LINES

SECTION 23

Drive Lines

Chapter 1

Section	Description	Page
23 000	Main specification	1
	Torque settings and Tools	2
	Cross-Sectional views	3
23 101 26	Transmission shafts and guard (Disassembly - Assembly)	4
23 101 40	Drive gear housing (Removal - Installation)	5
23 101 42	Drive gear housing removed (Disassembly - Assembly)	7

FRONT AXLE MECHANICAL TRANSMISSION

SECTION 25

Front Axle Mechanical Transmission

Chapter 1

Section	Description	Page
25 000	Main data	1
	Tightening torques	4
	Tools	6
	Cross-sectional views	7
	Description and operation	9
25 100 30	Complete front axle. Removal - Installation	10
25 100 38	Front axle. Removal - Installation	14
25 108 46-47	Steering knuckle bearing pins. Replacement	24
	Stub axle adjustment	25
	Wheel hub bearing adjustment	27
	Bevel drive adjustment	29
25 102 24	Front axle differential. Overhaul	36
25 100 27	Front axle differential with LIM-SLIP. Overhaul	37
	Front axle differential with NO SPIN. Overhaul	39
44 511 80	Leading drive wheels toe-in check	42

REAR AXLE AND TRANSMISSION

SECTION 27

Rear Axle And Transmission

Chapter 1

Section	Description	Page
27 000	Main data	1
	Tightening torques	3
	Special tools	5
	Cross-sectional views	7
	Description and operation and troubleshooting	9

21.118.10 - 12	Transmission-gearbox casing Removal-Installation	10
21.118.85	Transmission-gearbox casing Disassembly-Overhaul	27
	Gearbox driven shaft end float adjustment	35
	Differential lock engagement sleeve adjustment	36
	Determining the bevel pinion positioning adjustment ring	37
	Adjusting the taper roller bearings for the bevel pinion shaft	39
	Adjusting the bearings and checking the backlash	40
	Differential pinion and side gear backlash adjustment	44

POWER TAKE-OFF

SECTION 31

Mechanical Power Take - Off

Chapter 1

Section	Description	Page
31 000	Main specification	1
	Tools	3
	Torque settings	4
	Sectional drawings	5
	Description and operation	9
	Troubleshooting	10
	Removal - Refitting	11
31 101	Bench overhaul	14

BRAKING SYSTEM

SECTION 33

Braking System

Chapter 1

Section	Description	Page
33 000	Main data	1
	Tightening torques	2
	Cross-sectional views	2
	Description & Operation	9
	Tools - Troubleshooting	10
33.206	Front brake assembly mod. JX60 and JX70 removal and refitting - overhauling on the bench	11
33.202.60	Service brake removal and refitting	14
33.202.50	Removal-Refitting of front brake pumps	19
33.202.40	Bleeding air from the front braking system	23
33.120.08	Adjusting service brake pedals travel	24
33.110.08	Parking brake travel adjustment	24

HYDRAULIC SYSTEM

SECTION 35

Rear Mechanical Hydraulic Lift

Chapter 1

Section	Description	Page
35 000	Main specification	1
	Tightening torques	3

	Tools	6
	Cross-sectional views	7
	Description & Operation	9
	Hydraulic circuit	9
	Description and operation of lift phases	10
	Fault diagnosis	13
35 110.30	Hydraulic lift – disassembly reassembly	15
35.110.40-42-46	Hydraulic lift – bench overhaul	21
	Adjusting the lift	26
35.110.08	Linkage adjustment	32
35.110.30	Pressure relief valve – disassembly reassembly	34
35.110.32	Pressure relief valve – setting	34
35.110.14	Lift control valve – disassembly assembly and overhaul on bench	36
35.0101.10	Lift pump	41

Open Centre System Auxiliary Control Valves

Chapter 2

Section	Description	Page
35 000	Main data – Tools	1
	Auxiliary control valves – sectional views	2
	Description and operation	3
	Fault diagnosis	see chapter 1
35 204 46	Auxiliary control valves – Assembly-Disassembly	7
	Spool binding test	15
	Spool leakage test	16
	Adjustment of the automatic detent release pressure	17

Trailer Brake Auxiliary Control Valve

Chapter 3

Section	Description	Page
35 000	Section views	1
	Description and operation	1
	Hydraulic diagram	2
	Description and operation of valve phases	3
	Trailer brake auxiliary control valve linkage adjustment	6

STEERING

SECTION 41

Steering

Chapter 1

Section	Description	Page
41 000	Principal data	1
	Tightening torques	3
	Section views	4
	Hydraulic diagram	6
	Operation	7
	Fault diagnosis	9
	Tools	10
41 204 30	Hydrostatic steering control valve – Removal-Installation	11
41 204 34	Hydrostatic steering control valve – Disassembly-Assembly	14
41 204 38	Hydrostatic steering control valve – Bench testing	28
	Hydrostatic steering oil pump – Disassembly-Assembly	30
41 216 20	Steering cylinder (two-wheel drive axle) – Removal-Refitting	32
	Steering cylinder (four wheel drive axle) – Removal-Refitting	33

FRONT AXLE AND WHEELS

SECTION 44

Front Axle And Wheels

Chapter 1

Section	Description	Page
44 000	Principal data	1
	Sectional views	3
	Torque settings	4
	Equipment - Fault diagnosis	5
44 101 30	Removal-Refitting-Overhaul	6
44 101 22	Wheel hub disassembly-assembly	9
44 101 46	Stub axle overhaul	16
44 101 80	Checking wheel alignment	20

AUXILIARY UNITS

SECTION 50

Auxiliary Units

Chapter 1

Section	Description	Page
50 000	Safety instructions	2
	General characteristics	3
	Equipment	4
	Operating principles	5
	Fault diagnosis	7
	Cab controls	11
	Use	14
	Main components of the cab air conditioning system	15
	Refrigerant recovery-recycling and evacuation-charging stations	20
50 200 04	Drying recharging and checking cooling	22
50 200 03	Functional testing of air conditioning system	27
	Summary of the cab air-conditioning system charging operations	28
	Checking for refrigerant leaks using an electronic leak detector	30
	Summary of fault diagnosis and maintenance	31
	Air conditioning and heating pipes - Replacement	33
50 200 04-74	Receiver-drier - Replacement	36
50 200 04-72	Condenser - Replacement	38
50 200 04-26	Compressor - Removal-Refitting	39
50 200 10	Compressor drive belt tension adjustment	41

ELECTRICAL SYSTEM

SECTION 55

Instruments

Chapter 1

Section	Description	Page
	Analogue instruments Introduction	1
	Transmitter and switch	4

Components

Chapter 2

Section	Description	Page
55 500	Introduction	1
	Component description	1

Starting System

Chapter 3

Section	Description	Page
55 000	Technical information	1
	Tightening torques	1
	Description and operation	2
	Starting circuit	3
	System tests	5
55 201	Removal and re-installation of starter motor	8
	Servicing	9
	Bench tests	10

Charging System

Chapter 4

Section	Description	Page
55 000	Technical information	1
	Tightening torques	1
	Description and operation	2
	System testing and trouble-shooting	4
55 301	Removal, re-installation and servicing	10

Battery

Chapter 5

Section	Description	Page
55 000	Technical information	1
	Description and operation	1
55.301.040	Removal and re-installation	2
	Battery checking and maintenance	3
	Charging the battery	4
	Battery problems – Frequent causes	7

Electrical Circuits

Chapter 6

Section	Description	Page
55 100	Contents	1
	Fuses (all versions)	2
	Symbols used in electrical circuits	4
	Electrical wire colour coding	5
	Ground locations	5
	Electrical diagrams	
	- General diagrams (W/Cab)	9

- General diagrams (W/Out Cab)	15
- Analogue instrument circuit and connector overview	19
- Start-up circuit and connector overview	21
- Direction indicator & hazard warning light circuit and connector overview	25
- Windscreen and rear window wiper/washer circuit and connector overview ...	31
- Brake light circuit and connector overview	35
- Heating and air-conditioning system circuit and connector overview	41
- Work lamp (without cab circuit and connector overview)	45
- Work lamp (without cab circuit and connector overview)	49
- Side lights,main and dipped headlights, parking light circuit and connector overview	53

BODYWORK AND DRIVER POSITION

SECTION 90

Bodywork And Driver Position

Chapter 1

Section	Description	Page
90 160 42 - 43		
90 120 10	Control levers, seat and electrical controls - disassembly and reassembly	2
90 156 52	Rear window, handle and lock - disassembly and reassembly	10
90 154 30	Left-hand door exterior handle and lock - disassembly and reassembly	11
90 154 10	Left-hand door - disassembly and reassembly	12
90 160 60		
55 518 52	Windscreen wiper motor - disassembly and reassembly	13
90154 24		
90 156 10 - 14		
90 156 28	Cab windows - replacement	15

GENERAL INSTRUCTIONS

IMPORTANT NOTICE

All maintenance and repair operations described in this manual should be carried out exclusively by the CASE IH authorised workshops. All instructions detailed should be carefully observed and special equipment indicated should be used if necessary.

Everyone who carries out service operations described without carefully observing these prescriptions will be directly responsible of deriving damages.

SHIMMING

At each adjustment, select adjusting shims, measure them individually using a micrometer and then sum up recorded values. Do not rely on measuring the whole shimming set, which may be incorrect, or on rated value indicated for each shim.

ROTATING SHAFT SEALS

To correctly install rotating shaft seals, observe the following instructions:

- Let the seal soak into the same oil as it will seal for at least half an hour before mounting;
- Thoroughly clean the shaft and ensure that the shaft working surface is not damaged;
- Place the sealing lip towards the fluid. In case of a hydrodynamic lip, consider the shaft rotation direction and orient grooves in order that they deviate the fluid towards the inner side of the seal;
- Coat the sealing lip with a thin layer of lubricant (oil rather than grease) and fill with grease the gap between the sealing lip and the dust lip of double lip seals;
- Insert the seal into its seat and press it down using a flat punch. Do not tap the seal with a hammer or a drift;
- Take care to insert the seal perpendicularly to its seat while you are pressing it. Once the seal is settled, ensure that it contacts the thrust element if required.;
- To prevent damaging the sealing lip against the shaft, place a suitable protection during installation.

O RINGS

Lubricate the O rings before inserting them into their seats. This will prevent the O rings from rolling over and twine during mounting which will jeopardise sealing.

SEALERS

Apply one of the following sealers: RTV SILMATE, RHODORSIL CAF 1, or LOCTITE PLASTIC GASKET over the mating surfaces marked with an X.

Before applying the sealer, prepare the surface as follows:

- remove possible scales using a metal brush;
- thoroughly degrease the surfaces using one of the following cleaning agent: trichlorethylene, petrol or a water and soda solution.

BEARINGS

It is advisable to heat the bearings to 80 to 90°C before mounting them on their shafts and cool them down before inserting them into their seats with external tapping.

ROLL PINS

When fitting straight roll pins, ensure that the pin notch is oriented in the direction of the effort to stress the pin. Coil roll pins can be installed in any position.

NOTES FOR SPARE PARTS

Use exclusively **genuine CASE IH spare parts**, the only ones bearing this logo.



Only genuine parts guarantee same quality, life, safety as original components as they are the same as mounted in production.

Only the **CASE IH genuine spare parts** can offer this guarantee.

All spare parts orders should be complete with the following data:

- tractor model (commercial name) and frame number;
- engine type and number;
- part number of the ordered part, which can be found on the “Microfiches” or the “Spare Parts Catalogue”, which is the base for order processing.

NOTES FOR EQUIPMENT

Equipment which CASE IH proposes and shows in this manual are as follows:

- studied and designed expressly for use on CASE IH tractors;
- necessary to make a reliable repair;
- accurately built and strictly tested to offer efficient and long-lasting working means.

We also remind the Repair Personnel that having these equipment means:

- work in optimal technical conditions;
- obtain best results;
- save time and effort;
- work more safely.

NOTICES

Wear limits indicated for some details should be intended as advised, but not binding values. The words “front”, “rear”, “right hand”, and “left hand” referred to the different parts should be intended as seen from the operator’s seat oriented to the normal sense of movement of the tractor.

HOW TO MOVE THE TRACTOR WITH THE BATTERY REMOVED

Cables from the external power supply should be connected exclusively to the respective terminals of the tractor positive and negative cables using pliers in good condition which allow proper and steady contact.

Disconnect all services (lights, wind-shield wipers, etc.) before starting the tractor.

If it is necessary to check the tractor electrical system, check it only with the power supply connected. At check end, disconnect all services and switch the power supply off before disconnecting the cables.

SAFETY RULES

PAY ATTENTION TO THIS SYMBOL



This warning symbol points out important messages involving personal safety. Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and safeguard your safety and personal integrity.

In this manual you will find this symbol together with the following key-words:



WARNING – it gives warning about improper repair operations and deriving potential consequences affecting the service technician's personal safety.

DANGER – it gives specific warning about potential dangers for personal safety of the operator or other persons directly or indirectly involved.

TO PREVENT ACCIDENTS

Most accidents and personal injuries taking place in workshops are due from non-observance of some simple and essential prudential rule and safety precautions. For this reason, **IN MOST CASES THEY CAN BE AVOIDED**. It suffices to foresee possible causes and act consequently with necessary caution and care.

The possibility that an accident might occur with any type of machines should not be disregarded, no matter how well the machine in question was designed and built.

A wise and careful service technician is the best precautions against accidents.

Careful observance of this only basic precaution would be enough to avoid many severe accidents.

DANGER: Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

if they are certified operators to assist in the operation to be carried out.

SAFETY RULES

GENERALITIES

- ◇ Carefully follow specified repair and maintenance procedures.
- ◇ Do not wear rings, wristwatches, jewels, unbuttoned or flapping clothing such as ties, torn clothes, scarves, open jackets or shirts with open zips which could get hold into moving parts. We advise to use approved safety clothing such as anti-slipping footwear, gloves, safety goggles, helmets, etc.
- ◇ Never carry out any repair on the machine if someone is sitting on the operator's seat, except

- ◇ Never operate the machine or use attachments from a place other than sitting at the operator's seat.
- ◇ Never carry out any operation on the machine when the engine is running, except when specifically indicated.
- ◇ Stop the engine and ensure that all pressure is relieved from hydraulic circuits before removing caps, covers, valves, etc.
- ◇ All repair and maintenance operations should be carried out with the greatest care and attention.
- ◇ Service stairs and platforms used in a workshop or in the field should be built in compliance with the safety rules in force.
- ◇ Disconnect the batteries and label all controls to warn that the tractor is being serviced. Block the machine and all equipment which should be raised.
- ◇ Never check or fill fuel tanks and accumulator batteries, nor use starting liquid if you are smoking or near open flames as such fluids are flammable.
- ◇ Brakes are inoperative when they are manually released for maintenance purposes. In such cases, the machine should be kept constantly under control using blocks or similar devices.
- ◇ The fuel filling gun should remain always in contact with the filler neck. Maintain this contact until the fuel stops flowing into the tank to avoid possible sparks due to static electricity buildup.

- ◇ Use exclusively specified towing points for towing the tractor. Connect parts carefully. Ensure that foreseen pins and/or locks are steadily fixed before applying traction. Do not stop near towing bars, cables or chains working under load.
- ◇ To transfer a failed tractor, use a trailer or a low loading platform trolley if available.
- ◇ To load and unload the machine from the transportation mean, select a flat area providing a firm support to the trailer or truck wheels. Firmly tie the machine to the truck or trailer platform and block wheels as required by the forwarder.
- ◇ For electrical heaters, battery–chargers and similar equipment use exclusive auxiliary power supplies with a efficient ground to avoid electrical shock hazard.
- ◇ Always use lifting equipment and similar of appropriate capacity to lift or move heavy components.
- ◇ Pay special attention to bystanders.
- ◇ Never pour gasoline or diesel oil into open, wide and low containers.
- ◇ Never use gasoline, diesel oil or other flammable liquids as cleaning agents. Use non–flammable non–toxic proprietary solvents.
- ◇ Wear protection goggles with side guards when cleaning parts using compressed air.
- ◇ Do not exceed a pressure of 2.1 bar, in accordance with local regulations.
- ◇ Do not run the engine in a closed building without proper ventilation.
- ◇ Do not smoke, use open flames, cause sparks in the nearby area when filling fuel or handling highly flammable liquids.
- ◇ Do not use flames as light sources when working on a machine or checking for leaks.
- ◇ Move with caution when working under a tractor, and also on or near a tractor. Wear proper safety accessories: helmets, goggles and special footwear.
- ◇ During checks which should be carried out with the engine running, ask an assistant to seat at the operator's seat and keep the service technician under visual control at any moment.
- ◇ In case of operations outside the workshop, drive the tractor to a flat area and block it. If working on an incline cannot be avoided, first block the tractor carefully. Move it to a flat area as soon as possible with a certain extent of safety.
- ◇ Ruined or plied cables and chains are unreliable. Do not use them for lifting or trailing. Always handle them wearing gloves of proper thickness.
- ◇ Chains should always be safely fastened. Ensure that fastening device is strong enough to hold the load foreseen. No persons should stop near the fastening point, trailing chains or cables.
- ◇ The working area should be always kept CLEAN and DRY. Immediately clean any spillage of water or oil.
- ◇ Do not pile up grease or oil soaked rags, as they constitute a great fire hazard. Always place them into a metal container.
Before starting the tractor or its attachments, check, adjust and block the operator's seat. Also ensure that there are no persons within the tractor or attachment operating range.
- ◇ Do not keep into your pockets any object which might fall unobserved into the tractor's inner compartments.
- ◇ Whenever there is the possibility of being reached by ejected metal parts or similar, use protection eye mask or goggles with side guards, helmets, special footwear and heavy gloves.
- ◇ Wear suitable protection such as tinted eye protection, helmets, special clothing, gloves and footwear whenever it is necessary to carry out welding procedures. All persons standing in the vicinity of the welding process should wear tinted eye protection. NEVER LOOK AT THE WELDING ARC IF YOUR EYES ARE NOT SUITABLY PROTECTED.
- ◇ Metal cables with the use get frayed. Always wear adequate protections (heavy gloves, eye protection, etc.)
- ◇ Handle all parts with the greatest caution. Keep your hands and fingers far from gaps, moving gears and similar. Always use approved protective equipment, such as eye protection, heavy gloves and protective footwear.

START UP

- ◇ Never run the engine in confined spaces which are not equipped with adequate ventilation for exhaust gas extraction.
- ◇ Never bring your head, body, arms, legs, feet, hands, fingers near fans or rotating belts.

ENGINE

- ◇ Always loosen the radiator cap very slowly before removing it to allow pressure in the system to dissipate. Coolant should be topped up only when the engine is stopped or idle if hot.
- ◇ Do not fill up fuel tank when the engine is running, mainly if it is hot, to avoid ignition of fires in case of fuel spilling.
- ◇ Never check or adjust the fan belt tension when the engine is running.
Never adjust the fuel injection pump when the tractor is moving.
- ◇ Never lubricate the tractor when the engine is running.

ELECTRICAL SYSTEMS

- ◇ If it is necessary to use auxiliary batteries, cables must be connected at both sides as follows: (+) to (+) and (–) to (–). Avoid short-circuiting the terminals. **GAS RELEASED FROM BATTERIES IS HIGHLY FLAMMABLE.** During charging, leave the battery compartment uncovered to improve ventilation. Avoid checking the battery charge by means of “jumpers” made by placing metallic objects across the terminals. Avoid sparks or flames near the battery area. Do not smoke to prevent explosion hazards.
- ◇ Prior to any service, check for fuel or current leaks. Remove these leaks before going on with the work.
- ◇ Do not charge batteries in confined spaces. Ensure that ventilation is appropriate to prevent accidental explosion hazard due to build-up of gases released during charging.
- ◇ Always disconnect the batteries before performing any type of service on the electrical system.

HYDRAULIC SYSTEMS

- ◇ Some fluid slowly coming out from a very small port can be almost invisible and be strong enough to penetrate the skin. For this reason, **NEVER USE YOUR HANDS TO CHECK FOR LEAKS**, but use a piece of cardboard or a piece of wood to this purpose. If any fluid is injected into the skin, seek medical aid immediately. Lack of immediate medical attention, serious infections or dermatosis may result.
- ◇ Always take system pressure readings using the appropriate gauges.

WHEELS AND TYRES

- ◇ Check that the tyres are correctly inflated at the pressure specified by the manufacturer. Periodically check possible damages to the rims and tyres.
- ◇ Keep off and stay at the tyre side when correcting the inflation pressure.
- ◇ Check the pressure only when the tractor is unloaded and tyres are cold to avoid wrong readings due to over-pressure. Do not reuse parts of recovered wheels as improper welding, brazing or heating may weaken the wheel and make it fail.
- ◇ Never cut, nor weld a rim with the inflated tyre assembled.
- ◇ To remove the wheels, block both front and rear tractor wheels. Raise the tractor and install safe and stable supports under the tractor in accordance with regulations in force.
- ◇ Deflate the tyre before removing any object caught into the tyre tread.
- ◇ Never inflate tyres using flammable gases as they may originate explosions and cause injuries to bystanders.

REMOVAL AND INSTALLATION

- ◇ Lift and handle all heavy components using lifting equipment of adequate capacity. Ensure that parts are supported by appropriate slings and hooks. Use lifting eyes provided to this purpose. Take care of the persons near the loads to be lifted.
- ◇ Handle all parts with great care. Do not place your hands or fingers between two parts. Wear approved protective clothing such as safety goggles, gloves and footwear.
- ◇ Do not twine chains or metal cables. Always wear protection gloves to handle cables or chains.

CONSUMABLES

COMPONENT TO BE FILLED OR TOPPED UP	QUANTITY			CASE IH RECOMMENDED PRODUCTS	INTERNATIONAL SPECIFICATION
	litres/dm ³	US gal	IMP gal		
Cooling system:					
JX60, JX70 models	12	3.2	2.64	Water & liquid AKCELA PREMIUM ANTI-FREEZE 50% + 50%	–
JX80, JX90, JX95 models	14	3.7	3.08		
with cab :					
JX60, JX70 models	14	3.7	3.1		
JX80, JX90, JX95 models	16	4.2	3.5		
Windscreen washer bottle	2	0.53	0.44	Water & cleaning liquid	–
Fuel tank	90	23.8	19.8	Decanted and filtered diesel fuel	–
Additional fuel tank (Optional)	27	7.1	5.94		–
Engine sump:					
without filter :				AKCELA No.1 ENGINE OIL API CH-4 * ACEA E5 * MB 228.3 * CUMMINS CES 200072/20076/20077	API CF-4/SG CCMC D4 MIL-L-2104E
JX60, JX70 models	7.6	1.98	1.67		
JX80, JX90, JX95 models	10.5	2.77	2.31		
with filter :					
JX60, JX70 models	8.3	2.19	1.83		
JX80, JX90, JX95 models	11.2	2.96	2.46		
Brake control circuit	0.4	0.1	0.09	AKCELA LHM FLUID Oil	ISO 7308
Hydrostatic steering circuit	2.0	0.5	0.44	Oil AKCELA NEXPLORE	API GL4 ISO 32/46 SAE 10W-30
Front axle:					
– axle housing :					
JX60, JX70 models	4.5	1.2	0.99		
JX80, JX90, JX95 models	7.0	1.8	1.54		
– final drives (each) :					
JX60, JX70 HP models	0.8	0.2	0.18		
JX80, JX90, JX95 models	1.25	0.3	0.28		
Rear transmission (bevel drive and brakes), gearbox, hydraulic lift and PTO					
JX60, JX70, JX80, JX90, JX95 models	46	12.15	10.12		
– with synchro-reverser:					
JX60, JX70, JX80, JX90, JX95 models	46	12.15	10.12		
Rear final drives (each) :					
JX60, JX70 HP models	3.9	1.03	0.86		
JX80, JX90, JX95 models	5.3	1.40	1.17		
Front wheel hubs	–	–	–	Grease AKCELA MULTI-PURPOSE GREASE (251H EP)	NLGI 2
Grease fittings	–	–	–		

SECTION 10 - ENGINE

Chapter 1 - Engine

CONTENTS

Section	Description	Page
10 000	General specification	2
	Injection pump calibration data	5
	General specifications	16
	Tightening torques	24
	Tools	25
	Cross-sectional views	28
	Lubrication and cooling system diagrams	32
	Fault diagnosis	35
10 001 10	Engine <i>Removal-Installation</i>	39
10 001 54	Engine <i>Bench overhaul</i>	53
	Checks, measurements and repairs	78
10 406 10	Radiator <i>Removal-Installation</i>	102
10 102 70	Crankshaft front oil seal <i>removal installation</i>	106
10 402 10	Coolant pump <i>removal installation</i>	112
10 402 30	Cooling system thermostat	115
10 206 14	Bosch injection pump <i>removal installation</i>	118
	Bosch injection pump <i>timing</i>	121
	Bosch injection pump <i>air bleeding</i>	123
10 218 30	Injectors <i>removal installation</i>	124
10 106 12	Valve clearance adjustment	126
10 402 28	Coolant pump overhaul	129
10 001 30	Compression test	130

GENERAL SPECIFICATIONS	3 cylinders	4 cylinders
Engine type:		
- mod. JX60 normally aspirated - type 8035.05D.939 (BOSCH pump)	see data pages 6-7	-
- mod. JX70 turbocharged - type 8035.25C.939 (BOSCH pump)	see data pages 8-9	-
- mod. JX80 normally aspirated - type 8045.05R.939 (BOSCH pump)	-	see data pages 10-11
- mod. JX90 turbocharged - type 8045.25.939 (BOSCH pump)	-	see data pages 12-13
- mod. JX95 turbocharged - type 8045.25L.939 (BOSCH pump)	-	see data pages 14-15
Cycle	Diesel, 4-stroke	
Fuel injection	Direct	
Number of cylinders in line	3	4
Cylinder liners		dry force-fitted in cylinder block
Piston diameter		
- mod. JX60	104 mm (4.0945 in.)	-
- mod. JX70	104 mm (4.0945 in.)	-
- mod. JX80	-	104 mm (4.0945 in.)
- mod. JX90	-	104 mm (4.0945 in.)
- mod. JX95	-	104 mm (4.0945 in.)
Piston stroke	115 mm (4.5276 in.)	
Total displacement:		
- mod. JX60-JX70	2931 cm ³ (178.8496 in. ³)	-
- mod. JX80-JX90-JX95	-	3908 cm ³ (238.4662 in. ³)
Compression ratio	17 to 1 normally aspirated 16.5 to 1 turbocharged	
Maximum power 2000/25 EC at 2500 rpm:		
- mod. JX60	43.4 kW (59 hp)	-
- mod. JX70	50.7 kW (69 hp)	-
- mod. JX80	-	58.8 kW (80 hp)
- mod. JX90	-	65.5 kW (89 hp)
- mod. JX95	-	69.1 kW (94 hp)
Maximum power ECE R 24 at 2500 rpm:		
- mod. JX60	41.2 kW (56 hp)	-
- mod. JX70	47.8 kW (65 hp)	-
- mod. JX80	-	55.9 kW (76 hp)
- mod. JX90	-	63.3 kW (86 hp)
- mod. JX95	-	66.9 kW (91 hp)
Fast idling speed	2500 rpm.	
Maximum torque (daNm) at 1500 rpm: JX60 model	20.7 (152.6753 ft lb)	-
Maximum torque (daNm) at 1500 rpm: JX70 model	25.0 (184.3905 ft lb)	-
Maximum torque (daNm) at 1500 rpm: JX80 model	-	27.9 (205.9778 ft lb)
Maximum torque (daNm) at 1500 rpm: JX90 model	-	32.0 (236.0194 ft lb)
Maximum torque (daNm) at 1500 rpm: JX95 model	-	33.7 (248.5584 ft lb)
Number of main bearings	4	5
Sump	Structural, cast iron	

(continued)

GENERAL SPECIFICATIONS	3 cylinders	4 cylinders
Lubrication	forced, with gear pump	
Pump drive	camshaft	
Engine speed/oil pump speed ratio	2:1	
Oil cleaning	mesh filter on oil intake and cartridge filter on delivery line	
Normal oil pressure, with engine hot and at fast idling speed .	2.9 to 3.9 bar (42.06 to 56.56 psi)	
Pressure relief valve	built into pump housing	
Valve opening pressure	3.5 bar (50.76 psi)	
For further lubrication data	See page 23	
Cooling system	coolant circulation	
Radiator on JX60, JX70, JX80 and JX90 models	three-row vertical pipes with copper fins	
Radiator on JX95 models	four-row vertical pipes with copper fins	
Fan, attached to coolant pump pulley	four-blade steel exhauster fan	
	6-blade steel exhauster fan (JX95)	
Coolant pump	centrifugal vane-type	
Engine speed/coolant pump speed ratio	1:1,403	
Temperature control	Thermostat	
Coolant temperature gauge	coloured scale divided into three sections	
Temperature ranges corresponding to each section:		
- initial white section	from 30° to 65° C (86° to 149° F)	
- middle green section	from 65° to 105° C (149° to 221° F)	
- final red section	from 105° to 115° C (221° to 300.2° F)	
For further cooling system data	See page 23	
Rev counter	incorporated in control panel	
Rev counter drive	from gear on camshaft	
Hour counter calibrated for engine speed of	1800 rpm.	

(Continued)

(continued)

GENERAL SPECIFICATIONS	3 cylinders	4 cylinders
Timing Intake: - start: before T.D.C - end: after B.D.C Exhaust: - start: before B.D.C - end: after T.D.C Valve clearance for timing check Valve clearance for normal running (engine cold): - intake - exhaust For further timing data	overhead valves operated by a camshaft located in the engine block through tappets, pushrods and rockers. Camshaft is driven by the crankshaft through helical gears. 12° 31° 50° 16° 0.45 mm (0.0177 in.) 0.30 ± 0.05 mm (0.0118 ± 0.0020 in.) 0.30 ± 0.05 mm (0.0118 ± 0.0020 in.) See page 20	
Fuel System Air cleaning Fuel pump Fuel filter Minimum fuel flow rate with pump shaft rotating at 1600 rev/min. Operated by eccentric cam BOSCH Injection pump All-speed governor, incorporated in pump: BOSCH Automatic advance regulator, incorporated in pump: BOSCH For further fuel system data: For fixed advance (pump setting for start of delivery before TDC) - Pressure setting - Injection order, and other information regarding the BOSCH pump	dual cartridge dry air filter, with clogged filter indicator with centrifugal pre-filter and automatic dust ejector. with double diaphragm mesh filter in fuel supply pump, and replaceable cartridge on delivery line to injection pump. 100 litres/hour on camshaft rotary distributor type centrifugal counterweights hydraulic see pages 5 to 15 refer to the data for the relevant engine type in the tables from page 6 to page 14.	

DATA

Turbocharger (Model JX95):						
- GARRETT type		T25				
Fuel injection pump		distributor type with incorporated speed governor and automatic advance regulator				
BOSCH pump:						
- JX60 model ..		VE 3/12 F 1250 L 976 - 504054473				
- JX70 model		VE 3/12 F 1250 L 977 - 504054474				
- JX80 model		VE 4/12 F 1250 L 985 - 504041416				
- JX90 model		VE 4/12 F 1250 L 982 - 504042214				
- JX95 model		VE 4/12 F 1250 L 952 - 504042718				
Direction of rotation		anticlockwise				
Injection order		1-2-3 (JX60 and JX70) 1-3-4-2 (JX80, JX90 and JX95)				
Fuel injectors:						
BOSCH						
- Nozzle holder type						
- Nozzle type						
Number of nozzle holes		5		6		
Diameter of nozzle orifices						
Pressure setting		248-272 bar (3596.9176-3945.0064 psi)		248-272 bar (3596.9176-3945.0064 psi)		
		JX70	JX95	JX60	JX80	JX90
Fuel delivery lines - BOSCH pump						
- Type						
- Dimensions mm		-	-	-	-	-

JX60 MODEL - CALIBRATION DATA FOR BOSCH INJECTION PUMP TYPE VE 3/12 F 1250 L 976 - 504054473

ASSEMBLY DATA

Pump timing on engine: delivery start $4^{\circ} \pm 0.5^{\circ}$ before TDC of cylinder 1 compression stroke.

Plunger pre-lift for timing on engine: 1 mm from BDC (with tools **380000228 - 380001601**).

Cylinder no. 1 delivery line union on pump: marked with letter A.

ASSEMBLY DIMENSIONS

SYMBOL	K	KF	MS1	ya	yb
mm	3.6 to 3.8	3	0.85 to 1.15	36.9 to 40.9	41.5 to 46.5

Test bench conforming to ISO 4008/1.../2

Injectors conforming to ISO 7440-A61 - (1688901027 with pad $\varnothing 0.5$ mm)

Injector setting pressure: 250 bar (3625.925 psi).

Fuel supply pressure: 0.35 ± 0.05 bar (kg/cm^2). (5.0763 ± 0.7252 psi).

Delivery pipes (conforming to ISO 4093.2):

6 x 2 x 450 mm ($0.2362 \times 0.787 \times 17.7165$ in.).

Graduate drain time: 30 seconds

Test liquid: ISO 4113 at a temperature of $55^{\circ} \pm 1^{\circ}\text{C}$ ($131^{\circ} \pm 33.8^{\circ}\text{F}$).

CALIBRATION TEST CONDITIONS

1. START OF DELIVERY

Plunger pre-lift from BDC: mm -	Pump rotation (viewed from drive side): anticlockwise	Injection order: 1-2-3
---------------------------------	---	------------------------

2. ADVANCE REGULATOR STROKE

rpm: 1150	Advance stroke: mm 1.6 to 2.0
-----------	-------------------------------

3. FUEL SUPPLY PUMP PRESSURE

rpm: 1150	Internal pressure: bar 8.4 to 8.8
-----------	-----------------------------------

4. FULL LOAD DELIVERY

rpm: 800	Delivery per 1000 shots: cm^3 77.3 to 77.7	Spread: cm^3 -
----------	---	-------------------------

5. SPREAD GOVERNOR AT IDLE SPEED

rpm: 325	Delivery per 1000 shots: cm^3 9.5 to 10.5	Spread: $\text{cm}^3 \leq 5.0$
----------	--	--------------------------------

6. SPREAD GOVERNOR AT MAXIMUM SPEED

rpm: 1300	Delivery per 1000 shots: cm^3 49.5 to 50.5	Spread: -
-----------	---	-----------

7. DELIVERY AT STARTING SPEED

rpm: 100	Delivery per 1000 shots: cm^3 70 to 110
----------	--

8. INJECTION ADVANCE PROGRESSION

Rev/min	1250	1150	1050
Advance stroke mm	1.9 to 2.9	1.6 to 2.0	0.8 to 1.6

9. TRANSFER PRESSURE PROGRESSION

Rev/min	500	1150	-
Internal pressure bar	4.8 to 5.8	8.4 to 8.8	-

10. BACKFLOW

Rev/min	500	1250
Backflow $\text{cm}^3/10$ s	44.5 to 77.7	58.3 to 97.1

(continued)

Note: The values shown above in brackets must be used for checking purposes only.

(continued)

11. DELIVERY PROGRESSION

Rev/min	Delivery per 1000 shots: cm ³
1390	0 to 3
1300	49.5 to 50.5
1250	63.5 to 68.5
800	77.3 to 77.7
450	68,0

12. ZERO DELIVERY (STOP)

Rev/min	Voltage (volts)	Delivery per 1000 shots: cm ³
325	0	0 to 3

13. DELIVERY CHECK AT IDLE SPEED

Rev/min	250	325	390
Delivery per 1000 shots: cm ³	35	9.5 to 10.5	0 to 3.0

14. AUTOMATIC START SUPPLEMENT

Rev/min	Delivery per 1000 shots: cm ³
100	70 to 110
250	67 to 77

Note: The values shown above in brackets must be used for checking purposes only.

BENCH TEST PERFORMANCE DATA**Test Conditions**

TDC fixed advance with cylinder No. 1 in compression stroke:
(see previous page).

Engine without fan, air filter and exhaust silencer.

Atmospheric pressure: 990 mbar

Relative humidity 70% \pm 5.

Ambient temperature 25 °C.

Specific gravity of diesel fuel
830 \pm 10 g/litre.

Throttle lever position	Braking load applied	Engine rpm	Power output with engine run-in for a total of:		Fuel consumption kg/h
			2 hours kW (HP)	50 hours kW	
Maximum	For maximum torque	2500	-	39,5 - 42,0	9,1 - 9,7
Maximum	For maximum torque	1500	-	31,5 - 33,5	6,8 - 7,2
Maximum	None (no-load)	2770 \pm 25	-	-	-
Minimum	None (no-load)	650 \pm 25	-	-	-

JX70 MODEL - CALIBRATION DATA FOR BOSCH INJECTION PUMP TYPE VE 3/12 F 1250 L 977 - 504054474

ASSEMBLY DATA

Pump timing on engine: delivery start $0^\circ \pm 0.5^\circ$ before TDC of cylinder 1 compression stroke.
Plunger pre-lift for pump timing on engine: 1 mm from BDC with tools **380000228 - 380001601**).
Delivery line union on pump for cylinder no. 1: marked with letter A.

ASSEMBLY DIMENSIONS

SYMBOL	K	KF	MS	ya	yb
mm	3.6 to 3.8	3	0.5 to 0.9	35.5 to 39.5	39.8 to 44.8

Test bench conforming to ISO 4008/1.../2

Injectors conforming to ISO 7440-A61 - (1688901027 with pad \varnothing 0.5 mm (0.0197 in.))

Injector setting pressure: 250 bar (3625.925 psi).

Fuel supply pressure: 0.35 ± 0.05 bar (5.0763 \pm 0.7252 psi).

Delivery pipes (conforming to ISO 4093.2):

6 x 2 x 450 mm (0.2362 x 0.787 x 17.7165 in.)

Graduate drain time: 30 seconds

Test liquid: ISO 4113 at a temperature of $55^\circ \pm 1^\circ\text{C}$ (131° \pm 33.8°F).

CALIBRATION TEST CONDITIONS

1. START OF DELIVERY

Plunger pre-lift from B.D.C.: mm -	Pump rotation (viewed from drive side): anticlockwise	Injection order: 1-2-3
------------------------------------	---	------------------------

2. ADVANCE REGULATOR STROKE

1100 rpm	LDA pressure: kPa 100	Advance stroke: mm 1.8 to 2.2
----------	-----------------------	-------------------------------

3. FUEL SUPPLY PUMP PRESSURE

rpm: 800	LDA pressure: kPa 100	Internal pressure: bar 7.7 to 8.3
----------	-----------------------	-----------------------------------

4. FULL-LOAD DELIVERY WITH BOOSTER PRESSURE

rpm: 900	LDA pressure: kPa 100	Delivery per 1000 shots: cm ³ 76.5 to 76.9	Spread: cm ³ \leq 3.5
----------	-----------------------	---	------------------------------------

5. FULL-LOAD DELIVERY WITHOUT BOOSTER PRESSURE

rpm: 600	LDA pressure: kPa 0	Delivery per 1000 shots: cm ³ 73.8 to 74.2	Spread: cm ³ -
----------	---------------------	---	---------------------------

6. SPREAD GOVERNOR AT IDLE SPEED

rpm: 325	LDA pressure: kPa 0	Delivery per 1000 shots: cm ³ 12 to 13	Spread: cm ³ \leq 4.5
----------	---------------------	---	------------------------------------

7. SPREAD GOVERNOR AT MAXIMUM SPEED

rpm: 1350	LDA pressure: kPa 100	Delivery per 1000 shots: cm ³ 32.0 to 33.0	Spread: cm ³ -
-----------	-----------------------	---	---------------------------

8. DELIVERY AT STARTING SPEED

rpm: 100	Delivery per 1000 shots: cm ³ 100 to 140
----------	---

9. INJECTION ADVANCE PROGRESSION

LDA pressure	kPa	100		
Rev/min		1250	1100	900
Advance stroke	mm	2.5 to 3.5	1.8 to 2.2	0.3 to 1.3

10. TRANSFER PRESSURE PROGRESSION

LDA pressure	kPa	100		
Rev/min		1250	1100	500
Internal pressure supply:	bar	8,7	7.7 to 8.3	4.5 to 5.5

11. BACKFLOW

Rev/min		1250	500
LDA pressure	kPa	100	100
Backflow for	cm ³ /10 s	66.7 to 105.5	50.0 to 77.6

(continued)

Note: The values shown above in brackets must be used for checking purposes only.

(continued)

12. DELIVERY PROGRESSION

Rev/min	LDA pressure kPa	Delivery per 1000 shots: cm ³
1390	100	0 to 3.0
1350	100	32 to 33
1250	100	66 to 71
900	100	76.5 to 76.9
600	27,5	76.2 to 77.2
400	100	91
600	0	73.8 to 74.2

13. ZERO DELIVERY (STOP)

rpm: 325	Voltage (volts): 0	Delivery per 1000 shots: cm ³ : 0 to 3
----------	--------------------	---

14. DELIVERY CHECK AT IDLE SPEED

Rev/min	325	380	-
Delivery per 1000 shots: cm ³	12 to 13	0 to 3.0	-

15. AUTOMATIC START SUPPLEMENT

Rev/min	Delivery per 1000 shots: cm ³
100	100 to 140
300	77 to 87

Note: The values shown above in brackets must be used for checking purposes only.

BENCH TEST PERFORMANCE DATA

BENCH TEST PERFORMANCE DATA					
Test Conditions					
TDC fixed advance with cylinder No. 1 in compression stroke: (see previous page)			Relative humidity 70% ± 5.		
Engine without fan, air filter and exhaust silencer.			Ambient temperature 25 °C.		
Atmospheric pressure: 990 mbar			Specific gravity of diesel fuel 830 ± 10 g/litre.		
Throttle lever position	Braking load applied	Engine rpm	Power output with engine run-in for a total of:		Fuel consumption kg/h
			2 hours kW (HP)	50 hours kW	
Maximum	For maximum torque	2500	-	47.5 - 50.5	11.1 - 11.8
Maximum	For maximum torque	1500	-	37.0 - 39.5	8.2 - 8.7
Maximum	None (no-load)	2770 ± 25	-	-	-
Minimum	None (no-load)	650 ± 25	-	-	-

JX80 MODEL - CALIBRATION DATA FOR BOSCH INJECTION PUMP TYPE VE 4/12 F 1250 L 985 - 504041416

ASSEMBLY DATA

Pump timing on engine: delivery start $4^{\circ} \pm 0.5^{\circ}$ before T.D.C. of cylinder 1 on compression stroke.

Plunger pre-lift for timing on engine: 1 mm from BDC (with tools **380000228** - **380001601**).

Delivery union of the pump corresponding to cylinder no. 1: marked with letter A.

ASSEMBLY DIMENSIONS

SYMBOL	K	A	MS	ya	yb
mm	3.64 to 3.76	1.4 to 1.5	0.5 to 0.9	38,9	43,0

CALIBRATION TEST CONDITIONS

Test bench conforming to ISO 4008/1 .../2

Injectors conforming to ISO 7440-A61 - (1.688.901.027 with calibrated pad \varnothing 0.5 mm (0.0197 in.)).

Injector pressure setting 250 to 253 bar (3625.925 to 3699.4361 psi)

Fuel supply pressure:

0.35 \pm 0.05 bar (5.0763 \pm 0.7252 psi).

Delivery pipes (conforming to ISO 4093.2):

6 x 2 x 450 mm (0.2362 x 0.787 x 17.7165 in.).

Graduate drain time : 30".

Test liquid: ISO 4113 at a temperature of $55^{\circ} \pm 1^{\circ}\text{C}$ ($131^{\circ} \pm 33.8^{\circ}\text{F}$).

1. START OF DELIVERY

Plunger pre-lift from BDC: mm -	Pump rotation (viewed from drive side): anticlockwise	Injection order: 1-3-4-2
---------------------------------	---	--------------------------

2. ADVANCE REGULATOR STROKE

rpm: 1250	Advance stroke: mm 2.0 to 3.2
-----------	-------------------------------

3. FUEL SUPPLY PUMP PRESSURE

rpm: 1000	Internal pressure: bar 6.7 to 8.1
-----------	-----------------------------------

4. FULL LOAD DELIVERY

rpm: 1000	Delivery per 1000 shots: cm^3 65.2 to 70.3	Spread: $\text{cm}^3 \leq 3.5$
-----------	---	--------------------------------

5. SPREAD GOVERNOR AT IDLE SPEED

rpm: 325	Delivery per 1000 shots: cm^3 4.0 to 18.0	Spread: $\text{cm}^3 \leq 4.5$
----------	--	--------------------------------

6. SPREAD GOVERNOR AT MAXIMUM SPEED

rpm: 1250	Delivery per 1000 shots: cm^3 60.0 to 66.0	Spread:-
-----------	---	----------

7. DELIVERY AT STARTING SPEED

rpm: 100	Delivery per 1000 shots: cm^3 75 to 115
----------	--

8. INJECTION ADVANCE PROGRESSION

Rev/min	1000	1250
Advance stroke mm	0.5 to 1.7	2.0 to 3.2

9. TRANSFER PRESSURE PROGRESSION

Rev/min	1000	400	
Internal pressure bar	6.7 to 8.1	4.1 to 5.5	

10. BACKFLOW

Rev/min	400	1250
Backflow l/h	16 to 30	21 to 39

(continued)

Note: The values shown above in brackets must be used for checking purposes only.

(continued)

11. DELIVERY PROGRESSION

Rev/min	Delivery per 1000 shots: cm ³
1400	0 to 3
1250	60.0 to 66.0
1000	65.2 to 70.3
450	63.5 to 70.3

12. ZERO DELIVERY (STOP)

Rev/min	Voltage (volts)	Delivery per 1000 shots: cm ³
325	0	0 to 3

13. DELIVERY CHECK AT IDLE SPEED

Rev/min	325	380	-
Delivery per 1000 shots: cm ³	4.0 to 18.0	0 to 3.0	-

14. AUTOMATIC START SUPPLEMENT

Rev/min	Delivery per 1000 shots: cm ³
100	75 to 115
250	60.5 to 74.5

Note: The values shown above in brackets must be used for checking purposes only.

BENCH TEST PERFORMANCE DATA

Test Conditions					
TDC fixed advance with cylinder No. 1 in compression stroke: (see previous page)			Relative humidity 70% ± 5.		
Engine without fan, air filter and exhaust silencer.			Ambient temperature 25 °C.		
Atmospheric pressure: 990 mbar			Specific gravity of diesel fuel 830 ± 10 g/litre.		
Throttle lever position	Braking load applied	Engine rpm	Power output with engine run-in for a total of:		Fuel consumption kg/h
			2 hours kW (HP)	50 hours kW (HP)	
Maximum	For maximum torque	2500	-	54.0 - 57.5	12.3 - 13.1
Maximum	For maximum torque	1500	-	39.5 - 42	8.5 - 9.0
Maximum	None (no-load)	2725 ± 25	-	-	-
Minimum	None (no-load)	650 ± 25	-	-	-

JX90 MODEL - CALIBRATION DATA FOR BOSCH INJECTION PUMP TYPE VE 4/12 F 1250 L 982 - 504042214

ASSEMBLY DATA

Pump timing on engine: delivery start $1^{\circ} \pm 0.5^{\circ}$ before T.D.C. of cylinder 1 on compression stroke.

Plunger pre-lift for timing on engine: 1 mm from BDC (with tools **380000228** - **380001601**).

Delivery union of the pump corresponding to cylinder no. 1: marked with letter A.

ASSEMBLY DIMENSIONS

SYMBOL	K	A	MS	ya	yb
mm	3.64 to 3.76	1.4 to 1.5	0.7 to 0.9	37.9 to 39.9	39.3 to 44.7

CALIBRATION TEST CONDITIONS

Test bench conforming to ISO 4008/1 .../2

Injectors conforming to ISO 7440-A61 - (1.688.901.027 with calibrated pad \varnothing 0.5 mm (0.0197 in.)).

Injector pressure setting 250 to 253 bar (3625.925 to 3741.9546 psi).

Fuel supply pressure:

0.35 \pm 0.05 bar (5.0763 \pm 0.7252 psi).

Delivery pipes (conforming to ISO 4093.2):

6 x 2 x 450 mm (0.2362 x 0.787 x 17.7165 in.).

Graduate drain time : 30".

Test liquid: ISO 4113 at a temperature of $55^{\circ} \pm 1^{\circ}\text{C}$ ($131^{\circ} \pm 33.8^{\circ}\text{F}$).

1. START OF DELIVERY

Plunger pre-lift from BDC: mm -	Pump rotation (viewed from drive side): anticlockwise	Injection order: 1-3-4-2
---------------------------------	---	--------------------------

2. ADVANCE REGULATOR STROKE

rpm: 1250	Advance stroke: mm 2.4 to 3.6
-----------	-------------------------------

3. FUEL SUPPLY PUMP PRESSURE

rpm: 1250	Internal pressure: bar 8.7 to 10.1
-----------	------------------------------------

4. FULL LOAD DELIVERY

rpm: 900	Delivery per 1000 shots: cm^3 77.5 to 82.5	Spread: $\text{cm}^3 \leq 3.5$
----------	---	--------------------------------

5. SPREAD GOVERNOR AT IDLE SPEED

rpm: 375	Delivery per 1000 shots: cm^3 5.5 to 19.5	Spread: $\text{cm}^3 \leq 4.5$
----------	--	--------------------------------

6. SPREAD GOVERNOR AT MAXIMUM SPEED

rpm: 1250	Delivery per 1000 shots: cm^3 69.5 to 75.5	Spread:-
-----------	---	----------

7. DELIVERY AT STARTING SPEED

rpm: 100	Delivery per 1000 shots: cm^3 80 to 120
----------	--

8. INJECTION ADVANCE PROGRESSION

Rev/min	1000	1250
Advance stroke mm	0.2 to 1.0	2.4 to 3.6

9. TRANSFER PRESSURE PROGRESSION

Rev/min	1250	400	
Internal pressure bar	8.7 to 10.1	3.6 to 5.0	

10. BACKFLOW

Rev/min	400	1250
Backflow l/h	15 to 29	22 to 40

(continued)

Note: The values shown above in brackets must be used for checking purposes only.

(continued)

11. DELIVERY PROGRESSION

Rev/min	Delivery per 1000 shots: cm ³
1400	0 to 3
1250	69.5 to 75.5
900	77.5 to 82.5
400	76.5 to 83.5

12. ZERO DELIVERY (STOP)

Rev/min	Voltage (volts)	Delivery per 1000 shots: cm ³
375	0	0 to 3

13. DELIVERY CHECK AT IDLE SPEED

Rev/min	375	425	-
Delivery per 1000 shots: cm ³	5.5 to 19.5	0 to 3.0	-

14. AUTOMATIC START SUPPLEMENT

Rev/min	Delivery per 1000 shots: cm ³
100	80 to 120
275	68 to 92

Note: The values shown above in brackets must be used for checking purposes only.

BENCH TEST PERFORMANCE DATA

Test Conditions					
TDC fixed advance with cylinder No. 1 in compression stroke: (see previous page)			Relative humidity 70% ± 5.		
Engine without fan, air filter and exhaust silencer.			Ambient temperature 25 °C.		
Atmospheric pressure: 990 mbar			Specific gravity of diesel fuel 830 ± 10 g/litre.		
Throttle lever position	Braking load applied	Engine rpm	Power output with engine run-in for a total of:		Fuel consumption kg/h
			2 hours kW (HP)	50 hours kW (HP)	
Maximum	For maximum torque	2500	-	60.0 - 64.0	13.7 - 14.6
Maximum	For maximum torque	1500	-	46.0 - 48.8	9.8 - 10.4
Maximum	None (no-load)	2725 ± 25	-	-	-
Minimum	None (no-load)	650 ± 25	-	-	-

JX95 MODEL - CALIBRATION DATA FOR BOSCH INJECTION PUMP TYPE VE 4/12 F 1250 L 952 - 504042718

ASSEMBLY DATA

Pump timing on engine: delivery start $0^\circ \pm 0.5^\circ$ before T.D.C. of cylinder 1 on compression stroke.

Plunger pre-lift for timing on engine: 1 mm from BDC (with tools **380000228** - **380001601**).

Delivery union of the pump corresponding to cylinder no. 1: marked with letter A.

ASSEMBLY DIMENSIONS

SYMBOL	K	A	MS	ya	yb
mm	3.64 to 3.76	0.98 to 1.02	0.6 to 1.0	36.5 to 38.5	41.3 to 46.7

CALIBRATION TEST CONDITIONS

Test bench conforming to ISO 4008/1 .../2

Injectors conforming to ISO 7440-A61 - (1.688.901.027 with calibrated pad \varnothing 0.5 mm) (0.0197 in.).

Injector pressure setting 250 to 253 bar (3625.925 to 3741.9546 psi).

Fuel supply pressure:

0.35 \pm 0.05 bar (5.0763 \pm 0.7252 psi).

Delivery pipes (conforming to ISO 4093.2):

6 x 2 x 450 mm (0.2362 x 0.787 x 17.7165 in.).

Graduate drain time : 30".

Test liquid: ISO 4113 at a temperature of $55^\circ \pm 1^\circ\text{C}$ ($131^\circ \pm 33.8^\circ\text{F}$).

1. START OF DELIVERY

Plunger pre-lift from B.D.C.: mm -	Pump rotation (viewed from drive side): anticlockwise	Injection order: 1-3-4-2
------------------------------------	---	--------------------------

2. ADVANCE REGULATOR STROKE

rpm: 1250	LDA pressure: kPa 100	Advance stroke: mm 2.2 to 3.4
-----------	-----------------------	-------------------------------

3. FUEL SUPPLY PUMP PRESSURE

1100 rpm	LDA pressure: kPa 100	Internal pressure: bar 6.5 to 7.9
----------	-----------------------	-----------------------------------

4. FULL-LOAD DELIVERY WITH BOOSTER PRESSURE

rpm: 900	LDA pressure: kPa 100	Delivery per 1000 shots: cm ³ 75.5 to 80.5	Spread: cm ³ \leq 3.5
----------	-----------------------	---	------------------------------------

5. FULL-LOAD DELIVERY WITHOUT BOOSTER PRESSURE

rpm: 500	LDA pressure: kPa 0	Delivery per 1000 shots: cm ³ 66.0 to 72.0	Spread: cm ³ -
----------	---------------------	---	---------------------------

6. SPREAD GOVERNOR AT IDLE SPEED

rpm: 350	LDA pressure: kPa 0	Delivery per 1000 shots: cm ³ 8 to 23	Spread: cm ³ \leq 5.5
----------	---------------------	--	------------------------------------

7. SPREAD GOVERNOR AT MAXIMUM SPEED

rpm: 1250	LDA pressure: kPa 100	Delivery per 1000 shots: cm ³ 66.0 to 72.0	Spread: cm ³ -
-----------	-----------------------	---	---------------------------

8. DELIVERY AT STARTING SPEED

rpm: 100	Delivery per 1000 shots: cm ³ 75 to 115
----------	--

9. INJECTION ADVANCE PROGRESSION

LDA pressure	kPa	100
Rev/min	1100	1250
Advance stroke	mm	1.4 to 2.6 2.2 to 3.4

10. TRANSFER PRESSURE PROGRESSION

LDA pressure	kPa	100		
Rev/min		500	1100	-
Internal pressure supply:	bar	4.1 to 5.5	6.5 to 7.9	-

11. BACKFLOW

Rev/min		500	1250
LDA pressure	kPa	100	100
Backflow for 10 sec.	l/h	18 to 32	21 to 39

(continued)

Note: The values shown above in brackets must be used for checking purposes only.

Please click here and go
back to our website.

BUY NOW

Then Instant Download the
Complete Manual.

Thank you very much!