



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

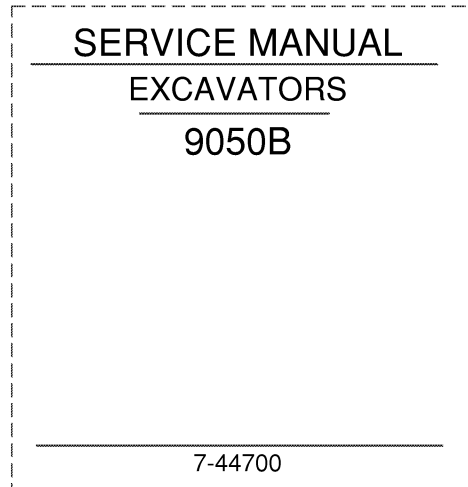


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

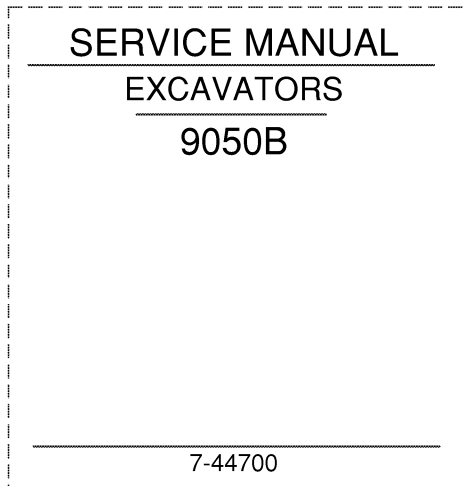

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

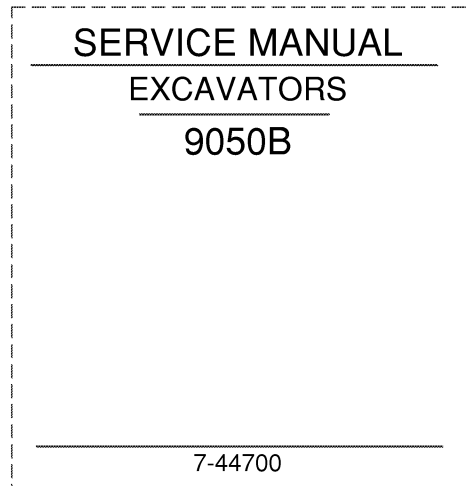

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

9050 Excavator Service Manual

Table of Contents


Description	Section No.	Form No.
General		
Tab 1		
Section Index - General		7-45290
Standard Torque Specifications for 9000 Series Excavators	1001	7-44790
Fluids and Lubricants	1002	7-45220
Engines		
Tab 2		
Section Index - Engines		7-45300
Engine Specification Details	2000	7-46340
Engine Removal and Installation	2001	7-45310
Radiator Removal and Installation	2002	7-45320
Mitsubishi Motors Shop Manual		97841-02003
Fuel System		
Tab 3		
Section Index - Fuel System		7-45330
See Mitsubishi Motors Shop Manual in Tab 2		
Electrical		
Tab 4		
Section Index - Electrical		7-45340
Electrical Specifications and Troubleshooting	4001	7-45230
Electrical Schematic Foldout	In Rear Pocket	7-45260
Batteries	4002	7-44950
Systems Display Panel	4005	7-44980
Starter and Starter Solenoid	See Mitsubishi Motors Shop Manual in Tab 2	
Alternator	See Mitsubishi Motors Shop Manual in Tab 2	
Tracks		
Tab 5		
Section Index - Tracks		7-45350
Troubleshooting the Track System	5001	7-44830
Tracks, Rollers, and Idlers	5002	7-44880
Power Train		
Tab 6		
Section Index - Power Train		7-45370
Troubleshooting - See Section 8001		
Drive Motor and Final Drive Transmission	6000	7-45360
Hydraulics		
Tab 8		
Section Index - Hydraulics		7-45380
Cleaning the Hydraulic System	8000	7-45050
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8001	7-45240
Hydraulic Schematic Foldout	In Rear Pocket	7-45260
Main Hydraulic Pump	8002	7-45480

Reprinted

9050 Excavator Service Manual


Table of Contents

Description	Section No.	Form No.
Pilot Control Circuit Pump	8003	7-46350
Hydraulic Swivel	8004	7-45390
Main Control Valve	8005	7-45400
Remote Control Valves	8006	7-45410
Solenoid Valves	8007	7-45420
Swing Motor and Swing Reduction Gear Box	8008	7-45430
Cylinders	8009	7-45440
Cushion Control Valve	8010	7-45450
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		7-45460
Pedals and Levers	9001	7-45250
Turntable Bearing	9003	7-46220
Boom and Arm	9004	7-45470
Seat and Seat Belts	9006	7-45170
Electrical Schematic Foldout	In Rear Pocket	7-45260
Hydraulic Schematic Foldout	In Rear Pocket	7-45260

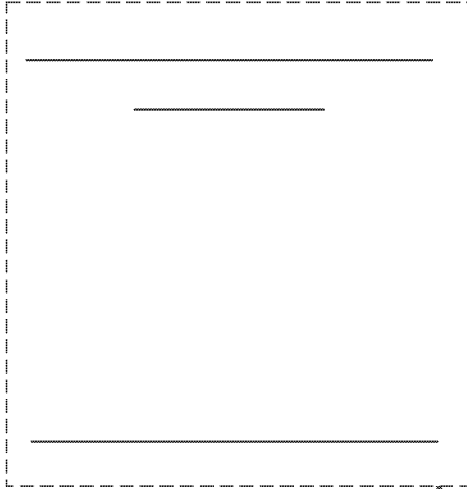


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

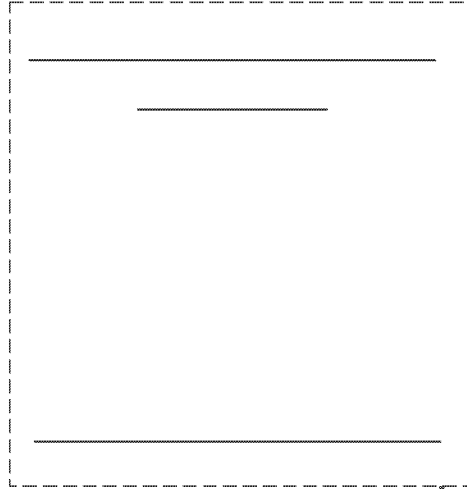


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

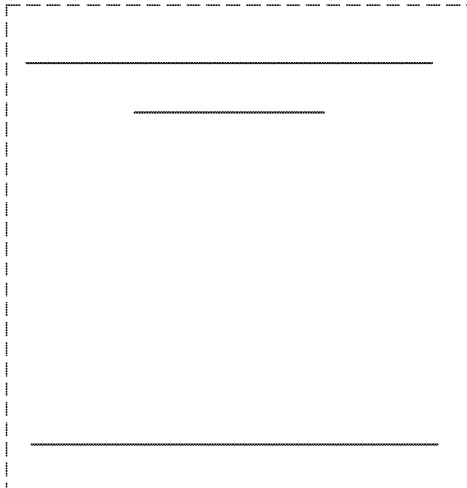

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

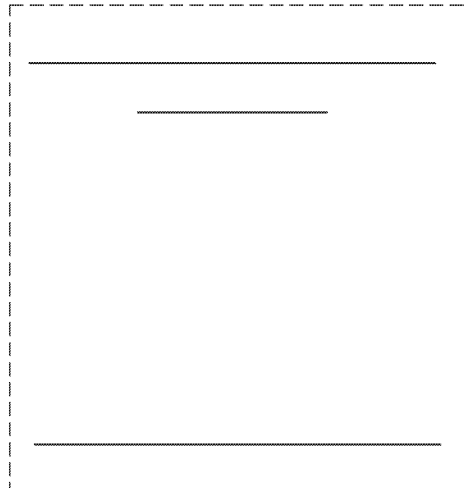

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

Section 1001

STANDARD TORQUE SPECIFICATIONS FOR 9000 SERIES EXCAVATORS



Bur 7-44790

Copyright © 1992 CASE CORPORATION
Printed in U.S.A.
Issued November 1992

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE2


TORQUE SPECIFICATIONS - METRIC HARDWARE3


TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS4

TORQUE SPECIFICATIONS - O-RING FACE SEAL FITTINGS5

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
1/4 in	9-11	12-15
5/16 in	17-21	23-28
3/8 in	35-42	48-57
7/16 in	54-64	73-87
1/2 in	80-96	109-130
9/16 in	110-132	149-179
5/8 in	150-180	203-244
3/4 in	270-324	366-439
7/8 in	400-480	542-651
1.0 in	580-696	787-944
1-1/8 in	800-880	1085-1193
1-1/4 in	1120-1240	1519-1681
1-3/8 in	1460-1680	1980-2278
1-1/2 in	1940-2200	2631-2983


Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
1/4 in	12-15	16-20
5/16 in	24-29	33-39
3/8 in	45-54	61-73
7/16 in	70-84	95-114
1/2 in	110-132	149-179
9/16 in	160-192	217-260
5/8 in	220-264	298-358
3/4 in	380-456	515-618
7/8 in	600-720	814-976
1.0 in	900-1080	1220-1465
1-1/8 in	1280-1440	1736-1953
1-1/4 in	1820-2000	2468-2712
1-3/8 in	2380-2720	3227-3688
1-1/2 in	3160-3560	4285-4827


NOTE: Use thick nuts with Grade 8 bolts.

TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
M6	6-7	8-9
M8	14-17	20-23
M10	29-34	39-46
M12	50-59	68-80
M16	128-149	173-202
M20	249-291	337-393
M22	342-399	464-541
M24	431-503	584-681
M27	637-743	864-1008
M30	863-1007	1170-1365
M33	1180-1377	1600-1867
M36	1977-2307	2680-3127
M42	2434-2840	3300-3850
M45	3054-3563	4140-4830
M48	3658-4268	4960-5787
M52	4757-5549	6450-7525
M56	5908-6893	8010-9345
M64	8925-10413	12100-14117

Grade 10.9 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
M6	8-10	11-13
M8	20-24	28-32
M10	41-47	55-64
M12	71-83	96-112
M16	178-208	242-282
M20	350-408	475-554
M22	481-561	652-761
M24	606-707	821-958
M27	900-1050	1220-1423
M30	1217-1420	1650-1925
M33	1667-1945	2260-2637
M36	2124-2478	2880-3360
M39	2773-3235	3760-4387
M42	3422-3992	4640-5413
M45	4293-5009	5820-6790
M48	5141-5998	6970-8132
M52	6690-7805	9070-10582
M56	8334-9723	11300-13183
M64	12612-14714	17100-19950

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
37 Degree Flare Fittings			
1/4 in 6.4 mm	7/16-20	6-12	8-16
5/16 in 7.9 mm	1/2-20	8-16	11-22
3/8 in 9.5 mm	9/16-18	10-25	14-34
1/2 in 12.7 mm	3/4-16	15-42	20-57
5/8 in 15.9 mm	7/8-14	25-58	34-79
3/4 in 19.0 mm	1-1/16-12	40-80	54-108
7/8 in 22.2 mm	1-3/16-12	60-100	81-135
1.0 in 25.4 mm	1-5/16-12	75-117	102-158
1-1/4 in 31.8 mm	1-5/8-12	125-165	169-223
1-1/2 in 38.1 mm	1-7/8-12	210-250	285-338

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
Straight Threads with O-ring			
1/4 in 6.4 mm	7/16-20	12-19	16-26
5/16 in 7.9 mm	1/2-20	16-25	22-34
3/8 in 9.5 mm	9/16-18	25-40	34-54
1/2 in 12.7 mm	3/4-16	42-67	57-91
5/8 in 15.9 mm	7/8-14	58-92	79-124
3/4 in 19.0 mm	1-1/16-12	80-128	108-174
7/8 in 22.2 mm	1-3/16-12	100-160	136-216
1.0 in 25.4 mm	1-5/16-12	117-187	159-253
1-1/4 in 31.8 mm	1-5/8-12	165-264	224-357
1-1/2 in 38.1 mm	1-7/8-12	250-400	339-542

Split Flange Mounting Bolts*		
Size	Pound- Feet	Newton metres
5/16-18	15-20	20-27
3/8-16	20-25	27-34
7/16-14	35-45	47-61
1/2-13	55-65	74-88
5/8-11	140-150	190-203

**NOTE: Use standard metric hardware torque for metric split flange mounting bolts.*

TORQUE SPECIFICATIONS - O-RING FACE SEAL FITTINGS

Nom. SAE Dash Size	Tube OD	Thread Size	Pound- Feet	Newton metres	Thread Size	Pound- Feet	Newton metres
O-ring Face Seal End					O-ring Boss End Fitting or Lock Nut		
-4	1/4 in 6.4 mm	9/16-18	10-12	14-16	7/16-20	17-20	23-27
-6	3/8 in 9.5 mm	11/16-16	18-20	24-27	9/16-18	25-30	34-41
-8	1/2 in 12.7 mm	13/16-16	32-40	43-54	3/4-16	45-50	61-68
-10	5/8 in 15.9 mm	1-14	46-56	62-76	7/8-14	60-65	81-88
-12	3/4 in 19.0 mm	1-3/16-12	65-80	90-110	1-1/16-12	85-90	115-122
-14	7/8 in 22.2 mm	1-3/16-12	65-80	90-110	1-3/16-12	95-100	129-136
-16	1.0 in 25.4 mm	1-7/16-12	92-105	125-140	1-5/16-12	115-125	156-169
-20	1-1/4 in 31.8 mm	1-11/16-12	125-140	170-190	1-5/8-12	150-160	203-217
-24	1-1/2 in 38.1 mm	2-12	150-180	200-254	1-7/8-12	190-200	258-271

Section 1002

1002

FLUIDS AND LUBRICANTS

TABLE OF CONTENTS

CAPACITIES AND LUBRICANT SPECIFICATIONS	3
HYDRAULIC OIL CHART	4
ENGINE LUBRICATION	5
Engine oil Selection	5
Oil Viscosity/Temperature Ranges	5
DIESEL FUEL	6
Fuel Storage	6

NOTE: The J I Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold

CAPACITIES AND LUBRICANT SPECIFICATIONS

Fuel Tank

Capacity 132.1 U.S. gallons (500 litres)
Type of fuel See Diesel Fuel on page 6

Engine Oil Capacity

Capacity with filter change 7.7 U.S. gallons (29 litres)
Type of Lubricant Case IH Engine Oil, see Engine Lubrication on page 5

Engine Cooling System

Capacity 10 U.S. gallons (38 litres)
Type of coolant Use a mixture of 55% ethylene glycol and 45% water.
If lowest ambient temperature will be below -34°F (1.11°C) adjust the mixture.

Hydraulic Reservoir

Tank Capacity 40.1 U.S. gallons (152 litres)
System Capacity 84.5 U.S. gallons (320 litres)
Type of fluid See Hydraulic Oil Chart on page 4

Swing Gearbox

Capacity 3.3 U.S. gallons (12.5 litres)
Type of lubricant Case IH 135H EP Gear Lube

Swing Ring Gear

Capacity 59.5 pounds (27 kg)
Type of lubricant Case No. 2 Lithium Grease

Turntable Bearing

Capacity As required
Type of lubricant Case No. 2 Lithium Grease

Final Drives

Capacity 2.2 U.S. gallons (8.5 litres)
Type of lubricant Case IH 135H EP Gear Lube

Track Roller

Capacity 7.0 ounces (210 cc)
Type of lubricant Shell Rimula Oil No. 30 or equivalent to API Class CD, SAE 30

Carrier Roller

Capacity 6.6 ounces (200 cc)
Type of lubricant Shell Rimula Oil No. 30 or equivalent to API Class CD, SAE 30

Idler Wheel

Capacity 12.2 ounces (370 cc)
Type of lubricant Shell Rimula Oil No. 30 or equivalent to API Class CD, SAE 30

Track Adjustment Cylinder

Capacity As required
Type of lubricant Case No. 2 Lithium Grease

Grease Fitting

Type of lubricant Case No. 2 Lithium Grease

Batteries

Capacity As required
Type of lubricant Use drinking or distilled water

Section 2000

ENGINE SPECIFICATION DETAILS

IMPORTANT: *This engine was made using the metric measurement system. All measurements and checks must be made with metric tools to make sure of an accurate reading when inspecting parts.*

ENGINE LUBRICATION

Engine oil Selection

Case No. 1 Engine Oil is recommended for use in your Case Engine. Case Engine Oil will lubricate your engine correctly under all operating conditions.




If Case No. 1 Multi-Viscosity or Single Grade Engine Oil is not available, use only oil meeting API engine oil service category CE.



NOTE: Do not put Performance Additives or other oil additive products in the engine crankcase. The oil change intervals given in this manual are according to tests with Case lubricants.

Oil Viscosity/Temperature Ranges

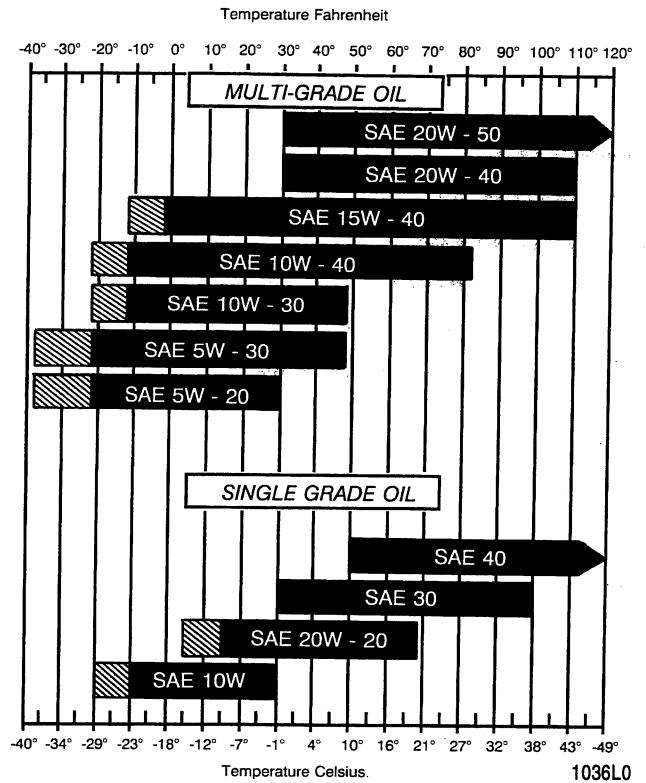

NOTE: Use of an engine oil pan heater or an engine coolant heater is required when operating temperatures are in the crosshatched area.

DIESEL FUEL

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No. 1 and No. 2 diesel fuels is temporarily permitted. See the following Note.

NOTE: See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel lowers below the cloud point (wax appearance point), wax crystals in the fuel will cause the engine to lose power or not start.

The diesel fuel in this machine must meet the specifications in the chart below or Specification D975-81 of the American Society for Testing and Materials.

Specifications for Acceptable No. 2 Diesel Fuel

API gravity, minimum	34
Flash point, minimum	140°F (60°C)
Cloud point (wax appearance point), maximum	-5°F (-20°C) See Note above
Pour point, maximum	-15°F (-26°C) See Note above
Distillation temperature, 90% point	540 to 640°F (282 to 338°C)
Viscosity, at 100°F (38°C)	
Centistokes	2.0 to 4.3
Saybolt Seconds Universal	32 to 40
Cetane number, minimum	43 (45 to 55 for winter or high altitudes)
Water and sediment, by volume, maximum	0.05 of 1%
Sulfur, by weight, maximum	0.50 of 1%
Copper strip corrosion, maximum	No. 2
Ash, by weight, maximum	0.01 of 1%

Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Fill the fuel tank at the end of the daily operating period to prevent condensation in the fuel tank.



Engine fuel is flammable and can cause a fire or an explosion. Do not fill the fuel tank or service the fuel system near an open flame, welding, burning cigars, cigarettes, etc.

SECTION INDEX - ENGINES

Section Title	Section Number
Engine Specification Details	2000
Engine Removal and Installation	2001
Radiator Removal and Installation	2002
Mitsubishi Motors Shop Manual	

Click on the image link below for the full version of the service manual

