



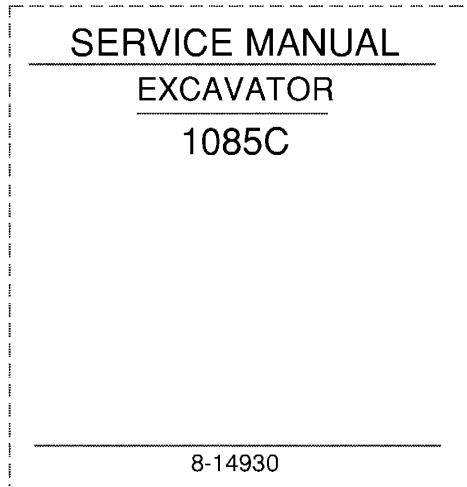


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

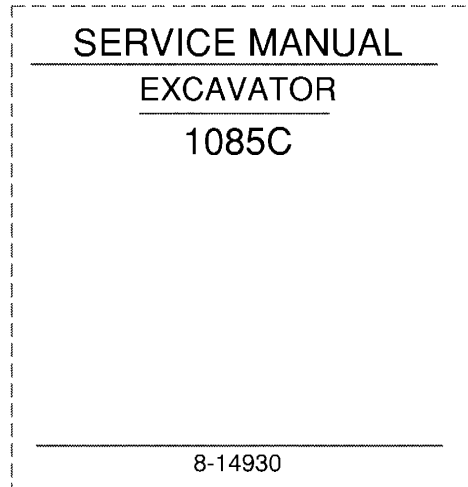


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

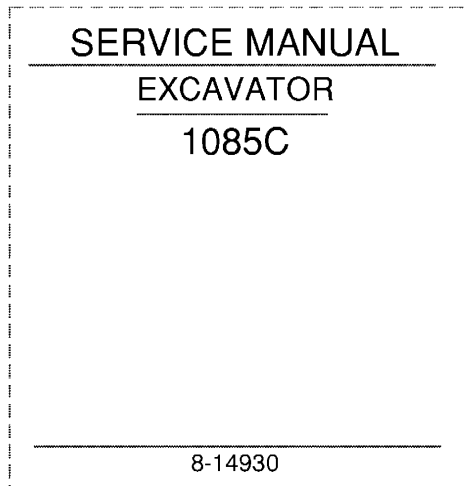

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

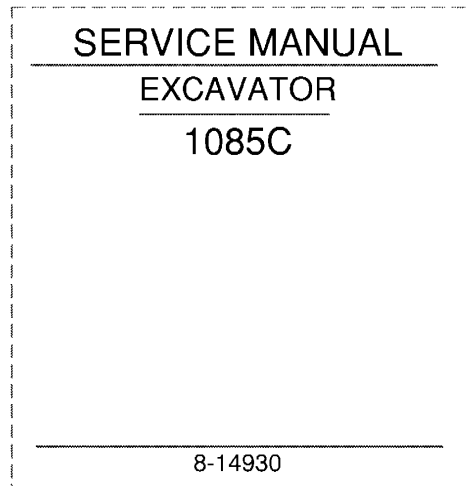

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

1085C Cruz-Air Excavator

Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Section Index - General		8-14960
Standard Torque Specifications.....	1001	8-71600
Fluids and Lubricants	1002	8-14830
Detailed Engine Specifications	1024	8-26061
2 ENGINES		
Section Index - Engines		8-14970
Engine and Radiator Removal and Installation	2001	8-14980
Stall Tests	2002	8-14840
Cylinder Head and Valve Train	2415	8-26071
Cylinder Block, Pistons, Rods, Camshaft, Main Bearings, Oil Seals, and Flywheel	2425	8-26082
Lubrication System.....	2445	8-26091
Cooling System	2455	8-26101
Turbocharger.....	2465	8-26110
Turbocharger Failure Analysis	2565	9-78235
3 FUEL SYSTEM		
Section Index - Fuel System		8-14990
Removal and Installation of Master Cylinder and Accelerator Cylinder.....	3001	8-15000
Accelerator Master Cylinder.....	3002	8-15010
Accelerator Cylinder	3003	8-15020
Fuel System and Filters	3410	8-26131
Pump Drive Gear, Timing Pin, Fuel Shutoff Solenoid, Primer Pump, and Pump Timing...	3412	8-26141
Fuel Injectors.....	3413	8-26150
4 ELECTRICAL SYSTEM		
Section Index - Electrical		8-15030
Removal and Installation of Starter and Alternator.....	4000	8-15040
Electrical Specifications, Troubleshooting, and Schematics.....	4001	8-14850
Starter and Starter Solenoid.....	4002	8-73830
45 Ampere Alternator	4003	8-73840
Batteries	4004	8-71701
Electric Swivel	4006	8-15050
Gauges.....	4007	8-15060
5 STEERING		
Section Index - Steering.....		8-15070
Removal and Installation of Components	5001	8-15080
Steering Specifications, Schematic, and Troubleshooting.....	5002	8-14860
Steering Control Valve.....	5003	8-15090
Steering Selector Valve	5004	8-15100
Front Axle	5005	8-15110
Accumulator	5006	8-15120
Steering Cylinder	5007	8-15130

Reprinted

6 POWER TRAIN

Section Index - Power Train.....		8-15140
Removal and Installation of Power Train Components.....	6001	8-15150
Transmission Specification, Schematic, and Troubleshooting.....	6002	8-14870
Torque Converter.....	6003	8-15160
Transmission.....	6004	8-15170
Drive Shafts and Universal Joints.....	6005	8-15180
Differential and Planetary.....	6006	8-15190
Wheels and Tires.....	6007	8-15200

7 BRAKES

Section Index - Brakes.....		8-15210
Removal and Installation of Brake Components.....	7000	8-15220
Brake Specifications, Pressure Checks, and Adjustments.....	7001	8-14880
Brakes.....	7002	8-15230
Parking Brake.....	7003	8-15240
Accumulator.....	7004	8-15250
Swing Brake.....	7005	8-15260
Parking Brake Actuator.....	7006	8-73120

NOTE: For parking brake and brake pedal adjustments, see Section 9009.

8 HYDRAULICS

Section Index - Hydraulics.....		8-15270
Removal and Installation of Hydraulic Components.....	8001	8-15280
Hydraulic Schematics, Specifications, and Troubleshooting.....	8002	8-14890
Cleaning the Hydraulic System.....	8003	8-15300
Pump for Boom and Tool.....	8004	8-15310
Pump for Arm and Swing.....	8005	8-15320
Pump for Steering and Controls.....	8006	8-15330
Main Control Valves.....	8007	8-15340
Outrigger Control Valves.....	8008	8-15350
Remote Control Valves - Hand.....	8009	8-15360
Remote Control Valves - Foot.....	8010	8-15370
High Speed Valve.....	8011	8-15380
Solenoid Valve.....	8012	8-15390
Control Circuit Valve.....	8013	8-15400
Swing Motor.....	8014	8-15410
Swing Relief Valve.....	8015	8-15420
Hydraulic Swivel.....	8016	8-15430
Cylinders.....	8017	8-15440

9 MOUNTED EQUIPMENT

Section Index - Mounted Equipment.....		8-15450
Pedals and Levers.....	9000	8-14900
Swing Gearbox.....	9002	8-15470
Boom and Arm.....	9003	8-15480
Attachments.....	9004	8-15490
Turntable Bearing and Related Parts.....	9005	8-15500

SECTION INDEX - GENERAL

Section Title	Section Number
Standard Torque Specifications.....	1001
Fluids and Lubricants	1002
Detailed Engine Specifications	1024

1001

STANDARD TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Torque Specifications - Decimal Hardware.....	1001-2	Torque Specifications - Steel Hydraulic Fittings.....	1001-4
Torque Specifications - Metric Hardware...1001-3		Torque Specifications - O-ring Face Seal Fittings.....	1001-5

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs   		
Size	Pound-Feet	Newton metres
1/4 in	9-11	12-15
5/16 in	17-21	23-28
3/8 in	35-42	48-57
7/16 in	54-64	73-87
1/2 in	80-96	109-130
9/16 in	110-132	149-179
5/8 in	150-180	203-244
3/4 in	270-324	366-439
7/8 in	400-480	542-651
1.0 in	580-696	787-944
1-1/8 in	800-880	1085-1193
1-1/4 in	1120-1240	1519-1681
1-3/8 in	1460-1680	1980-2278
1-1/2 in	1940-2200	2631-2983

Grade 8 Bolts, Nuts, and Studs   		
Size	Pound-Feet	Newton metres
1/4 in	12-15	16-20
5/16 in	24-29	33-39
3/8 in	45-54	61-73
7/16 in	70-84	95-114
1/2 in	110-132	149-179
9/16 in	160-192	217-260
5/8 in	220-264	298-358
3/4 in	380-456	515-618
7/8 in	600-720	814-976
1.0 in	900-1080	1220-1465
1-1/8 in	1280-1440	1736-1953
1-1/4 in	1820-2000	2468-2712
1-3/8 in	2380-2720	3227-3688
1-1/2 in	3160-3560	4285-4827
NOTE: Use thick nuts with Grade 8 bolts.		

TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when special torques are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs 		
Size	Pound-Feet	Newton metres
M4	2-3	3-4
M5	5-6	6.5-8
M6	8-9	10.5-12
M8	19-23	26-31
M10	38-45	52-61
M12	66-79	90-107
M14	106-127	144-172
M16	160-200	217-271
M20	320-380	434-515
M24	500-600	675-815
M30	920-1100	1250-1500
M36	1600-1950	2175-2600

Grade 10.9 Bolts, Nuts, and Studs 		
Size	Pound-Feet	Newton metres
M4	3-4	4-5
M5	7-8	9.5-11
M6	11-13	15-17.5
M8	27-32	37-43
M10	54-64	73-87
M12	93-112	125-15
M14	149-179	200-245
M16	230-280	310-380
M20	450-540	610-730
M24	780-940	1050-1275
M30	1470-1770	2000-2400
M36	2580-3090	3500-4200

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - O-RING FACE SEAL FITTING

Nom. SAE Dash Size	Tube OD	Thread Size	Pound- Feet	Newton Metres	Thread Size	Pound- Feet	Newton Metres
O-ring Face Seal End					O-ring Boss End Fitting or Locknut		
-4	1/4 in 6.4 mm	9/16-18	10-12	14-16	7/16-20	17-20	23-27
-6	3/8 in 9.5 mm	11/16-16	18-20	24-27	9/16-18	25-30	33-40
-8	1/2 in 12.7 mm	13/16-16	32-40	43-54	3/4-16	45-50	61-68
-10	5/8 in 15.9 mm	1-14	46-56	60-75	7/8-14	60-65	81-88
-12	3/4 in 19.0 mm	1-3/16-12	65-80	90-110	1-1/16-12	85-90	115-122
-14	7/8 in 22.2 mm	1-3/16-12	65-80	90-110	1-3/16-12	95-100	129-136
-16	1.0 in 25.4 mm	1-7/16-12	92-105	125-140	1-5/16-12	115-125	156-169
-20	1-1/4 in 31.8 mm	1-11/16-12	125-140	170-190	1-5/8-12	150-160	203-217
-24	1-1/2 in 38.1 mm	2-12	150-180	200-254	1-7/8-12	190-200	258-271

Section 1002

FLUIDS AND LUBRICANTS

TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS3

ENGINE LUBRICATION4

 Engine Oil Selection4

 Engine Lubrication Oil Viscosity.....4

DIESEL FUEL5

 Fuel Storage5

CAPACITIES AND LUBRICANTS

Engine Oil

Capacity with Filter Change 17 U.S. quarts (16.1 litres)

Type of oil See page 4

Engine Cooling System

Capacity 8.5 U.S. gallons (32 litres)

Type of coolant Use a mixture of 50% ethylene glycol and 50% water the year round.
If the lowest ambient temperature will be below -34°F (1.11°C) adjust the mixture.

Fuel Tank

Capacity 75 U.S. gallons (284 litres)

Type of fuel See Diesel fuel specifications on page 5

Hydraulic System

Hydraulic reservoir refill capacity with filter change 36 U.S. gallons (136 litres)

Type of oil Case TCH fluid

Transmission

Capacity with filter change 22.5 U.S. quarts (21.3 litres)

Type of oil Case TCH fluid

Swing Gearbox

Gearbox 14 U.S. pints (6.6 litres)

Reservoir 3 U.S. pints (1.4 litres)

Type of oil Case IH 135-H EP gear lube

Axles

Front Axle

Capacity of differential 16.5 U.S. quarts (15.6 litres)

Capacity of planetary (each) 3.5 U.S. pints (1.7 litres)

Rear Axle

Capacity of differential 15.5 U.S. quarts (14.7 litres)

Capacity of planetary (each) 3.5 U.S. pints (1.7 litres)

Type of oil Case IH 135-H EP gear lube

Accelerator Master Cylinder

Master cylinder fluid level 1 U.S. pint (0.47 litre)

Type of fluid Case brake oil (Case part number B91244 or Viscosity Oil part number L3828)

ENGINE LUBRICATION

Engine Oil Selection

CaselH No. 1 Engine Oil is recommended for use in your CaselH Engine. CaselH Engine Oil will lubricate your engine correctly under all operating conditions. If CaselH No. 1 Multi-Viscosity Engine Oil is not available, CaselH No. 1 Single Grade Engine Oil can be used.

If CaselH No. 1 Multi-Viscosity or Single Grade Engine Oil is not available, use only oil meeting API engine oil service category CE.



654L9




A2668

See the chart below for recommended viscosity at ambient air temperature ranges.

NOTE: Do not put Performance Additives or other oil additive products in the engine crankcase. The oil intervals given in this manual are according to tests with CaselH lubricants.

Engine Lubrication Oil Viscosity

AMBIENT AIR TEMPERATURE RANGES

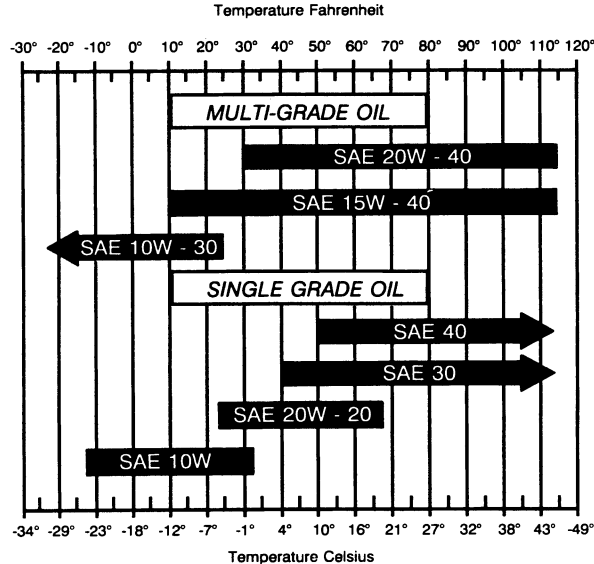

737L9

DIESEL FUEL

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No.1 and No. 2 diesel fuels is temporarily permitted. See the following Note.

NOTE: See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel lowers below the cloud point (wax appearance point), wax crystals in the fuel will cause the engine to lose power or not start.

The diesel fuel used in this machine must meet the specifications in the chart below or Specification D975-81 of the American Society for Testing and Materials.

Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Fill the fuel tank at the end of the day to prevent condensation in the fuel tank.

Specifications for Acceptable No. 2 Diesel Fuel

API gravity, minimum	34
Flash point, minimum	140°F (60°C)
Cloud point (wax appearance point), maximum	-5°F (-20°C) See Note above
Pour point, maximum	-15°F (-26°C) See Note above
Distillation temperature, 90% point	540 to 640°F (282 to 338°C)
Viscosity, at 100°F (88°C)	
Centistokes	2.0 to 4.3
Saybolt Seconds Universal	32 to 40
Cetane number, minimum	43 (45 to 55 for winter or high altitudes)
Water and sediment, by volume	0.05 of 1%
Sulfur, by weight, maximum	0.5 of 1%
Copper strips corrosion, maximum	No. 2
Ash, by weight, maximum	0.01 of 1%



Engine fuel is flammable and can cause a fire or an explosion. Do not fill the fuel tank or service the fuel system near an open flame, welding, burning cigars, cigarettes, etc.

84-100-A

TABLE OF CONTENTS

RUN-IN INSTRUCTIONS 3

ENGINE SPECIFICATION DETAILS

 Cylinder Block 4

 Service Cylinder Sleeve 4

 Piston 4

 Piston Pin 4

 Piston Rings 5

 Cylinder Head 5

 Tappets 5

 Connecting Rod 5

 Crankshaft 6

 Camshaft 7

 Valve Push Rod Lifters 7

 Gear Train 7

 Rocker Arm Assembly 7

 Turbocharger 7

 Intake Valve 8

 Exhaust Valve 8

 Valve Springs 8

SPECIAL TORQUES 9-11

RUN-IN INSTRUCTIONS

Engine Lubrication

Fill the 6-590 engine crankcase with CC or CD service classification oil that has the correct viscosity rating for the ambient air temperature. Install new oil filters, after the engine has been rebuilt.

Fill the 6T-590 and the 6TA-590 engine crankcase with CD service classification oil that has the correct viscosity rating for the ambient air temperature. Install new oil filters, after the engine has been rebuilt.

Run-In Procedure For Rebuilt Engine

- Step 1 Disconnect the wire to the electric shut-off on the injection pump so that the engine will not start. Crank the engine for 30 seconds until there is oil pressure, then reconnect the wire.
- Step 2 Remove the air from the cooling system at the temperature sending unit for the 6-590 and 6T-590 engine. Loosen the upper plug on the aftercooler to remove the air from the cooling system for the 6TA-590 engine.
- Step 3 Run the engine at 1000 RPM minimum load for 5 minutes and check for oil leaks.
- Step 4 During the Run-In, continue to check the oil pressure, coolant level, and coolant temperature.

Run-In Procedure For Rebuilt Engines (With A Dynamometer)

The following procedure must be followed when using a PTO dynamometer to Run-In the engine. The dynamometer will control the engine load at each speed and will remove stress on new parts during Run-In.

During the Run-In, continue to check the oil pressure, coolant level and coolant temperature.

STEP	TIME	ENGINE SPEED	DYNAMOMETER SCALE LOAD
1	5 Minutes	1000 RPM	50
2	5 Minutes	1100 RPM	1/2
3	5 Minutes	2200 RPM	Full

Run-In Procedure for Rebuilt Engines (Without A Dynamometer)

STEP	TIME	ENGINE SPEED	LOAD
1	5 Minutes	1000 RPM	No Load
2	5 Minutes	1100 RPM	Light Load
3	5 Minutes	2200 RPM	Full

Run-In Procedure (Agriculture Tractors)

For the first 8 hours of field operation stay one gear lower than normal. For the next 12 hours DO NOT "lug" the engine. Prevent "lugging" by moving the lever to a lower gear. The engine must not be "lugged" below the rated engine RPM during early hours of life.

Run-In Procedure (Construction Equipment)

For the first 8 hours, operate the engine at full throttle maintaining a normal load. DO NOT "baby" the engine, but avoid converter or hydraulic stall. The engine must not be "lugged" below the Rated Engine RPM (Do not stall the engine more than 10 seconds).

ENGINE SPECIFICATION DETAILS

Cylinder Block

	Metric Value
Type	Non-Sleeved
Material	Cast Iron
ID of Cylinder	102.00 to 102.04 mm
Maximum Service Limit	102.116 mm
Cylinder Out of Round (Maximum)	0.038 mm
Cylinder Taper (Maximum)	0.076 mm
0.5 mm Oversize Piston	
Machine Cylinder Bore to	102.40 to 102.44 mm
Hone Cylinder Bore to	102.50 to 102.54 mm
1.00 mm Oversize Piston	
Machine Cylinder Bore to	102.900 to 102.960 mm
Hone Cylinder Bore to	103.00 to 103.04 mm

Service Cylinder Sleeve

Type	Dry, Can Be Replaced
Material	Cast Iron
Machine Cylinder Block Bore to	104.485 to 104.515 mm
Installation	Press Fit
Hone Cylinder Bore to	102.00 to 102.10 mm

Piston

Type	Cam Ground
Material	Aluminum alloy
OD at 12 mm From the Bottom, 90 Degrees From Piston Pin	
Standard Size Piston	101.873 to 101.887 mm
Minimum Service Limit	101.823 mm
0.5 mm Oversize Piston	102.373 to 102.387 mm
Minimum Service Limit	102.323 mm
1.0 mm Oversize Piston	102.873 to 102.887 mm
Minimum Service Limit	102.823 mm
ID of Piston Pin Bore	40.006 to 40.012 mm
Maximum Service Limit	40.025 mm
Width of 1st Ring Groove (Top)	2.465 to 2.485 mm
Width of 2nd Ring Groove (Intermediate)	2.425 to 2.445 mm
Width of 3rd Ring Groove (Oil Ring)	4.040 to 4.060 mm
Protrusion Above Cylinder Block (Maximum)	0.660 mm

Piston Pin

Type	Full Float
OD of Pin	39.997 to 40.003 mm
Minimum Service Limit	39.990 mm

Click on the image link below for the full version of the service manual

