

Rowtrac™ 350 / 400 / 450 / 500
Steiger® 350 / 400 / 450 / 500 / 550 / 600
Quadtrac® 450 / 500 / 550 / 600
Tier 4
Tractor

SERVICE MANUAL

Part number 47488212

English

February 2013

Replaces part number 84354095





SERVICE MANUAL

Rowtrac 350 [ZDF100001 -], Rowtrac 400 [ZDF100001 -], Rowtrac 450 [ZDF100001 -], Rowtrac 500 [ZDF100001 -], Steiger 350 [ZBF100001 -], Steiger 350 [ZCF100001 -], Steiger 350 [ZDF100001 -], Steiger 400 [ZBF100001 -], Steiger 400 [ZCF100001 -], Steiger 400 [ZDF100001 -], Steiger 450 QT [ZBF100001 -], Steiger 450 QT [ZCF100001 -], Steiger 450 QT [ZDF100001 -], Steiger 450 [ZBF100001 -], Steiger 450 [ZCF100001 -], Steiger 450 [ZDF100001 -], Steiger 500 QT [ZBF100001 -], Steiger 500 QT [ZCF100001 -], Steiger 500 QT [ZDF100001 -], Steiger 500 [ZBF100001 -], Steiger 500 [ZCF100001 -], Steiger 500 [ZDF100001 -], Steiger 550 QT [ZBF100001 -], Steiger 550 QT [ZCF100001 -], Steiger 550 QT [ZDF100001 -], Steiger 550 [ZBF100001 -], Steiger 550 [ZCF100001 -], Steiger 550 [ZDF100001 -], Steiger 600 QT [ZBF100001 -], Steiger 600 QT [ZCF100001 -], Steiger 600 QT [ZDF100001 -], Steiger 600 [ZBF100001 -], Steiger 600 [ZCF100001 -], Steiger 600 [ZDF100001 -]

Link Product / Engine

Product	Market Product	Engine
null [ZDF100001 -]	North America	F2CFE614A*A
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZBF100001 -]	North America	F2CFE614A*A
null [ZCF100001 -]	North America	F2CFE614A*A
null [ZDF100001 -]	North America	F2CFE614A*A
null [ZBF100001 -]	North America	F3BFE613A*A001
null [ZCF100001 -]	North America	F3BFE613A*A001
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZBF100001 -]	North America	F3BFE613A*A001
null [ZCF100001 -]	North America	F3BFE613A*A001
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZBF100001 -]	North America	F3BFE613A*A001
null [ZCF100001 -]	North America	F3BFE613A*A001
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZBF100001 -]	North America	F3BFE613A*A001
null [ZCF100001 -]	North America	F3BFE613A*A001
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZBF100001 -]	North America	F3BFE613A*A001
null [ZCF100001 -]	North America	F3BFE613A*A001
null [ZDF100001 -]	North America	F3BFE613A*A001
null [ZBF100001 -]	North America	F3DFE613A*A001
null [ZCF100001 -]	North America	F3DFE613A*A001
null [ZDF100001 -]	North America	F3DFE613A*A001
null [ZBF100001 -]	North America	F3DFE613A*A001
null [ZCF100001 -]	North America	F3DFE613A*A001
null [ZDF100001 -]	North America	F3DFE613A*A001
null [ZBF100001 -]	North America	F3DFE613A*A001
null [ZCF100001 -]	North America	F3DFE613A*A001
null [ZDF100001 -]	North America	F3DFE613A*A001
null [ZBF100001 -]	North America	F3DFE613A*A001
null [ZCF100001 -]	North America	F3DFE613A*A001
null [ZDF100001 -]	North America	F3DFE613A*A001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.5
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls	21.2
[21.145] Gearbox internal components	21.3
[21.155] Powershift transmission internal components	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
[25.500] Front axle track yoke assembly	25.4
Rear axle system.....	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox	31.3

Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2

[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.010] Fuel injection system.....	55.1
[55.014] Engine intake and exhaust system.....	55.2
[55.024] Transmission control system.....	55.3
[55.035] Remote control valve electric control	55.4
[55.045] Front axle control system	55.5
[55.046] Rear axle control system.....	55.6
[55.048] Rear Power Take-Off (PTO) control system	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.130] Rear three-point hitch electronic control system	55.11
[55.301] Alternator.....	55.12
[55.302] Battery.....	55.13
[55.404] External lighting	55.14
[55.522] Cab Power Take-Off (PTO) controls	55.15
[55.640] Electronic modules	55.16
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.17
[55.DTC] FAULT CODES.....	55.18
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2

[90.124] Pneumatically-adjusted operator seat..... 90.3

[90.150] Cab..... 90.4

[90.151] Cab interior..... 90.5



INTRODUCTION

Contents

INTRODUCTION

Safety rules	3
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Personal safety - Do not operate tag	4
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Safety rules	5
Steiger 350 NA, Steiger 400 NA, Steiger 450 NA, Steiger 450 QT NA, Steiger 500 NA, Steiger 500 QT NA, Steiger 550 NA, Steiger 550 QT NA, Steiger 600 NA, Steiger 600 QT NA, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Foreword - Ecology and the environment	17
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA, STEIGER	
Basic instructions - Important notice regarding equipment servicing	18
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA, STEIGER	
Basic instructions - Shop and assembly	19
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Basic instructions - Product identification	21
Steiger 350 NA, Steiger 400 NA, Steiger 450 NA, Steiger 450 QT NA, Steiger 500 NA, Steiger 500 QT NA, Steiger 550 NA, Steiger 550 QT NA, Steiger 600 NA, Steiger 600 QT NA, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Torque - Minimum tightening torques for normal assembly	25
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Torque - Standard torque data for hydraulics	28
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Capacities - Product identification numbers ZCF and before	30
Steiger 350 [ZBF100001 -], Steiger 350 [ZCF100001 -], Steiger 400 [ZBF100001 -], Steiger 400 [ZCF100001 -], Steiger 450 [ZBF100001 -], Steiger 450 [ZCF100001 -], Steiger 450 QT [ZBF100001 -], Steiger 450 QT [ZCF100001 -], Steiger 500 [ZBF100001 -], Steiger 500 [ZCF100001 -], Steiger 500 QT [ZBF100001 -], Steiger 500 QT [ZCF100001 -], Steiger 550 [ZBF100001 -], Steiger 550 [ZCF100001 -], Steiger 550 QT [ZBF100001 -], Steiger 550 QT [ZCF100001 -], Steiger 600 [ZBF100001 -], Steiger 600 [ZCF100001 -], Steiger 600 QT [ZBF100001 -], Steiger 600 QT [ZCF100001 -]	
Definition - Important notice regarding equipment servicing	31
Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Capacities - Product identification numbers ZDF and after	32
Steiger 350 [ZDF100001 -] NA, Steiger 400 [ZDF100001 -] NA, Steiger 450 [ZDF100001 -] NA, Steiger 450 QT [ZDF100001 -] NA, Steiger 500 [ZDF100001 -] NA, Steiger 500 QT [ZDF100001 -] NA, Steiger 550 [ZDF100001 -] NA, Steiger 550 QT [ZDF100001 -] NA, Steiger 600 [ZDF100001 -] NA, Steiger 600 QT [ZDF100001 -] NA, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	
Definition - Machine orientation	33
Steiger 350 NA, Steiger 400 NA, Steiger 450 NA, Steiger 450 QT NA, Steiger 500 NA, Steiger 500 QT NA, Steiger 550 NA, Steiger 550 QT NA, Steiger 600 NA, Steiger 600 QT NA, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA	

Safety rules

Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA


Personal safety





This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Personal safety - Do not operate tag

Steiger 350, Steiger 400, Steiger 450, Steiger 450 QT, Steiger 500, Steiger 500 QT, Steiger 550, Steiger 550 QT, Steiger 600, Steiger 600 QT, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA

WARNING

Maintenance hazard!

Before you start servicing the machine, attach a DO NOT OPERATE warning tag to the machine in a visible area.

Failure to comply could result in death or serious injury.

W0004A

Attach a DO NOT OPERATE (TAG) to the machine in an area that is clearly visible whenever the machine is not operating properly and/or requires service.

Complete the tag information for the "REASON" the tag is attached by describing the malfunction or service required. Validate the reason for attaching the tag by signing your name in the designated area on the tag.

The tag should only be removed by the person who signed and attached the tag, after validating the repairs or services have been completed.

	⊕	⊕	
(A)			(D)
(B)	<p>See Other Side</p>	<p>REASON</p> <p>_____</p> <p>_____</p> <p>_____</p> <p>_____</p> <p>_____</p> <p>_____</p>	(E)
(C)	<p>CNH Part Number 87358697</p> <p>Printed in U.S.A.</p>	<p>Signed by _____</p>	(F)

87358697 1

Tag Components

- A. DO NOT REMOVE THIS TAG! - (Warning) The tag should only be removed by the person who signed and attached the tag, after validating the repairs or services have been completed.
- B. See Other Side - (Reference to additional information on opposite side of the tag.)
- C. CNH Part Number - (Request this part number from you Service Parts Dealer to obtain this DO NOT OPERATE tag.)
- D. DO NOT OPERATE - (Warning!)
- E. REASON - (Area for describing malfunction or service required before operation.)
- F. Signed by - (Signature area - to be signed by the person validating the reason for installation of the tag.)

Safety rules

Steiger 350 NA, Steiger 400 NA, Steiger 450 NA, Steiger 450 QT NA, Steiger 500 NA, Steiger 500 QT NA, Steiger 550 NA, Steiger 550 QT NA, Steiger 600 NA, Steiger 600 QT NA, Rowtrac 350 [ZDF100001 -] NA, Rowtrac 400 [ZDF100001 -] NA, Rowtrac 450 [ZDF100001 -] NA, Rowtrac 500 [ZDF100001 -] NA

General safety rules

Use caution when operating the machine on slopes. Raised equipment, full tanks and other loads will change the center of gravity of the machine. The machine can tip or roll over when near ditches and embankments or uneven surfaces.

Never permit anyone other than the operator to ride on the machine.

Never operate the machine under the influence of alcohol, drugs, or while otherwise impaired.

While driving on the road, the seat swivel position must always be straight forward and locked in position with no rotation. The seat swivel should only be rotated for in field operation.

Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid “free wheeling.”

Do not drive on roads, or at high speed anywhere, with the differential lock engaged. Difficult steering will occur, and can result in an accident. In field operation, use the differential lock for traction improvement, but release for turning at row ends.

Do not exceed implement transport speed or the speed rating on the implement tires. Review the implements Operator's Manual for specifications. Failure to comply could result in death or serious injury.

For speeds up to **16 km/h (10 mph)**, make sure that the weight of a trailed vehicle that is not equipped with brakes does NOT EXCEED 1.5 times the Tractor weight. For speeds up to **40 km/h (25 mph)**, make sure that the weight of the trailed vehicle that is not equipped with brakes, does NOT EXCEED the weight of the Tractor. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.

Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use three point hitch only with the implements designed for its use – not as a drawbar.

Do not look directly into the front or rear HID (high intensity discharge) lamps. Eye damage can occur.

Do not tamper with the ballast on the front or rear high intensity discharge (HID) lamp since it uses high voltage. Personal injury or death can occur.

To avoid possible eye damage from microwave signals emitted by the radar sensor, do not look directly into the sensor face.

When digging or using ground engaging attachments be aware of buried cables. Contact local utilities to determine the locations of services.

Pay attention to overhead power lines and hanging obstacles. High voltage lines may require significant clearance for safety.

Hydraulic oil or diesel fuel leaking under pressure can penetrate the skin, causing serious injury or infection.

- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper.
- Stop engine, remove key and relieve the pressure before connecting or disconnecting fluid lines.
- Make sure all components are in good condition and tighten all connections before starting the engine or pressurizing the system.
- If hydraulic fluid or diesel fuel penetrates the skin, seek medical attention immediately.
- Continuous long term contact with hydraulic fluid may cause skin cancer. Avoid long term contact and wash the skin promptly with soap and water.

Keep clear of moving parts. Loose clothing, jewelry, watches, long hair, and other loose or hanging items can become entangled in moving parts.

Wear protective equipment when appropriate.

DO NOT attempt to remove material from any part of the machine while it is being operated or components are in motion.

Make sure all guards and shields are in good condition and properly installed before operating the machine. Never operate the machine with shields removed. Always close access doors or panels before operating the machine.

Dirty or slippery steps, ladders, walkways, and platforms can cause falls. Make sure these surfaces remain clean and clear of debris.

A person or pet within the operating area of a machine can be struck or crushed by the machine or its equipment. DO NOT allow anyone to enter the work area.

Raised equipment and/or loads can fall unexpectedly and crush persons underneath. Never allow anyone to enter the area underneath raised equipment during operation.

Never operate engine in enclosed spaces as harmful exhaust gases may build up.

Before starting the machine, be sure that all controls are in neutral or park lock position.

Start the engine only from the operator's seat. If the safety start switch is bypassed, the engine can start with the transmission in gear. Do not connect or short across terminals on the starter solenoid. Attach jumper cables as described in the manual. Starting in gear may cause death or serious injury.

Always keep windows, mirrors, all lighting, and Slow Moving Vehicle (SMV) emblem clean to provide the best possible visibility while operating the machine.

Operate controls only when seated in the operator's seat, except for those controls expressly intended for use from other locations.

Before leaving the machine:

1. Park machine on a firm level surface.
2. Put all controls in neutral or park lock position.
3. Engage park brake. Use wheel chocks if required.
4. Lower all hydraulic equipment — Implements, header, etc.
5. Turn off engine and remove key.

When, due to exceptional circumstances, you would decide to keep the engine running after leaving the operator's station, then the following precautions must be followed:

1. Bring the engine to low idle speed.
2. Disengage all drive systems.

3. **⚠ WARNING**

**Some components may continue to run down after disengaging drive systems.
Make sure all drive systems are fully disengaged.
Failure to comply could result in death or serious injury.**

W0113A

Shift the transmission into neutral.

4. Apply the parking brake.

General maintenance safety

Keep area used for servicing the machine clean and dry. Clean up spilled fluids.

Service machine on a firm level surface.

Install guards and shields after servicing the machine.

Close all access doors and install all panels after servicing the machine.

Do not attempt to clean, lubricate, clear obstructions or make adjustments to the machine while it is in motion or while the engine is running.

Always make sure working area is clear of tools, parts, other persons and pets before you start operating the machine.

Unsupported hydraulic cylinders can lose pressure and drop the equipment causing a crushing hazard. Do not leave equipment in a raised position while parked or during service, unless securely supported.

Jack or lift the machine only at jack or lift points indicated in this manual.

Incorrect towing procedures can cause accidents. When towing a disabled machine follow the procedure in this manual. Use only rigid tow bars.

Stop the engine, remove key and relieve pressure before disconnecting or connecting fluid lines.

Stop the engine and remove key before disconnecting or connecting electrical connections.

Scalding can result from incorrect removal of coolant caps. Cooling system operates under pressure. Hot coolant can spray out if a cap is removed while the system is hot. Allow system to cool before removing cap. When removing a cap turn it slowly to allow pressure to escape before completely removing the cap.

Replace damaged or worn tubes, hoses, electrical wiring, etc.

Engine, transmission, exhaust components, and hydraulic lines may become hot during operation. Take care when servicing such components. Allow surfaces to cool before handling or disconnecting hot components. Wear protective equipment when appropriate.

When welding, follow the instructions in the manual. Always disconnect the battery before welding on the machine. Always wash your hands after handling battery components.

Wheels and tires

Make sure tires are correctly inflated. Do not exceed recommended load or pressure. Follow instructions in the manual for proper tire inflation.

Tires are heavy. Handling tires without proper equipment could cause death or serious injury.

Never weld on a wheel with a tire installed. Always remove tire completely from wheel prior to welding.

Always have a qualified tire technician service the tires and wheels. If a tire has lost all pressure, take the tire and wheel to a tire shop or your dealer for service. Explosive separation of the tire can cause serious injury.

DO NOT weld on a wheel or rim until the tire is completely removed. Inflated tires can generate a gas mixture with the air that can be ignited by high temperatures from welding procedures performed on the wheel or rim. Removing the air or loosening the tire on the rim (breaking the bead) will NOT eliminate the hazard. This condition can exist whether tires are inflated or deflated. The tire MUST be completely removed from the wheel or rim prior to welding the wheel or rim.

Driving on public roads and general transportation safety

Comply with local laws and regulations.

Use appropriate lighting to meet local regulations.

Make sure Slow Moving Vehicle (SMV) emblem is visible.

Make sure brake pedal latch is engaged. Brake pedals must be locked together for road travel.

Use safety chains for trailed equipment when provided with machine or equipment.

Lift implements and attachments high enough above ground to prevent accidental contact with road.

When transporting equipment or machine on a transport trailer, make sure it is properly secured. Be sure the Slow Moving Vehicle (SMV) on the equipment or machine is covered while being transported on a trailer.

Be aware of overhead structures or power lines and make sure the machine and/or attachments can pass safely under.

Travel speed should be such that complete control and machine stability is maintained at all times.

Slow down and signal before turning.

Pull over to allow faster traffic to pass.

Follow correct towing procedure for equipment with or without brakes.

Fire and explosion prevention

Fuel or oil leaked or spilled on hot surfaces or electrical components can cause a fire.

Crop materials, trash, debris, bird nests, or flammable material can ignite on hot surfaces.

Always have a fire extinguisher on or near the machine.

Make sure the fire extinguisher(s) is maintained and serviced according to the manufacturer's instructions.

At least once each day and at the end of the day remove all trash and debris from the machine especially around hot components such as engine, transmission, exhaust, battery, etc. More frequent cleaning of your machine may be necessary depending on the operating environment and conditions.

At least once each day, remove debris accumulation around moving components such as bearings, pulleys, belts, gears, cleaning fan, etc. More frequent cleaning of your machine may be necessary depending on the operating environment and conditions.

Inspect the electrical system for loose connections or frayed insulation. Repair or replace loose or damaged parts.

Do not store oily rags or other flammable material on the machine.

Do not weld or flame cut any items that contain flammable material. Clean items thoroughly with non-flammable solvents before welding or flame-cutting.

Do not expose the machine to flames, burning brush, or explosives.

Promptly investigate any unusual smells or odors that may occur during operation of the machine.

Click on the image link below for the full version of the service manual

