

AXIAL-FLOW® 5130
AXIAL-FLOW® 6130
AXIAL-FLOW® 7130

Combine

PIN YDG009296 and above

SERVICE MANUAL

Part number 47511959

English


April 2013

Copyright © 2013 CNH America LLC. All Rights Reserved.





 SERVICE MANUAL



AXIAL-FLOW 5130 [YDG009296 -]
AXIAL-FLOW 6130 [YDG009296 -]
AXIAL-FLOW 7130 [YDG009296 -]

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.254] Intake and exhaust manifolds and muffler	10.3
[10.310] Aftercooler.....	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.418] Rotary screen	10.7
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.8
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.145] Gearbox internal components.....	21.2
[21.182] Differential.....	21.3
Front axle system	25
[25.310] Final drives	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.124] Final drive hub, steering knuckles, and shafts	27.2
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.202] Hydrostatic transmission	29.2
[29.204] Reservoir, cooler, and lines	29.3
[29.218] Pump and motor components.....	29.4

Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump	35.3
[35.220] Auxiliary hydraulic pump and lines	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.322] Regulated/Low pressure system	35.6
[35.359] Main control valve	35.7
[35.410] Header or attachment height system	35.8
[35.440] Grain tank unload system	35.9
[35.536] Crop processor system	35.10
[35.760] Header reverser drive	35.11
[35.796] Chaff spreader control	35.12
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump	41.4
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.300] Cab pressurizing system	50.1
[50.200] Air conditioning.....	50.2
[50.100] Heating	50.3
[50.104] Ventilation	50.4

Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system	55.2
[55.014] Engine intake and exhaust system	55.3
[55.031] Parking brake electrical system	55.4
[55.036] Hydraulic system control	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.6
[55.100] Harnesses and connectors	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator	55.10
[55.302] Battery	55.11
[55.405] External lighting switches and relays	55.12
[55.408] Warning indicators, alarms, and instruments	55.13
[55.421] Feeding control system	55.14
[55.423] Cleaning control system	55.15
[55.426] Harvest material flow control system	55.16
[55.518] Wiper and washer system	55.17
[55.520] Cab harvesting controls	55.18
[55.610] Ground speed control	55.19
[55.628] Threshing electrical control	55.20
[55.640] Electronic modules	55.21
[55.661] Cab header controls	55.22
[55.662] Header height control	55.23
[55.834] Sieve electric control	55.24
[55.836] Rotary separator control	55.25
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.26
[55.DTC] FAULT CODES	55.27
Attachments/Headers	58

[58.105] Attachment/Header reel control system.....	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing.....	60.2
[60.122] Length-of-cut gearbox.....	60.3
[60.150] Feeder drive system	60.4
Threshing	66
[66.105] Concave.....	66.1
[66.110] Concave control system.....	66.2
[66.260] Threshing mechanism drive system	66.3
[66.331] Rotor	66.4
Separation	72
[72.410] Rotary separator drive system	72.1
[72.420] Rotary separator	72.2
Residue handling.....	73
[73.210] Straw chopper drive system.....	73.1
[73.230] Straw chopper.....	73.2
[73.335] Chaff spreader	73.3
Cleaning	74
[74.000] Cleaning.....	74.1
[74.101] Cleaning drive systems	74.2
[74.114] Upper shaker shoe	74.3
[74.118] Lower shaker shoe	74.4
[74.130] Fan housing	74.5
[74.140] Tailings return system	74.6
Crop storage / Unloading	80
[80.101] Clean grain elevator.....	80.1

[80.150] Grain tank	80.2
[80.175] Grain tank unload drive system	80.3
[80.180] Grain tank unload	80.4
Platform, cab, bodywork, and decals	90
[90.105] Machine shields and guards	90.1
[90.124] Pneumatically-adjusted operator seat.....	90.2
[90.151] Cab interior.....	90.3



INTRODUCTION

Contents

INTRODUCTION

Basic instructions - Important notice regarding equipment servicing	3
Safety rules and signal word definitions	4
Personal safety	5
Safety rules Ecology and the Environment	6
Safety rules - Personal safety	7
Safety rules	8
Basic instructions - Shop and Assembly	9
Torque - Minimum tightening torques for normal assembly	11
<small>AXIAL-FLOW 5130 [YDG009296 -], AXIAL-FLOW 6130 [YDG009296 -], AXIAL-FLOW 7130 [YDG009296 -]</small>	
Torque - Standard torque data for hydraulics	16
Basic instructions - Chain Wear Tables - Roller Chains	18
Dimension	20
Frame - Dimension	23
Product identification	26

Basic instructions - Important notice regarding equipment servicing

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The information in this manual is up-to-date at the date of the publication. It is the policy of the manufacturer for continuous improvement. Some information could not be updated due to modifications of a technical or commercial type, or changes to the laws and regulations of different countries.

In case of questions, refer to your CASE IH AGRICULTURE Sales and Service Networks.

Safety rules and signal word definitions

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words Danger, Warning, and Caution followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.



DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1169A



WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170A



CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with Caution is YELLOW.

M1171A

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information which clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Personal safety

⚠ WARNING

Moving parts!

Disengage the Power Take-Off (PTO), turn off the engine, and remove the key. Wait for all movement to stop before leaving the operator's position. Never adjust, lubricate, clean, or unplug machine with the engine running.

Failure to comply could result in death or serious injury.

W0112A

Before you service the machine, put a DO NOT OPERATE tag on the instrument panel.

The diagram shows a vertical rectangular tag divided into two main sections. The top section is a black rectangle with white text. The bottom section is white with black text and a signature line. Numbered callouts point to specific features: (1) points to the top of the black rectangle; (2) points to the text 'See Other Side'; (3) points to the top of the black rectangle; (4) points to the 'REASON' field; (5) points to the 'Signed by' field.

DO NOT REMOVE THIS TAG!

DO NOT OPERATE

REASON

Signed by

CNH Part Number 87358697 Printed in U.S.A.

87358697 1
DO NOT OPERATE TAG

- A. **(1)** Do not remove this tag.
- B. **(2)** See other side.
- C. **(3)** Do not operate.
- D. **(5)** Reason
- E. **(4)** Signed by.

The DO NOT OPERATE tag can be obtained from your CASE IH AGRICULTURE dealer.

Safety rules Ecology and the Environment

Soil, air, and water are vital factors of agriculture and life in general. When legislation does not yet rule the treatment of some of the substances which are required by advanced technology, common sense should govern the use and disposal of products of a chemical and petrochemical nature.

NOTICE: *The following are recommendations which may be of assistance:*

- Become acquainted with and ensure that you understand the relative legislation applicable to your country.
- Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, antifreeze, cleaning agents, etc., with regard to their effect on man and nature and how to safely store, use and dispose of these substances.
- Agricultural consultants will, in many cases, be able to help you as well.

HELPFUL HINTS

- Avoid filling tanks using cans or inappropriate pressurized fuel delivery systems which may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of them contain substances which may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when draining off used engine coolant mixtures, engine, gearbox and hydraulic oils, brake fluids, etc. Do not mix drained brake fluids or fuels with lubricants. Store them safely until they can be disposed of in a proper way to comply with local legislation and available resources.
- Modern coolant mixtures, i.e. antifreeze and other additives, should be replaced every two years. They should not be allowed to get into the soil but should be collected and disposed of properly.
- Do not open the air-conditioning system yourself. It contains gases which should not be released into the atmosphere. Your CASE IH AGRICULTURE dealer or air conditioning specialist has a special extractor for this purpose and will have to recharge the system properly.
- Repair any leaks or defects in the engine cooling or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding as penetrating weld splatter may burn a hole or weaken them, allowing the loss of oils, coolant, etc.

Safety rules - Personal safety

Carefully study these precautions, and those included in the external attachment operators manual, and insist that they be followed by those working with and for you.

1. Thoroughly read and understand this manual and the attachment Operator's Manual before operating this or any other equipment.
2. Be sure all people and pets are clear of the machine before starting. Sound the horn, if equipped, three times before starting engine.
3. Only the operator should be on the machine when in operation. Never allow anyone to climb on to the machine while it is in motion. If the machine is equipped with an Instructors Seat, this must only be used for training purposes. Passengers must not be allowed to use the Instructors Seat.
4. Keep all shields in place. Never work around the machine or any of the attachments while wearing loose clothing that might catch on moving parts.
5. Observe the following precautions whenever lubricating the machine or making adjustments.
 - Disengage all clutching levers or switches.
 - Lower the attachment, if equipped, to the ground or raise the attachment completely and engage the cylinder safety locks. Completing these actions will prevent the attachment from lowering unexpectedly.
 - Engage the parking brake.
 - Shut off the engine and remove the key.
 - Wait for all machine movement to stop before leaving the operators platform.
6. Always keep the machine in gear while travelling downhill.
7. The machine should always be equipped with sufficient front or rear axle weight for safe operation.
8. Under some field conditions, more weight may be required at the front or rear axle for adequate stability. This is especially important when operating in hilly conditions or/when using heavy attachments.
9. Always lower the attachment, shut off the engine, set the parking brake, engage the transmission gears, remove the key and wait for all machine movement to stop before leaving the operators platform.
10. If the attachment or machine should become obstructed or plugged; set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to removing the obstruction or plug.
11. Never disconnect or make any adjustments to the hydraulic system unless the machine and/or the attachment is lowered to the ground or the safety lock(s) is in the engaged position.
12. Use of the flashing lights is highly recommended when operating on a public road.
13. When transporting on a road or highway, use accessory lights and devices for adequate warning to the operators of other vehicles. In this regard, check local government regulations. Various safety lights and devices are available from your CASE IH AGRICULTURE dealer.
14. Practice safety 365 days a year.
15. Keep all your equipment in safe operating condition.
16. Keep all guards and safety devices in place.
17. Always set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to service the machine and attachment.
18. Remember: A careful operator is the best insurance against an accident.
19. Extreme care should be taken in keeping hands and clothing away from moving parts.

Safety rules

All repair and maintenance works listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given; and using, whenever possible, the special tools.

Anyone who carries out the above operations without complying with the procedures shall be responsible for the subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages due to the anomalous behavior of parts and/or components not approved by the manufacturer himself, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages due to an anomalous behavior of parts and/or components not approved by the manufacturer.

The information in this manual is up-to-date at the date of the publication. It is the policy of the manufacturer for continuous improvement. Some information could not be updated due to modifications of a technical or commercial type, as well as to suit the laws and regulations of different countries.

In case of questions, refer to your Sales and Service Networks.

Click on the image link below for the full version of the service manual

