

CX I30B **CX I30B Forestry Machine** Crawler Excavator

SERVICE MANUAL

Part number 47915915

English

July 2015

© 2015 CNH Industrial Italia S.p.A. All Rights Reserved.

CASE
CONSTRUCTION

CRAWLER EXCAVATOR CX130B

CRAWLER EXCAVATOR CX130B Forestry Machine

SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°
1 GENERAL INFORMATION	
Safety, general information and standard torque data	1001
General specifications and special torque setting	1002
General specifications and special torque setting (Forestry Machine).....	1002
2 ENGINE	
Removal and installation of the engine.....	2000
Removal and installation of the fuel cooler, engine inter-cooler, radiator and oil cooler.....	2001
Removal and installation of the turbo charger	2004
Removal and installation of EGR cooler and EGR valve	2005
Removal and installation of the engine hood.....	2006
Engine specifications.....	*
Disassembly and assembly of the engine	*
3 FUEL SYSTEM	
Removal and installation of the fuel tank.....	3001
Removal and installation of the supply pump and common rail	3004
Removal and installation of the injectors	3005
Fuel engine system	*
4 ELECTRICAL SYSTEM	
Electrical and engine functions and service support	4001
Removal and installation of the starter motor	4004
Removal and installation of the alternator	4005
Electrical equipment and electrical circuit diagrams.....	4020
Electrical equipment and electrical circuit diagrams (Forestry Machine).....	4020
Engine error code (DTC)	4021
Main body error code (DTC).....	4022
Troubleshooting, 4JJ1 engine.....	4023
5 UNDERCARRIAGE	
Removal and installation of tracks	5001
Removal and installation of tracks (Forestry Machine).....	5001
Rollers	5003
Rollers (Forestry Machine).....	5003
Take-up roller	5005
Take-up roller (Forestry Machine).....	5005
6 DRIVE TRAIN	
Removal and installation of the drive motor and final drive transmission.....	6001
Disassembly and assembly of the drive motor and final drive transmission.....	6002
Disassembly and assembly of the drive motor and final drive transmission (Forestry Machine).....	6002
Removal and installation of the swing motor and swing reduction gear	6003
Disassembly and assembly of the swing reduction gear	6004
7 UNDERCARRIAGE HYDRAULICS	

* Consult the Engine Service Manual

8 UPPERSTRUCTURE HYDRAULICS

Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components.....	8000
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001
Specifications, troubleshooting, checks and hydraulic pressure settings (Forestry Machine).....	8001
Removal and installation of the hydraulic reservoir	8002
Removal and installation of the main hydraulic pump.....	8003
Removal and installation of the main hydraulic control valve.....	8004
Removal and installation of the attachment cylinders.....	8005
Removal and installation of the hydraulic swivel.....	8006
Removal and installation of the pilot blocs.....	8007
Disassembly and assembly of the main hydraulic pump	8010
Disassembly and assembly of the main hydraulic pump (Forestry Machine).....	8010
Disassembly and assembly of the main hydraulic control valve	8011
Disassembly and assembly of the attachment cylinders	8012
Disassembly and assembly of the attachment cylinders (Forestry Machine).....	8012
Disassembly and assembly of the hand control levers	8013
Disassembly and assembly of the foot control levers	8014
Disassembly and assembly of the cushion valve.....	8016
Removal and installation of the safety valve	8017
Disassembly and assembly of the swing motor	8019
Hydraulic functions	8020
Hydraulic functions (Forestry Machine).....	8020
Hydraulic component functions.....	8030
Hydraulic component functions (Forestry Machine).....	8030

9 UPPERSTRUCTURE

Removal and installation of the counterweight	9002
Removal and installation of the boom, dipper and bucket	9003
Removal and installation of the seat.....	9004
Removal and installation of the cab and cab equipment	9005
Air conditioner functions and troubleshooting.....	9006
Air conditioning unit	9007
Air conditioning components.....	9009
Large size hydraulic schematics.....	Pocket
Large size hydraulic schematics (2PC).....	Pocket
Large size electrical schematics.....	Pocket

NOTE: CNH Industrial reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section

1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

GENERAL INFORMATION 3

SAFETY 4

STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS..... 6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

GENERAL INFORMATION

Cleanning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. DO NOT DRY BEARINGS WITH COMPRESSED AIR.

Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

SAFETY



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier



WARNING: Read the operator's manual to familiarize yourself with the correct control functions.



WARNING: Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.



WARNING: This is a one man machine, no riders allowed.



WARNING: Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on machine operation, service and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your Case dealer.



WARNING: If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.



WARNING: When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.



WARNING: When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.



WARNING: When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.



WARNING: Use insulated gloves or mittens when working with hot parts.



WARNING: Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service.



WARNING: Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks, use a piece of cardboard or wood.



WARNING: When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.



WARNING: When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).



WARNING: Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands.



WARNING: When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times.



WARNING: Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual.



WARNING: Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area.




WARNING: When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured.

STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS

Tightening of cap screws, nuts

Tighten alternately so that tightening torque can be applied evenly. The numbers in the figure below indicate the order of tightening.

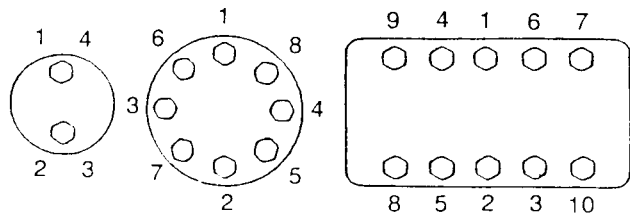

JS00481A

Cap screws which have had Loctite used (white residue remains after removal) should be cleaned with loght oil or suitable cleaning solvent and dried. Apply 2-3 drops of Loctite to the thread portion of the cap screw and then tighten.

Torque table

Tighten cap screws and nuts according to the table below if there are no other special instructions.

Cap Screw Name Size (Size)			M6	M8	M10	M12	M14	M16	M18	M20
Cap Screw	Spanner	[mm]	10	13	17	19	22	24	27	30
		[in.]	0.39	0.51	0.67	0.75	0.87	0.95	1.06	1.18
	Tightening torque	[Nm]	6.9	19.6	39.2	58.8	98.1	156.9	196.1	294.2
		[lb-ft]	5.1	14.5	28.9	43.4	72.3	115.7	144.6	217
Socket Head Cap Screw	Spanner	[mm]	5	6	8	10	12	14	14	17
		[in.]	0.20	0.24	0.32	0.39	0.47	0.55	0.55	0.67
	Tightening torque	[Nm]	8.8	21.6	42.1	78.5	117.7	176.5	245.2	343.2
		[lb-ft]	6.5	15.9	31.1	57.9	86.9	130.2	181	253.2

Section 1002

SPECIFICATIONS AND SPECIAL TORQUE SETTINGS

TABLE OF CONTENTS



WARNING: *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message which follows. Your safety depends on it.*

TYPE, SERIAL NUMBER
AND YEAR OF MANUFACTURE OF THE MACHINE..... 4

Machine 4

Engine 4

Serial numbers of the components 4

FLUIDS AND LUBRICANTS 5

Hydraulic fluid 5

Transmission component oil 5

Grease 5

Engine Oil 6

Engine fuel, maintenance of fuel filters and fuel storage 7

Anti-freeze/Anti-corrosion..... 9

Environment 9

Plastic and resin parts..... 9

SPECIFICATIONS 10

Main data 10

Performance 10

Complete machine dimensions 10

Main body dimensions 11

Engine 12

Cooling system 12

Capacity of coolant and lubricants 12

Air conditioning 12

Hydraulic oil filter..... 12

Fuel filter 12

Operating devices 13

Hydraulic system..... 14

Swing unit 19

Travel lower body..... 19

Work Unit 20

Digging force (ISO 6015) 21


COMPONENT WEIGHT	22
Major component weight (CX130B)	22
Other component weight.....	23
DIMENSIONS AND WEAR LIMIT OF THE TRACK ASSEMBLY	25
Sprocket.....	25
Idler wheel	26
Upper roller	27
Lower roller	28
Track.....	29
DIMENSIONS AND WEAR LIMITS OF ATTACHEMENT MOBILE JOINTS	30
1. Boom foot/Frame	30
2. Boom cylinder foot/Frame.....	31
3. Boom cylinder head/Boom.....	31
4. Dipper cylinder foot/Boom	32
5. Boom/Dipper	32
6. Dipper cylinder head/Dipper	33
7. Bucket cylinder foot/Dipper	33
8. Connecting rod/Dipper	34
9. Compensator/Bucket	34
10. Connecting rod/Compensator/Bucket cylinder head	35
11. Dipper/Bucket	36
SPECIAL TORQUE SETTINGS.....	37
MACHINE OVERALL DIMENSIONS	41

**TYPE, SERIAL NUMBER
AND YEAR OF MANUFACTURE OF THE MACHINE**

For all part orders, request for information or assistance, always specify the type and the serial number of the machine to your Case dealer.

Fill in the following lines with the required information: Type, serial number, year of manufacture of the machine and the serial numbers of the hydraulic and mechanical components.

Machine

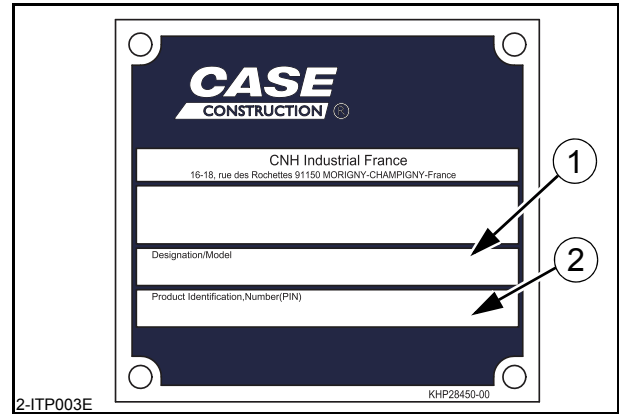

(1) Designation/Model.....

(2) Serial number.....

Engine

Make and type

Serial number

Serial numbers of the components

Hydraulic pump

Swing reduction gear.....

Travel reduction gears

Control valve.....

FLUIDS AND LUBRICANTS

Lubricants must have the correct properties for each application.



WARNING: The conditions of use for individual fluids and lubricants must be respected.

Hydraulic fluid

CASE/AKCELA hydraulic fluid is specially designed for high pressure applications and for the CASE hydraulic system. The type of fluid to be used depends on the ambient temperature.

Temperate climates: -20°C to +40°C (-4° to 104° F)

CASE/AKCELA: HYDRAULIC EXCAVATOR FLUID (MS 1230. ISO VG 46. DIN 51524 PART 2 HV)

Hot climates: 0°C to +50°C (32° to 122° F)

CASE/AKCELA: AW HYDRAULIC FLUID 68 HV (MS 1216. ISO VG 68. DIN 51524 PART 3 CATEGORY HVLP)

Cold climates: -25°C to +20°C (-13° to 68° F)

CASE/AKCELA: AW HYDRAULIC FLUID 32 (MS 1216. ISO VG 32. DIN 51524 PART 2)

Biodegradable fluid: -30°C to +40°C (-22° to 104° F)

This yellow-colored fluid is miscible with standard fluid. If used to change standard fluid, it is advised to drain the circuit completely before refilling with this fluid.

CASE/AKCELA: HYDRAULIC EXCAVATOR FLUID BIO (MS 1230. ISO VG 46. DIN 51524 PART 2 HV)

Transmission component oil

Extreme pressure oil used for enclosed transmission components.

CASE/AKCELA: GEAR 135H EP (SAE 80W-90. API GL 5. MIL-L-2105 D. MS 1316. ZF TE-ML 05A)

Grease

CASE/AKCELA: MOLY GREASE 251H EP-M (251H EP-M. NLGI 2)

"Extreme Pressure" multipurpose grease with lithium soap and molybdenum disulphide.

CASE/AKCELA: MULTIPURPOSE GREASE 251H EP (251H EP. NLGI 2)

"Extreme Pressure" multipurpose grease with lithium soap and calcium.

CASE/AKCELA: PREMIUM GREASE EP2 (NLGI 2)

"Extreme Pressure" multipurpose grease with lithium soap.


Hydraulic breakers

CASE/AKCELA: MULTIPURPOSE GREASE 251H EP (NLGI 2).

Engine Oil


THE CASE/AKCELA No. 1 engine oil is recommended for your engine. This oil ensures proper lubrication of your engine for all operating conditions.

If the CASE/AKCELA Multigrade "No. 1 ENGINE OIL" cannot be obtained, use the oil corresponding to one of the following categories: ACEA E7. API CI-4.

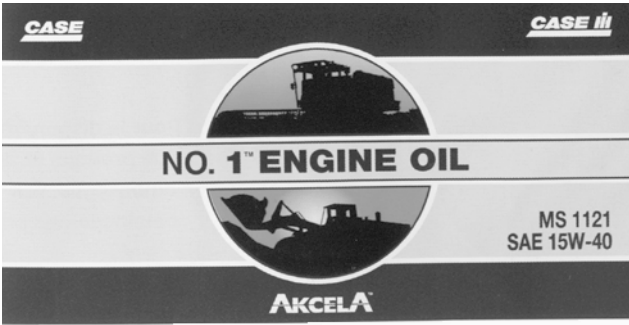

CP02N001

Oil viscosity / Oil range

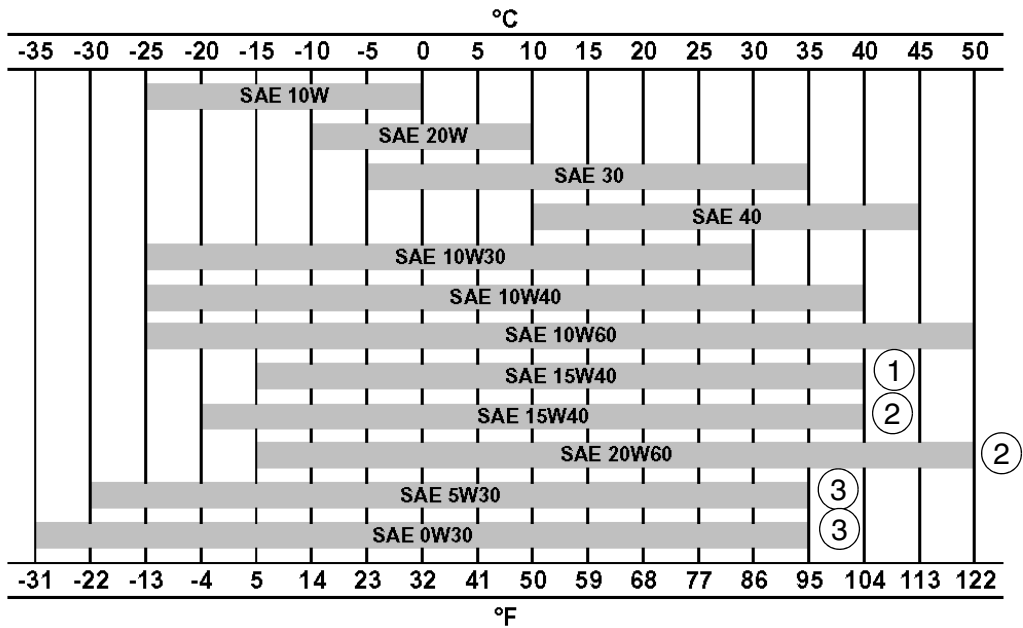

CT02M001

- (1) With mineral base
- (2) With semi-synthetic base
- (3) With synthetic base

Click on the image link below for the full
version of the service manual

