
JXU SERIES REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	3
SECTION 21 - FRONT TRANSMISSION	4
SECTION 23 - 4WD TRANSFER BOX	6
SECTION 25 - MFD AXLE	7
SECTION 27 - REAR TRANSMISSION	7
SECTION 31 - POWER TAKE-OFF	8
SECTION 33 - BRAKES	9
SECTION 35 - HYDRAULIC SYSTEMS	10
SECTION 41 - STEERING	13
SECTION 44 - WHEEL AXLES (2WD)	14
SECTION 55 - ELECTRICAL SYSTEMS	14
SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS	20

The following pages are the collation of the contents pages from each section and chapter of the JXU Series Repair manual. Complete Repair part # 87020289.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JXU Series Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87020290

Chapter 1 - General Information

CONTENTS

Description	Page
General Instructions	1

SECTION 10 - ENGINE

BOOK 1 - 87020290

Chapter 1 - Engine

CONTENTS

Description	Page
General specifications	2
Main specifications	5
Torque Values	13
Tools	14
Cross-sectional views	16
Lubrication diagram	18
Cooling system diagram	19
Troubleshooting	20
Engine. Removal-Installation	25
Engine. Compression test	40
Engine. Disassembly-Assembly	41
Coolant pump and generator drive belt. Tension adjustment	65
Engine. Checks, dimensions and repairs	66
Valve guides. Replacement	82
Front engine oil seal. Removal-Installation	86
Valve/rocker arm clearance adjustment	89
Coolant pump. Removal-Installation	92
Coolant pump. Overhaul	95
Thermostat valve. Removal-Installation	96
Radiator. Removal-Installation	100

SECTION 10 - ENGINE

BOOK 1 - 87020290

Chapter 2 - Fuel Injection System

CONTENTS

Description	Page
General specifications	3
Fuel system data	4
Torque Values	13
Tools	13
Injector sleeve. Replacement	14
Engine injectors. Removal-Installation	16
Bosch injection pump. Removal-Installation	19
Bosch injection pump. Timing	24
Bosch injection pump. Air bleed	26

SECTION 18 - CLUTCH

BOOK 1 - 87020290

Chapter 1 - Clutch

CONTENT

Description	Page
Clutches. General specifications	3
Torque Values	4
Tools	4
Cross-sectional views	5
Troubleshooting	6
Clutch. Removal-Installation	7
Dual clutch 12"/12". Test bench overhaul	19
Checks, dimensions and repairs	23
Adjustments	25

SECTION 21 - FRONT TRANSMISSION

BOOK 2 - 87020291

Chapter 1 - Transmission with Range Gear (12x4)

CONTENT

Description	Page
Transmission and range gear. Main specifications	3
Torque Values	4
Tools	5
Cross-sectional views	7
Description and operation	10
Troubleshooting	10
Disassembly-Assembly	See Section 27, Chapter 1

SECTION 21 - FRONT TRANSMISSION

BOOK 2 - 87020291

Chapter 2 - Transmission with Range Gear and Shuttle (12x12)

CONTENT

Description	Page
Transmission with range gear and shuttle. Main specifications	3
Torque Values	4
Tools	5
Cross-sectional views	5
Description and Operation	7
Troubleshooting	7
Clutch-shuttle casing. Disassembly-Assembly	8

SECTION 21 - FRONT TRANSMISSION

BOOK 2 - 87020291

Chapter 3 - Transmission with Shuttle and Creeper (20x12)

CONTENT

Description	Page
Main specifications	3
Torque Values	4
Tools	5
Cross-sectional views	7
Description and Operation	9
Troubleshooting	9
Clutch-shuttle casing and creeper. Disassembly-Assembly	10

SECTION 21 - FRONT TRANSMISSION

BOOK 2 - 87020291

Chapter 4 - 2 Speed Power Shift (24x12)

CONTENT

Description	Page
Main specifications	3
Torque Values	5
Tools	6
Cross-sectional views	7
Description and Operation	10
Troubleshooting	16
Clutch casing with 2 Speed Power Shift. Removal-Installation	18
Clutch casing with 2 Speed Power Shift. Disassembly-Assembly	27
2 Speed Power Shift control valve. Removal-Installation	36
2 Speed Power Shift control valve. Disassembly-Assembly	40
2 Speed Power Shift solenoid valve. Removal-Installation	42
2 Speed Power Shift tie-rod adjustment	46

SECTION 21 - FRONT TRANSMISSION

BOOK 2 - 87020291

Chapter 5 - Power Shuttle with 2 Speed Power Shift Function (24x24)

CONTENT

Description	Page
Main specifications	3
Torque Values	5
Tools	7
Cross-sectional views	9
Description and Operation	12
Clutch casing. Disassembly-Assembly	13
Clutch (A). Disassembly-Assembly	20
Clutch (B). Disassembly-Assembly	22
Fault codes decoding	23
Calibrations	24
First start-up	43
Troubleshooting	44

SECTION 23 - 4WD TRANSFER BOX

BOOK 2 - 87020291

Chapter 1 - 4WD Transfer Box

CONTENT

Description	Page
Main specifications	3
Torque Values	4
Tools	4
Cross-sectional views	5
Description of operation and hydraulic diagrams	6
Troubleshooting	7
Removal-Installation	8
Disassembly-Assembly	13

SECTION 25 - MFD AXLE

BOOK 3 - 87020292

Chapter 1 - Front Mechanical Axle

CONTENT

Description	Page
Main specifications	3
Torque Values	5
Tools	7
Cross-sectional views	10
Description of operation	13
Troubleshooting	15
Front axle. Removal-Installation	16
Front axle. Disassembly - Assembly - Overhaul	20
Front axle differential. Overhaul	41
Front epicyclic final drive without brake. Disassembly-Assembly	42
Wheel hub seal without brake Replacement	45
Front epicyclic final gear with brake. Disassembly-Assembly	46
Wheel hub seal with brake. Replacement	48
Leading wheels. Toe-in check	49

SECTION 27 - REAR TRANSMISSION

BOOK 3 - 87020292

Chapter 1 - Rear Mechanical Transmission

CONTENT

Description	Page
Main specifications	3
Torque Values	4
Tools	6
Cross-sectional views	12
Description and Operation	17
Troubleshooting	18

SECTION 27 - REAR TRANSMISSION

BOOK 3 - 87020292

Chapter 1 - Rear Mechanical Transmission (Continued)

CONTENT

Description	Page
Gearbox-transmission casing. Removal-Installation	20
Platform. Removal-Installation	41
Gearbox-transmission casing. Disassembly-Assembly and adjustments	49
Adjustment - differential lock control pedal travel	68
Final drive casing. Removal-Installation	69
Drive wheel shaft. Disassembly-Assembly	72
Epicyclic reduction unit. Disassembly-Assembly	74

SECTION 31 - POWER TAKE-OFF

BOOK 3 - 87020292

Chapter 1 - Mechanical Power Take-Off

CONTENT

Description	Page
Main specifications	3
Tools	5
Torque Values	6
Cross-sectional views	7
Description of operation	9
Troubleshooting	10
Power take-off. Removal-Installation	11
Power take-off. Test bench overhaul	14

SECTION 31 - POWER TAKE-OFF

BOOK 3 - 87020292

Chapter 2 - Electro-Hydraulic PTO

CONTENT

Description	Page
Main specifications	3
Tools	6
Torque Values	7
Cross-sectional views	8
Description, operation and hydraulic diagrams	14
Troubleshooting	24
Power take-off. Removal-Installation	25
Power take-off. Disassembly-Assembly	29
Power take-off clutch brake. Replacement	36
Services control valve. Removal-Installation	38
Services control valve for tractors without 2 Speed Power Shift. Disassembly-Assembly	41

SECTION 33 - BRAKES

BOOK 3 - 87020292

Chapter 1 - Brakes

CONTENT

Description	Page
Main specifications	3
Torque Values	4
Cross-sectional views	5
Tools	6
Description and Operation	7
Troubleshooting	8
Removal-Refitting service brakes	9
Removal-Refitting service brakes pump	14
Brake hydraulic system air bleeding	16
Removal-Refitting - Parking brake mobile sectors support overhaul	17
Handbrake control travel adjustment	20

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 4 - 87020293

Chapter 1 - Mechanical Rear Hydraulic Lift

CONTENT

Description	Page
Main specifications	3
Torque Values	8
Tools	10
Cross-sectional views	11
Description and Operation	13
Troubleshooting	17
Lift Removal-Refitting	19
Lift Disassembly-Assembly-Adjustments	26
Removal-Refitting - Lift pressure relief valve calibration	40
Lift control valve Removal-Refitting	41
Lift pressure relief valve Disassembly-Assembly	43
Lift pump Disassembly-Assembly	48

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 4 - 87020293

Chapter 2 - Auxiliary Control Valves

CONTENT

Description	Page
Main specifications	3
Tools	3
Tightening Torques	4
Description and operation	5
Auxiliary control valve components	7
Control valve inter-connection	11
Lifting oil flow (Cylinder extension)	12

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 4 - 87020293

Chapter 2 - Auxiliary Control Valves (Continued)

CONTENT

Description	Page
Lowering oil flow (Cylinder retraction)	14
Neutral oil flow	15
Float mode oil flow	16
Automatic release pressure regulating valve operation	17
Operation of two or more control valves simultaneously	19
Auxiliary control valves. Removal-Refitting	21
Auxiliary control valves. Disassembly-Assembly	24

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 4 - 87020293

Chapter 3 - Trailer Brakes Auxiliary Control Valve

CONTENT

Description	Page
Cross-sectional views	3
Description and Operation	3
Trailer brakes control valve hydraulic circuit diagram	4
Functional testing and troubleshooting	11

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 4 - 87020293

Chapter 4 - Supplementary Cylinder

CONTENT

Description	Page
Main specifications	3
Cross-sectional views	3
Description and Operation	3
Removal - Installation - Overhaul	4

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 4 - 87020293

Chapter 5 - Electronically Controlled Hydraulic Lift

CONTENT

Description	Page
Main specifications	2
Tightening Torques	5
Tools	5
Details of electronic lift components	6
Description and Operation	9
Electronically controlled hydraulic lift. Removal - Installation	13
Lift electronic control unit. Replacement	19
Electronic lift control knob Removal-Installation	20
Lift arm potentiometer. Replacement	21
Draft sensor. Removal - Installation	22
Hydraulic control valve. Removal - Installation	24
Electronic lift calibration	26
Faults code decoding	28
Troubleshooting	29

SECTION 41 - STEERING

BOOK 4 - 87020293

Chapter 1 - Steering System

CONTENT

Description	Page
Main specifications	3
Tightening Torques	5
Components and operating diagrams	6
Troubleshooting	11
Tools	12
Power steering control valve - Removal-Refitting	13
Power steering control valve - Removal-Refitting	19
Power steering control valve - Bench testing	33
Hydrostatic steering oil pump - Disassembly-Assembly	35

SECTION 41 - STEERING

BOOK 4 - 87020293

Chapter 2 - Steering Cylinder

CONTENT

Description	Page
Front axle steering cylinder - Removal-Installation	3
Front axle steering cylinder - Removal-Installation	4

SECTION 44 - WHEEL AXLES (2WD)

BOOK 4 - 87020293

Chapter 1 - Axles and Wheels

CONTENT

Description	Page
Main specifications	3
Cross-sectional views	5
Torque Values	6
Tools - Troubleshooting	7
Removal-Installation	8
Front axle hub Disassembly-Assembly	11
Stub axle Overhaul	14
Checking leading wheels alignment	18

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87020294

Chapter 1 - Instrument Cluster

CONTENTS

Description	Page
Analog instruments	3
Transmitters, sensors and switches	6
Maintenance	14
Electronic instruments	15
Troubleshooting	19

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87020294

Chapter 2 - Components

CONTENTS

Description	Page
Dashboard controls	3
Operating controls, right-hand side	9
Electronic lift control panel	10
Cab controls	11
Control on right-hand cab upright	13
External controls	15
Maintenance	16

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 5 - 87020294

Chapter 3 - Starting System

CONTENT

Description	Page
Specifications	3
Tightening Torques	3
Description and Operation	4
Troubleshooting	6
System testing	7
Removal and Installation	9
Bench testing	12

Click on the image link below for the full version of the service manual

