

**788/988 - 788/988 Plus Crawler Excavators**  
**788/988 - 788/988 Plus Wheeled Excavators**  
**Table of Contents**

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general and torque settings .....	1001	7-56942GB
Specifications (Crawler excavators).....	1002	7-80071GB
Specifications (Wheeled excavators).....	1002	7-80062GB
<b>2 ENGINE</b>		
Engine removal and installation (788 - 988 - 988 Plus .....	2002	7-58681GB
Engine removal and installation (788 Plus).....	2002	7-26560GB
Radiator and oil cooler .....	2003	7-80621GB
Engine specifications .....	2401	**
Cylinder head and valve assembly .....	2415	**
Engine block .....	2425	**
Lubrication system .....	2445	**
Cooling system .....	2455	**
Turbocharger.....	2465	**
Turbocharger failure analysis.....	2565	**
<b>3 FUEL SYSTEM</b>		
Fuel system and filter .....	3410	**
CAV injection pump.....	3411	**
BOSCH injection pump .....	3412	**
Fuel injector .....	3412	**
BOSCH ANEROID fuel injection pump.....	3416	**
<b>4 ELECTRICAL SYSTEM</b>		
Electrical schematic (Crawler excavators) - (before November 1999).....	4001	7-80040GB
Electrical schematic (Wheeled excavators) - (before November 1999).....	4001	7-80021GB
Electrical schematic (Crawler excavators) - (November 1999 and after).....	4001	7-26570GB
Electrical schematic (Wheeled excavators) - (November 1999 and after).....	4001	7-26540GB
Electronic system and troubleshooting (Crawler excavators) .....	4002	7-80031GB
Electronic system and troubleshooting (Wheeled excavators) .....	4002	7-80051GB
Starter motor .....	4003	7-58691GB
Alternator .....	4004	7-58701GB
Powersensor diagnostic tool .....	4010	7-79991GB
<b>5 UNDERCARRIAGE</b>		
Track group (Crawler excavators).....	5002	7-58711GB
<b>6 DRIVE TRAIN</b>		
Travel reduction gear and brake (Crawler excavators) .....	6002	7-80661GB
Swing reduction gear and brake (788 - 788 Plus).....	6003	7-80671GB
Swing reduction gear and brake (988).....	6003	7-58731GB
Swing reduction gear and brake (988 Plus).....	6003	7-84141GB
Front axle and service brake (Wheeled excavators).....	6004	7-80681GB
Rear axle and service brake (Wheeled excavators) .....	6005	7-80691GB
Gearbox and parking brake (Wheeled excavators) .....	6008	7-80701GB
Twin wheels (Wheeled excavators) .....	6020	7-26170GB

\* \* Consult the engine Service Manual.

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
Hydraulic travel motor (Mono-speed crawler excavators).....	7002	7-80711GB
Hydraulic travel motor (Two-speed crawler excavators) .....	7003	7-80721GB
Hydraulic travel motor (Wheeled excavators) .....	7003	7-80731GB
Travel control valve (Crawler excavators).....	7030	7-80741GB
Travel, stabilizer and dozer blade control valve (wheeled excavators) .....	7031	7-84151GB
Steering, stabilizer, dozer blade and front axle locking cylinders (wheeled excavators ) .....	7080	7-84161GB
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Hydraulic inspection, adjustment and schematics (crawler excavators) .....	8001	7-24590GB
Hydraulic inspection, adjustment and schematics (wheeled excavators) .....	8001	7-24580GB
Hydraulic swivel (Crawler excavators) .....	8011	7-80791GB
Hydraulic swivel (Wheeled excavators) .....	8011	7-80801GB
Hydraulic pumps (788 - 788 <i>Plus</i> ).....	8020	7-80211GB
Hydraulic pumps (988 - 988 <i>Plus</i> ).....	8020	7-58862GB
Hydraulic swing pump.....	8021	7-21700GB
Attachment control valve.....	8031	7-80821GB
Swing control valve .....	8033	7-80831GB
Rotary control valve (Orbitrol) (Wheeled excavators) .....	8037	7-80841GB
Hydraulic swing motor and forced-feed safety block .....	8040	7-80851GB
Attachment and swing control block .....	8050	7-80261GB
Travel and option control block (Foot pedal, Wheeled excavators).....	8051	7-80270GB
Travel hand control block (Inching, wheeled excavators) .....	8052	7-80870GB
Direction of travel inverter control block (Inching, crawler excavators).....	8053	7-80290GB
Travel control block (788 - 788 <i>Plus</i> 988 - 988 <i>Plus</i> wheeled excavators) .....	8054	7-80301GB
Brake module (wheeled excavators).....	8060	7-80882GB
Parking brake electro-control valve (wheeled excavators) .....	8061	7-80952GB
Electro-control valve block (Crawler excavators).....	8070	7-80321GB
Electro-control valve block (wheeled excavators).....	8071	7-84191GB
Selector block (788 <i>Plus</i> ) .....	8072	7-26650GB
Attachment cylinders.....	8080	7-84201GB
Safety valve .....	8081	7-26640GB

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>9 UPPERSTRUCTURE</b>		
Upperstructure and turntable bearing .....	9002	7-58932GB
Cab .....	9004	7-58191GB
Large format hydraulic and electrical schematics (788 crawler excavators) - (before November 1999) .....	Pocket	7-80190GB
Large format hydraulic and electrical schematics (788 wheeled excavators) - (before November 1999) .....	Pocket	7-80200GB
Large format hydraulic and electrical schematics (988 crawler excavators) - (before November 1999) .....	Pocket	7-58980GB
Large format hydraulic and electrical schematics (988 wheeled excavators) - (before November 1999) .....	Pocket	7-58970GB
Large format hydraulic and electrical schematics (788 <i>Plus</i> crawler excavators) - (November 1999 and after) .....	Pocket	7-26730GB
Large format hydraulic and electrical schematics (788 <i>Plus</i> wheeled excavators) - (November 1999 and after) .....	Pocket	7-26760GB
Large format hydraulic and electrical schematics (988 <i>Plus</i> crawler excavators) - (November 1999 and after) .....	Pocket	7-26770GB
Large format hydraulic and electrical schematics (988 <i>Plus</i> wheeled excavators) - (November 1999 and after) .....	Pocket	7-26780GB



# Section 1001

**SAFETY, GENERAL INFORMATION  
AND TORQUE SPECIFICATIONS**

## TABLE OF CONTENTS

SAFETY.....	3
TWIN WHEELS .....	5
Safety rules .....	5
Safety instructions .....	5
GENERAL INFORMATION .....	6
CORRECT USE OF TORQUE WRENCHES .....	7
HARDWARE TIGHTENING ORDER .....	8
STANDARD SCREW A TORQUE SPECIFICATIONS.....	9
Correct screw identification .....	9
METAL CAP REFERENCES.....	10
PLASTIC PLUG AND CAP REFERENCE CHART .....	11

## SAFETY



**WARNING:** This symbol means **WARNING ! BE VIGILANT ! YOUR SAFETY IS AT RISK**. The message that follows the symbol contains important safety information. Read it carefully. Be sure you understand the possible risks of injury or even death.

To avoid all risks, always follow the safety notes contained in this section and throughout this manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags, Part Number 321-4614, are available from your service parts supplier.



PDG0328



**WARNING:** Read the Operator's Manual carefully and make sure you understand how to operate the controls correctly.



**WARNING:** Never operate the machine and attachment controls unless you are seated in the operator's seat. If you are not in the operator's seat, you run the risk of serious injury.



**WARNING:** The machine is built to carry the operator only. Do not allow passengers to ride on the machine.



**WARNING :** Prior to starting up the engine read the safety messages contained in the operator's manual carefully. Read all safety stickers on the machine. Have people move back from the machine. Learn how to use the controls before starting up the machine. It is your responsibility to follow the manufacturer's instructions on how to operate and maintain the machine. It is your responsibility to follow applicable rules and regulations. Service and Operator's Manuals are available from your J.I. Case Dealer.



**WARNING:** If you wear loose clothing or if you omit to use safety equipment for your work, you risk injury. Always wear clothes that do not risk getting caught in the machine. Other safety equipment may be necessary, in particular : helmets, safety shoes, ear plugs, safety glasses, protection mask, thick gloves and reflecting clothes.



**WARNING:** When working close to the fan with the engine running, avoid wearing loose clothing and operate with extreme caution.



**WARNING:** When checking the hydraulic circuits, follow procedures to the letter. **DO NOT CHANGE** procedures.



**WARNING:** Prior to operating the hydraulic cylinders of this machine for setting or to bleed the circuit, have all people standing around the machine move away.



**WARNING:** Wear gloves or insulated mittens when working on hot parts.



**WARNING:** Lower all attachments to the ground or rest them on stands before carrying out maintenance jobs.



**WARNING:** Fine sprays of hydraulic oil under pressure can penetrate the skin and cause serious infection. If hydraulic oil under pressure penetrates the skin, see a doctor immediately. Maintain all hoses and pipes in good condition. Make sure that all connections are properly tightened. Change all hoses or pipes that have been damaged or that are suspect. **DO NOT CHECK** for leaks with bare hands. Use a piece of cardboard or wood.



**WARNING:** To remove a hardened pin such as a pivot pin, or a hardened shaft, use a soft head hammer (brass or bronze) or a brass or bronze strip and a steel head hammer.



**WARNING:** When using a hammer to remove or reassemble pivot pins, or when using compressed air, or when using a grinder make sure to wear safety glasses that protect the eyes from all sides.



**WARNING:** Use proper lifting/hoisting equipment to lift wheels or tracks and always work on safe ground. Prevent the machine from moving using correct safety chocks.



**WARNING:** When performing maintenance or repair operations on the machine, make sure that the work shop floor, the cab and the steps of the excavator are free from oil, water, grease, tools etc. Use oil absorbing material or rags as necessary. Always think safety.



**WARNING:** Certain components of this machine are very heavy. Use hoisting tools or additional assistance as recommended in this manual.



**WARNING:** Exhaust fumes can cause death. If it is necessary to start up the engine in a closed building, evacuate exhaust fumes using an exhaust pipe extension. Open the doors and let fresh air into the building.



**WARNING:** When battery liquid is frozen, the battery can explode if : (1) you try to charge the battery or (2) you try to start the engine by connecting an auxiliary power source. To prevent battery electrolyte from freezing keep the battery fully charged. If you do not follow these instructions, you or others nearby may be injured.



**WARNING:** Batteries contain acid and explosive gases. A spark, a flame or an improper cable connection may cause an explosion. For proper connection of cables to the battery of this machine see the Operator's Manual. If you do not follow these instructions, you risk severe injury.

## TWIN WHEELS

### Safety rules



**WARNING:** *In all cases, before removing twin wheels, always deflate both tyres completely.*



**WARNING:** *If a tyre bursts it can cause serious injury. Check tyres regularly to see that they are in good condition and always be sure to inflate them to the correct pressure.*



**WARNING:** *Never face a tyre when checking pressure or adding air. Always stand in front of the tread. Use an inflation cage if the wheel has been removed from the machine. Make sure all people standing in the area move well away.*



**WARNING:** *Never weld near a tyre. If this can not be avoided, it is mandatory to remove the tyre before performing any welding operations.*



**WARNING:** *Make sure that all decals on the machine are perfectly legible, clean them regularly and replace any decals which are damaged, missing or painted over, with new ones.*

### Safety instructions

- Use appropriate, good quality tools to disassemble the various wheel components. Never use a hammer. Use a rubber, plastic or copper-faced mallet.

**IMPORTANT:** *Never remove the inner tyre valve extension, as this will be necessary afterwards for inflating and deflating the tyre.*

**IMPORTANT:** *If the valve or the valve extension are no longer accessible, take the necessary precautions and then, imperatively, puncture the tyre.*

- Use suitable grease to facilitate the installation and removal of the tyre.
- Never re-inflate a tyre on the machine which has been used at a pressure lower than 5.6 bar.
- Check the various components: tyre, rim, shoulder, retaining ring and replace any defective items.
- Never reuse a retaining ring which is distorted or rusty.

## GENERAL INFORMATION

### CLEANING

Clean all metal parts except bearings with white spirit or steam. Do not use caustic soda when steam cleaning. After cleaning, dry and lubricate all parts. Clean hydraulic lines with compressed air. Clean bearings with kerosene, then dry them and lubricate them.

### INSPECTION

Check all parts when disassembled. Change all parts showing wear or damage. Scratches that are not too deep can be removed by honing or with a rag dipped into buffing compound. A full visual inspection to detect wear and pitting and subsequent changing of parts will prevent premature failure.

### BEARINGS

Check that bearings rotate freely. If their adjustment is too loose or if they do not run regularly, change them. Wash bearings with a good solvent or kerosene and let them dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

### NEEDLE BEARINGS

Before inserting needle bearings into a bore, remove all metal particles from the edge of the bore. Prior to mounting bearings with a press, coat the inside and the outside of the bearing with vaseline.

### GEARS

Check all the gears for wear or damage. Change worn or damaged gears.

### SEAL RINGS, O-RINGS, GASKETS

Always use new seal rings. O-rings and gaskets. Coat sealing rings and O-rings with vaseline.

### SHAFTS

Check all shafts showing signs of wear or damage. Check that the surface of a shaft running in a bearing is not damaged.

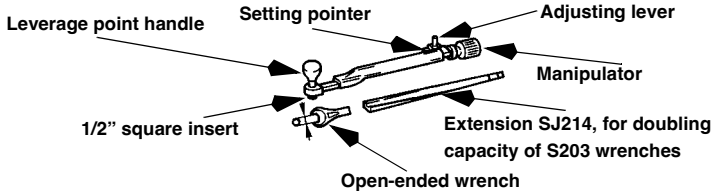
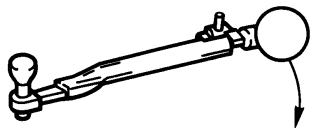
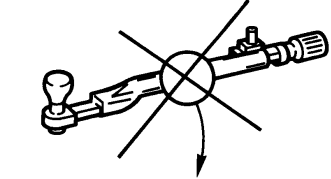
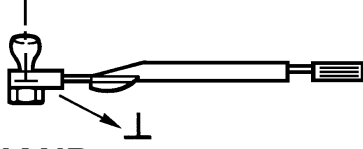
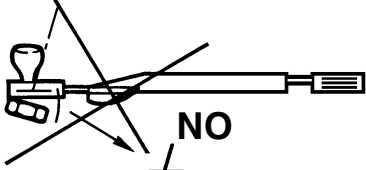
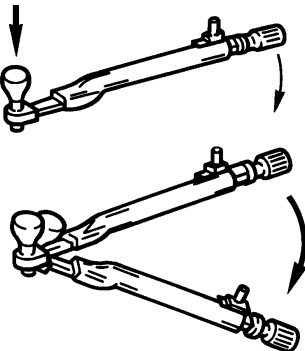
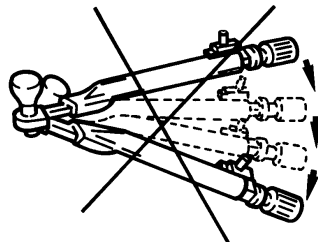
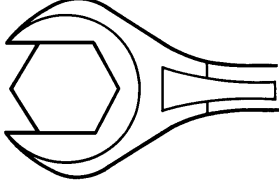
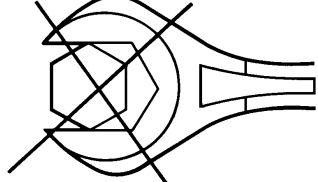
### SPARE PARTS

Always use original CASE spare parts. To order spare parts, see the Spare Parts Catalogue to indicate the proper reference of original CASE spare parts. Failures caused by the use of parts that are not original CASE spare parts are not covered by the warranty.

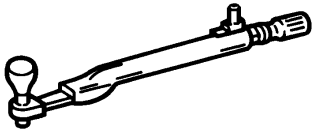
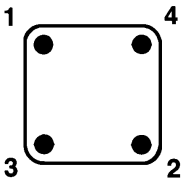
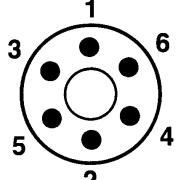
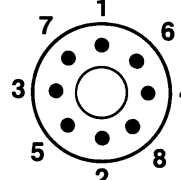
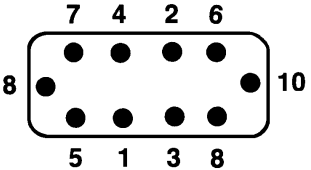
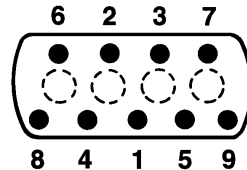
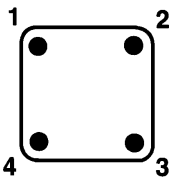
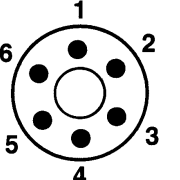
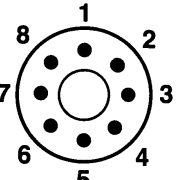
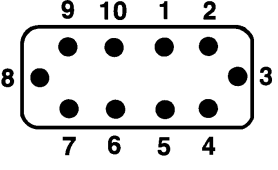
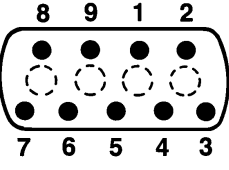
### LUBRICATION

Use only oils and lubricants specified in the Operator's and Service Manuals. Failures due to the use of oils and lubricants not specified are not covered by the warranty.

## CORRECT USE OF TORQUE WRENCHES

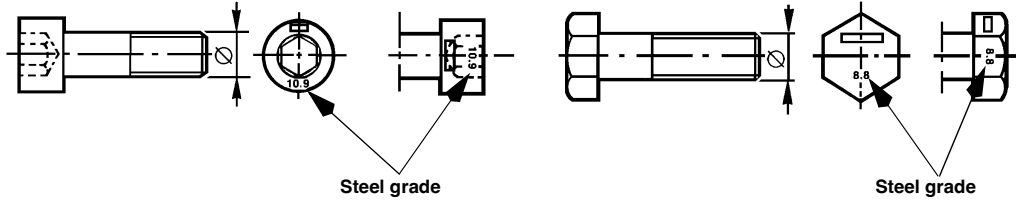
<p><b>TORQUE WRENCHES</b></p>	 <p style="text-align: right; font-size: small;">PDG0315</p>
<p><b>CORRECT USE</b></p> <p>a - Hold the wrench by the handle provided.</p> <p>b - When tightening, always keep the wrench perpendicular to the screw.</p> <p>c - Keep one hand on the leverage point handle on the wrench.</p> <p>d - Tighten progressively in one movement.</p> <p>e - Position a correctly dimensioned socket or open-ended wrench on the flats of the screw head.</p>	<div style="text-align: center; font-weight: bold; font-size: 24px; margin-bottom: 20px;">NO</div>   <div style="text-align: center; font-weight: bold; font-size: 24px; margin-bottom: 20px;">HAND</div>   <div style="text-align: center; font-weight: bold; font-size: 24px; margin-bottom: 20px;">NO</div>   <div style="text-align: center; font-weight: bold; font-size: 24px; margin-bottom: 20px;">NO</div>   <div style="text-align: center; font-weight: bold; font-size: 24px; margin-bottom: 20px;">NO</div> <p style="text-align: right; font-size: small;">PDG0316</p>

## HARDWARE TIGHTENING ORDER

 
 

 

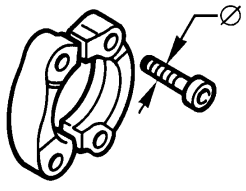
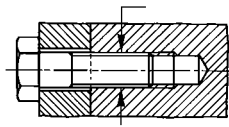
 
<p><b>TORQUE WRENCHES</b></p>	 <p style="text-align: right; font-size: small;">PDG0317</p>
<p><b>INITIAL TORQUE</b></p> <p style="margin-top: 20px;">a - Torque wrench.</p> <p style="margin-top: 10px;">- Follow the correct order of procedure when tightening.</p> <p style="margin-top: 10px;">- Cross or diagonal pattern tightening.</p>	<div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p style="text-align: right; font-size: small;">PDG0318</p>
<p><b>FINAL TORQUE</b></p> <p style="margin-top: 20px;">Always tighten in clockwise order.</p>	<div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p style="text-align: right; font-size: small;">PDG0319</p>

 

# STANDARD SCREW A TORQUE SPECIFICATIONS

## Correct screw identification



PDG0320

	Diameter x thread size Grade 8.8	 Key		Torque			
				Nm		lb.ft	
							
Two-part hydraulic connector (to SAE J518 specifications)    PDG0321	M5 x 0.8 M6 x 1 M8 x 1.5 M10 x 1.5 M12 x 1.75 M14 x 2 M16 x 2 M18 x 2.5 M20 x 2.5 M22 x 2.5 M24 x 3 M27 x 3 M30 x 3.5	4 5 6 8 10 12 14 14 17 17 - - -	8 10 13 17 19 22 24 27 30 32 36 41 46	5.5 9 22.5 45 70 100 170 250 350 500 600 900 1200	5.5 9 22.5 45 80 120 200 300 400 600 700 1000 1400	4.1 6.7 16.6 33.2 51.6 73.8 125.5 184.5 258.3 369 442.8 664.2 885.6	4.1 6.7 16.6 33.2 59 88.6 147.6 221.4 295.2 442.8 516.6 738 1033.2
Components assembled by screws and bolts <b>SCREW</b>      <b>BOLT</b>  PDG0322	<b>Grade 10.9</b> M5 x 0.8 M6 x 1 M8 x 1.5 M10 x 1.5 M12 x 1.75 M14 x 2 M16 x 2 M18 x 2.5 M20 x 2.5 M22 x 2.5 M24 x 3 M27 x 3 M30 x 3.5	4 5 6 8 10 12 14 14 17 17 - - -	8 10 13 17 19 22 24 27 30 32 36 41 46	75 12.5 35 60 100 170 250 350 500 700 900 1200 1700	75 12.5 35 70 120 200 300 400 600 800 1000 1400 1900	5.6 9.3 25.8 44.3 73.8 125.5 184.5 258.3 369 516.6 664.2 885.6 1254.6	5.6 9.3 25.8 51.6 88.6 147.6 221.4 295.2 442.8 442.8 738 1033.6 1402.2

 Zinc bichromate  
 Phosphate

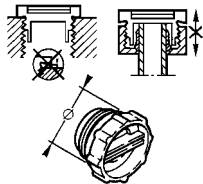
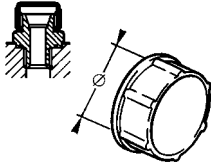
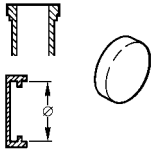
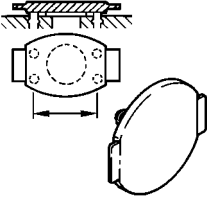
## METAL CAP REFERENCES

### To SAE J518 specifications

	NP 250 bar Ø ND	NP 400 bar Ø ND	Part number	
			A	B
<p style="text-align: center;">PDG0323</p>	13 mm	-	D5327838	E5327839
	19 mm	-	F5327840	G5327841
	25 mm	-	H5327842	J5327843
	32 mm	-	K5327844	L5327845
	38 mm	-	M5327846	N5327847
	-	13 mm	U5327830	V5327831
	-	19 mm	W5327832	X5327833
	-	25 mm	Z5327834	A5327835
	-	32 mm	B5327836	C5327837

NP = Nominal pressure  
 NP = Nominal diameter

## PLASTIC PLUG AND CAP REFERENCE CHART

	Dia. x pas	Part number	Dia. x pas	Part number
<b>Tapped orifices and connectors with tightening nuts = screw-type plugs</b>    PDG0324	M10 x 1.5 M12 x 1.5 M14 x 1.5 M16 x 1.5 M18 x 1.5	F3237416 G3237417 H3237418 J3237419 K3237420	M20 x 1.5 M22 x 1.5 M24 x 1.5 M27 x 2	L3237421 M3237422 N3237423 Q3237448
<b>Unions = Screw-type plugs</b>    PDG0325	M12 x 1.5 M14 x 1.5 M16 x 1.5 M18 x 1.5	X3237409 Z3237410 A3237411 B3237412	M20 x 1.5 M22 x 1.5 M30 x 1.5	C3237413 D3237414 E3237415
<b>S.A.E tube or hose collars = external plugs</b>    PDG0326	NP 250 bar 30.2 38.1 44.5 50.8 60.4	J2537460 K2537461 L2537462 M2537463 N2537464	NP 400 bar 31.8 41.3 47.6 54 63.6	P2537465 Q2537466 R2537467 S2537468 T2537469
<b>S.A.E orifices = caps for installation into tapped fitting orifices</b>    PDG0327	NP 250 bar L = 38.1 47.65 52.35 58.07 69.85	A2340480 B2340481 C2340482 D2340483 E2340484	NP 400 bar L = 40.5 50.8 57.15 66.7 79.4	K1640415 R1640421 S1640422 T1640423 Z1640479

NP = Nominal pressure  
 ND = Nominal diameter



# Section 1002

1002

## SPECIFICATIONS Crawler excavators

## TABLE OF CONTENTS

FLUIDS AND LUBRICANTS .....	3
Hydraulic fluid.....	3
Transmission component oil .....	3
Grease .....	3
Engine oil .....	4
Oil viscosity/Oil range .....	4
Fuel .....	5
Anti-freeze/Anti-corrosion.....	5
Environment .....	5
Components made from plastic or resin .....	5
GENERAL MACHINE SPECIFICATIONS.....	6
Engine .....	6
Hydraulic system.....	8
Electrical system .....	9
Upperstructure .....	9
Cab .....	9
Operation .....	9
Undercarriage (depending on version) .....	10
Safety devices .....	10
Indicators .....	10
Warning and indicator lamps .....	10
Attachments .....	10
Noise level .....	10
Vibration level in operator's compartment .....	10
Ground pressure .....	11
Travel .....	11
WEIGHTS.....	12
Machine .....	12
Attachments .....	15
Counterweight .....	15
Cab .....	15
788 AND 788 "PLUS" BUCKETS.....	16
988 AND 988 "PLUS" BUCKETS.....	17
788 AND 788 "PLUS" CLAMSHELLS .....	18
988 AND 988 "PLUS" CLAMSHELLS .....	19
MACHINE OVERALL DIMENSIONS.....	20
TRANSPORTATION OVERALL DIMENSIONS.....	22



**WARNING:** *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

## FLUIDS AND LUBRICANTS

Lubricants must have the correct properties for each application.



**WARNING:** *The conditions of use for individual fluids and lubricants must be respected.*

### Hydraulic fluid

CASE hydraulic fluid is specially designed for high pressure applications and for the CASE hydraulic system. The type of fluid to be used depends on the ambient temperature.

#### Temperate climates

-20°C to +40°C  
Fluid type ISO VG 46  
CASE reference: POHYDR

#### Hot climates

0°C to +60°C  
Fluid type ISO VG 100  
CASE reference: POHYDC

#### Cold climates

-40°C to +20°C  
Fluid type ISO VG 22  
CASE reference: POHYPF

These various grades of fluid must be in conformity with CASE France specification P9903201Z.

#### Temperate climate biodegradable fluid:

This yellow fluid is compatible with standard fluid. If adopted, it is advisable to drain the circuit completely.

Fluid type ISO VG 46  
CASE reference: CASYNTH46

This grade of fluid must be in conformity with CASE France specification P9903203B

### Transmission component oil

Extreme pressure oil used for transmission components inside sealed housings.

Extreme pressure oil TYPE API GL5 GRADE 80W90 or ISO VG 150

### Grease

The type of grease to use depends on ambient temperature.

#### Temperate and hot climates

-20°C to +60°C  
Extreme pressure grease EP NLGI grade 2 with molybdenum disulphide.

#### Cold climates

-40°C to +20°C  
Extreme pressure grease EP NLGI grade 0.

## Engine oil

CASE engine oil N°1 is recommended for your engine. This oil ensures correct lubrication of your engine in all working conditions.

If CASE N°1 Multiperformance or Performance engine oil is not available, use oil corresponding to category API/CG/CF.

**NOTE:** Do not put any Performance Additive or other additive in the sump. Oil change intervals shown in this manual are based on tests carried out on CASE lubricants.

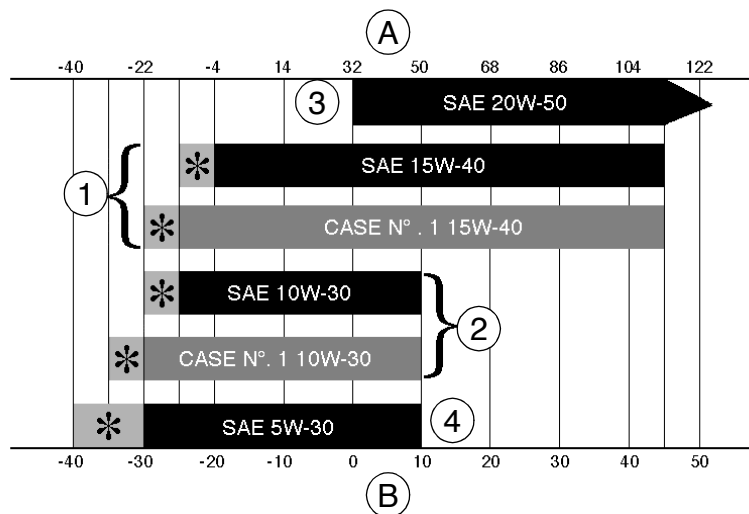


RF97F136



RB97F100

## Oil viscosity/Oil range



(A) FAHRENHEIT TEMPERATURE

(B) CELSIUS TEMPERATURE

(1) ALL-SEASONS

(\*) SHOWS THAT AN ENGINE OIL HEATER OR ENGINE COOLANT SOLUTION HEATER MUST BE USED.

(2) WINTER

(3) TROPICAL

(4) ARCTIC

CS98M561

■

