

**580T
580ST
590ST
695ST
Backhoe Loaders**

Service Manual

Print No. 84581914



INDEX

SECTION 00 - SAFETY RULES

FOREWORD.....	4
SAFETY INSTRUCTIONS	6
PREVENTION OF FIRE OR EXPLOSIONS	8
PREVENTION OF BURNS	9
PRECAUTIONS FOR WASTE DISPOSAL.....	10

SECTION 01 - MAINTENANCE

SECTION 02 - TECHNICAL SPECIFICATIONS

MODELS.....	3
IDENTIFICATION OF MAIN COMPONENTS.....	4
TECHNICAL SPECIFICATIONS.....	6
TRANSMISSION.....	6
AXLES	7
BRAKES	8
STEERING.....	8
HYDRAULIC SYSTEM	9
FRONT COUNTERWEIGHT	9
NOISE AND VIBRATION LEVELS	10
BUCKETS.....	10
TYRES	11
DIMENSIONS AND PERFORMANCE.....	12
DIMENSIONS - 2WS SIDESHIFT	12
DIMENSIONS - 2WS SIDESHIFT SLA ("STRAIGHT LOADER ARM"	13
DIMENSIONS - 4WS SIDESHIFT	14
DIMENSIONS - 4WS CENTER PIVOT.....	15
LOADER ATTACHMENT PERFORMANCE.....	16
PERFORMANCE OF LOADER BUCKET WITH FORKS.....	19
BACKHOE ATTACHMENT PERFORMANCE.....	21
MAXIMUM LIFTING LOADS.....	24
LOADER ATTACHMENT MAXIMUM LIFTING LOAD TABLE	24
BACKHOE ATTACHMENT MAXIMUM LIFTING LOAD TABLE	25
SUPPLY SUMMARY TABLE	26

SECTION 10 - ENGINE

ENGINE INSTALLATION	3
TECHNICAL SPECIFICATIONS	4
72kW - HP ENGINE (580T)	4
72kW - HP ENGINE (580ST)	5
82kW - HP ENGINE (590ST - 695ST)	6

SECTION 21 - TRANSMISSION

POWERSHUTTLE TRANSMISSION	3
TECHNICAL SPECIFICATIONS	4
CONTROLS	9
LUBRICATION	13
GREASING	16
REMOVAL FROM MACHINE	18
DISASSEMBLY AND ASSEMBLY	19
TROUBLESHOOTING	144
REPAIR TIMES	148
SPECIAL TOOLS	149
POWERSHIFT TRANSMISSION	150
TECHNICAL SPECIFICATIONS	150
CONTROLS	161
LUBRICATION	163
GREASING	165
REMOVAL FROM MACHINE	166
DISASSEMBLY AND ASSEMBLY	167
TROUBLESHOOTING	331
REPAIR TIMES	335
SPECIAL TOOLS	336

SECTION 25 - FRONT AXLE

2WD - 2WS FRONT AXLE	3
TECHNICAL SPECIFICATIONS	3
LUBRICATION AND GREASING	4
REMOVAL FROM MACHINE	6
DISASSEMBLY AND ASSEMBLY	7
TROUBLESHOOTING	7
4WD - 2WS FRONT AXLE	10
TECHNICAL SPECIFICATIONS	10
LUBRICATION AND GREASING	11
REMOVAL FROM MACHINE	13
DISASSEMBLY AND ASSEMBLY	14
TROUBLESHOOTING	57
SPECIAL TOOLS	61
4WS FRONT AXLE	62
TECHNICAL SPECIFICATIONS	62

LUBRICATION AND GREASING	63
REMOVAL FROM MACHINE	65

SECTION 27 - REAR AXLE

2WS REAR AXLE (580T - 580ST).....	3
TECHNICAL SPECIFICATIONS.....	3
LUBRICATION AND GREASING	5
REMOVAL FROM MACHINE	7
DISASSEMBLY AND ASSEMBLY.....	8
TROUBLESHOOTING.....	61
REPAIR TIMES.....	67
SPECIAL TOOLS.....	68
2WS REAR AXLE (590ST)	69
TECHNICAL SPECIFICATIONS.....	69
LUBRICATION AND GREASING	71
REMOVAL FROM MACHINE	73
DISASSEMBLY AND ASSEMBLY.....	74
TROUBLESHOOTING.....	127
REPAIR TIMES.....	133
SPECIAL TOOLS.....	134
4WS REAR AXLE (695ST).....	135
TECHNICAL SPECIFICATIONS.....	135
LUBRICATION AND GREASING	138
REMOVAL FROM MACHINE	140
DISASSEMBLY AND ASSEMBLY.....	141
TROUBLESHOOTING.....	219
REPAIR TIMES.....	225
SPECIAL TOOLS.....	227

SECTION 33 - BRAKE SYSTEM

PARKING BRAKE.....	3
TECHNICAL SPECIFICATIONS.....	3
OPERATION.....	3
ADJUSTMENT.....	4
MECHANICAL PARKING BRAKE ADJUSTMENT PROCEDURE.....	5
DISASSEMBLY AND ASSEMBLY.....	6
SERVICE BRAKE	15
OPERATION.....	15
BRAKE BLEEDING PROCEDURE.....	16
BRAKE PEDALS FUNCTIONALITY CHECK	17

SECTION 35 - HYDRAULIC SYSTEM

HYDRAULIC DIAGRAMS	3
HYDRAULIC DIAGRAM - 2WS SIDESHIFT MECHANICAL MODELS	3
HYDRAULIC DIAGRAM - 2WS SIDESHIFT PILOT MODELS	9
HYDRAULIC DIAGRAM - 4WS SIDESHIFT MECHANICAL MODELS	11
HYDRAULIC DIAGRAM - 4WS SIDESHIFT PILOT MODELS	13
HYDRAULIC DIAGRAM - 4WS CENTER PIVOT PILOT MODELS	15
HYDRAULIC PUMP	17
HYDRAULIC FIXED-FLOW-RATE GEAR PUMP	17
HYDRAULIC VARIABLE-FLOW-RATE PISTON PUMP	28
CONTROL VALVES	43
LOADER CONTROL VALVE	52
BACKHOE ATTACHMENT CONTROL VALVE	56
RELIEF VALVES	68
BACKHOE ATTACHMENT CONTROL VALVE PILOT SOLENOID VALVE	77
ACCUMULATOR "GLIDE RIDE" PARKER	80
TECHNICAL SPECIFICATIONS	80
MAINTENANCE	80
SAFETY	80
CHECKING AND ADJUSTING THE PRECHARGE PRESSURE	81
HYDRAULIC SWING SYSTEM	83
OPERATION	83
HYDRAULIC CYLINDERS	86
LOADER ATTACHMENT BOOM CYLINDER	87
LOADER BUCKET CYLINDER	93
4X1 LOADER BUCKET CYLINDER	97
BACKHOE BOOM CYLINDER	100
BACKHOE ATTACHMENT DIPPER CYLINDER	104
BACKHOE BUCKET CYLINDER	108
TELESCOPIC CYLINDER	112
STABILIZER CYLINDER - CENTER PIVOT (695ST)	115
STABILIZER CYLINDER - SIDESHIFT	119
SWING CYLINDER	123
BACKHOE ATTACHMENT LOCK CYLINDER - SIDESHIFT	127
SPECIAL TOOLS	128
HYDRAULIC CONTROL LEVERS	129
TECHNICAL SPECIFICATIONS	129
CONTROLS AND OPERATION	130
COMPONENTS	131
DISASSEMBLY AND ASSEMBLY	133
CONTROL LEVER VALVE	136
TROUBLESHOOTING	138
PRELIMINARY CHECKS	138
TROUBLESHOOTING (WITH "REXROTH" CONTROL VALVES)	139
SWING	141
HYDRAULIC PUMP	142

SECTION 39 - CHASSIS

DESCRIPTION	3
REMOVAL AND INSTALLATION OF COMPONENTS	6
COMPONENTS WITHIN THE CHASSIS	9
COMPONENTS OF THE LOWER PART OF THE CHASSIS	7
COMPONENTS ATTACHED OUTSIDE THE CHASSIS	11
COMPONENTS OF THE UPPER PART	12

SECTION 41 - STEERING SYSTEM

DESCRIPTION	3
2WS STEERING SYSTEM	4
4WS STEERING SYSTEM	7
POWER STEERING	11
TECHNICAL SPECIFICATIONS	11
COMPONENTS	13
DISASSEMBLY	15
ASSEMBLY	18

SECTION 50 - CAB HEATING AND AIR CONDITIONING

TECHNICAL SPECIFICATIONS	3
GENERAL	3
CAB HEATING	5
CONTROLS	5
OPERATION	6
AIR FLOW DIFFUSERS	7
OVERHAUL	9
TROUBLESHOOTING	11
AIR CONDITIONING	12
PRINCIPLES OF AIR CONDITIONING	12
CONTROLS	17
OPERATION	18
TROUBLESHOOTING AND TESTING	25
FLUSHING THE SYSTEM	43
DRAINING THE SYSTEM	45
CHARGING THE SYSTEM	46
OVERHAUL	47
COMPRESSOR	52
TECHNICAL SPECIFICATIONS	52
REMOVAL AND INSTALLATION	53
DISASSEMBLY AND ASSEMBLY	56
TROUBLESHOOTING	65

SECTION 55 - ELECTRIC SYSTEM

ELECTRIC DIAGRAMS	3
ELECTRIC DIAGRAMS - POWERSHUTTLE ROPS (580T mechanical engine)	3
ELECTRIC DIAGRAMS - POWERSHUTTLE CAB (580T - 580T SLA mechanical engine).....	18
ELECTRIC DIAGRAMS - POWERSHUTTLE CAB (580ST - 590ST electronic engine).....	36
ELECTRIC DIAGRAMS - POWERSHIFT CAB (580ST - 590ST electronic engine) - 2WS.....	53
ELECTRIC DIAGRAMS - POWERSHIFT CAB (695ST) - 4WS.....	72
CONTROLS AND INSTRUMENTS.....	91
FRONT CONTROL PANELS (580T - 580ST - 590ST).....	91
FRONT CONTROL PANELS (695ST).....	93
CONTROL PANEL AND SIDE INSTRUMENT CLUSTER (580T mechanical engine).....	95
CONTROL PANEL AND SIDE INSTRUMENT CLUSTER (580ST - 590ST - 695ST electronic engine)	97
SIDE INSTRUMENT CLUSTER (580T).....	99
SIDE INSTRUMENT CLUSTER (580ST - 590ST - 695ST).....	101
ANTI-START SYSTEM	103
DIAGNOSTIC DISPLAY (580ST - 590ST - 695ST).....	104
SYMBOLS.....	106
SETUP MENU.....	107
PROCEDURE ABOUT SELF TEST.....	108
ON BOARD ERROR CODE RETRIEVAL.....	109
BACKLIGHTING AND DIMMING.....	110
WORK HOURS.....	111
OPERATION.....	112
WARNING SYSTEM.....	116
MAINTENANCE.....	117
WARNING MESSAGES.....	118
STARTING SYSTEM	124
OPERATION.....	124
STARTER MOTOR.....	127
TROUBLESHOOTING.....	132
ALTERNATOR.....	134
TECHNICAL SPECIFICATIONS.....	134
OPERATION.....	135
TROUBLESHOOTING.....	136
BATTERY.....	137
TECHNICAL SPECIFICATIONS.....	137
OPERATION.....	137
REPLACEMENT	138
CHARGE AND ELECTROLYTE LEVEL CHECK	139
CONNECTING A BOOSTER BATTERY	140
BATTERY MASTER SWITCH	140
TROUBLESHOOTING	141

SECTION 82 - LOADER ATTACHMENT

LOADER ATTACHMENT CONTROLS.....	3
LOADER ATTACHMENT OPERATION	3
4x1 LOADER BUCKET CONTROL (Optional)	6
LOADER ATTACHMENT CONTROL LOCK (Specific to certain countries).....	7
BUCKET SELF-LEVELLING.....	8
LOADER ATTACHMENT SAFETY STRUT.....	12
LOADER ATTACHMENT SAFETY STRUT (2WS)	12
LOADER ATTACHMENT SAFETY STRUT (4WS)	13
REMOVAL AND INSTALLATION OF LOADER BUCKET	14
STANDARD LOADER BUCKET	14
LOADER BUCKET WITH FORKS (Optional)	15
BUCKET TEETH REPLACEMENT.....	16
LOADER REMOVAL.....	17

SECTION 84 - BACKHOE ATTACHMENT

DESCRIPTION AND OPERATION.....	3
BACKHOE ATTACHMENT CONTROLS	6
BACKHOE ATTACHMENT MECHANICAL CONTROLS	7
BACKHOE ATTACHMENT HYDRAULIC CONTROLS	18
BACKHOE ATTACHMENT SIDESHIFT (Sideshift version)	24
BACKHOE ATTACHMENT DISASSEMBLY	26
BACKHOE BUCKET REPLACEMENT	28
BACKHOE BUCKET	29
BACKHOE ATTACHMENT HYDRAULIC HANDLING	30
CONTROLS	30
HYDRAULIC DIAGRAM	31
DISASSEMBLY AND ASSEMBLY.....	32

580T
580ST
590ST
695ST



SECTION 00 - SAFETY RULES

SAFETY INSTRUCTIONS

WARNING

This warning symbol points out important messages involving your safety.

Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and to safeguard your safety and personal integrity.

In this manual you will find this symbol together with the following keywords:

WARNING

This symbol warns about the possibility of potential damages to the machine that can involve the operator's safety.

WARNING

With specific warnings about potential dangers for the operator's or other persons integrity directly or indirectly involved.

The non-compliance with the warnings preceded by the above-mentioned keywords (WARNING and DANGER) can cause serious accidents or even the death of the persons involved.

Moreover, in the present Manual, some instructions are given with text in italics, preceded by the words **NOTE** and **CAUTION**.

NOTE: *it emphasizes and underlines to the operator the correct technique or correct procedure to follow.*

WARNING

This symbol warns about the possibility of potential damages to the machine that can involve the operator's safety.

FOREWORD

Backhoe loaders 580T - 580ST - 590ST - 695ST have been designed to perform most earth-moving operations.

If you use this machine for duties involving the use of attachments, accessories, or special tools, consult your Dealer to make sure that the adaptations or modifications carried out are in conformity with the machine's technical specifications and with current regulations on safety.

Any modifications or adaptations which are not approved by the manufacturer may invalidate the machine's original conformity with safety requirements.

The machine must be used according to its intended use, respecting the safety and precautionary rules and strictly following the operating instructions.

Any functional disorders, especially those affecting the safety of the machine, should therefore be rectified immediately.

DANGER

A different use of the excavator or of its working equipment:

- for lifting or transporting persons;
- as a working platform;
- for lifting loads without the attachment being approved for this purpose;
- for pulling loads;
- is considered unintended use.


Unintended use may cause injury or life-threatening risks for the operator and for other persons.

The manufacturer/supplier cannot be held responsible for any damage resulting from unintended use. The risk involved in such misuse lies entirely with the user.

DANGER

It is absolutely forbidden to tamper with and/or change the setting of any of the hydraulic system valves to avoid damaging machine components, with a consequent risk for personal safety.

The current Operator's Manual is the user's guide for correct run-in, use and maintenance of the machine.

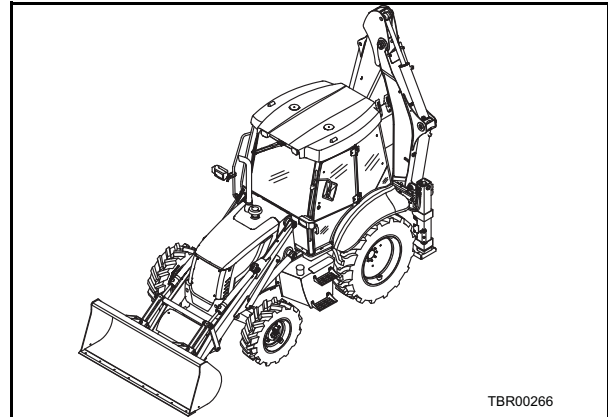

Carefully read this Operator's Manual and store it in the cab for quick location and reference.

Instructions concerning safety, operation and maintenance have been developed to permit safe service and repair of this machine without any risk.

In the event of queries or suggestions relevant to your machine do not hesitate to address to your Dealer.

Dealers have qualified and trained personnel at disposal as well as Original Spares, means and equipment suitable to carry out all necessary maintenance.

Any modifications or adaptations which are not approved by the manufacturer may invalidate the machine's original conformity with safety requirements.

IMPORTANT: *the engine and fuel system on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be carried out by a certified technician only.*

NOTE: *each machine is supplied complete with a copy of this Manual. Descriptions and illustrations provided herein are not binding. The Manufacturer, provided that the basic characteristics of machine types described and shown in this Manual remain the same, reserves the right to change components, parts and accessories supplied without any commitment to timely update this publication; and this any time it deems it convenient for improvement purposes or due to commercial or manufacturing requirements. For exact information, please consult your Dealer or contact the Manufacturer's Branch Offices, who remain at your disposal for further help.*

SPARE PARTS

The "non-genuine" spare parts have not been checked and authorized by the Manufacturer.

The assembly and/or use of such products may have negative effects on the machine design features and could impair its operation safety.

The Manufacturer is not liable for any damage caused by "non-genuine" spare parts or accessories.

WARRANTY

This machine is under warranty according to the regulations in force in Your Country and in compliance with the sales agreement drawn up with the Dealer.

The warranty, however, expires if the operation and maintenance instruction for this machine and contained in this manual, have not been followed.

Click on the image link below for the full version of the service manual

