1150H CRAWLER

Service Manual
7-16200

Table of Contents

Description	Section No.	Publication Form No.
General	**Tab 1**	
Section Index - General		7-18400
Standard Torque Specifications	1001	8-71602
Fluids and Lubricants	1002	7-17480
Loctite Product Chart		8-98902
Engines	**Tab 2**	
Section Index - Engines		7-18410
Stall Tests	2001	7-17490
Engine and Radiator Removal and Installation	2002	7-18420
Fuel System	**Tab 3**	
Section Index - Fuel System		7-18430
Electrical	**Tab 4**	
Section Index - Electrical		7-18440
Removal and Installation of Electrical Components	4000	7-18450
Electrical Troubleshooting	4001	7-17980
Battery	4003	8-11361
Instrument Panel	4004	7-17650
Alternator	4007	7-18070
Tracks	**Tab 5**	
Section Index - Tracks		7-18460
Undercarriage Fundamentals	5001	7-17690
Inspection of Track System Components	5501	7-18470
Case Lubricated Track	5504	7-17700
Track Frame and Suspension	5507	7-18490
Idler, Track Adjuster, and Recoil Housing	5508	7-18500
Sprocket	5509	7-18510
Track Roller	5511	7-18520
Power Train	**Tab 6**	
Section Index - Power Train		7-18530
Removal and Installation of Power Train Components	6000	7-18540
Transmission Schematic and Troubleshooting	6002	7-17510
Transmission Charging Pump	6005	7-18550
Transmission Control Valve	6007	7-17790
High/Low Range Control Valve	6008	7-18560

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluid and Lubricants	1002
Loctite Product Chart	

Section 1001

GENERAL TORQUE SPECIFICATIONS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs



Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983

Grade 8 Bolts, Nuts, and Studs



Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827

NOTE: *Use thick nuts with Grade 8 bolts.*

TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs




Size	Pound-Inches	Newton metres
M4	24 to 36	3 to 4
M5	60 to 72	7 to 8
M6	96 to 108	11 to 12
M8	228 to 276	26 to 31
M10	456 to 540	52 to 61
Size	Pound-Feet	Newton metres
M12	66 to 79	90 to 107
M14	106 to 127	144 to 172
M16	160 to 200	217 to 271
M20	320 to 380	434 to 515
M24	500 to 600	675 to 815
M30	920 to 1100	1250 to 1500
M36	1600 to 1950	2175 to 2600

Grade 10.9 Bolts, Nuts, and Studs



Size	Pound-Inches	Newton metres
M4	36 to 48	4 to 5
M5	84 to 96	9 to 11
M6	132 to 156	15 to 18
M8	324 to 384	37 to 43
Size	Pound-Feet	Newton metres
M10	54 to 64	73 to 87
M12	93 to 112	125 to 150
M14	149 to 179	200 to 245
M16	230 to 280	310 to 380
M20	450 to 540	610 to 730
M24	780 to 940	1050 to 1275
M30	1470 to 1770	2000 to 2400
M36	2580 to 3090	3500 to 4200

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound-Inches	Newton metres
37 Degree Flare Fitting			
1/4 inch 6.4 mm	7/16-20	72 to 144	8 to 16
5/16 inch 7.9 mm	1/2-20	96 to 192	11 to 22
3/8 inch 9.5 mm	9/16-18	120 to 300	14 to 34
1/2 inch 12.7 mm	3/4-16	180 to 504	20 to 57
5/8 inch 15.9 mm	7/8-14	300 to 696	34 to 79
Tube OD Hose ID	Thread Size	Pound-Inches	Newton metres
3/4 inch 19.0 mm	1-1/16-12	40 to 80	54 to 108
7/8 inch 22.2 mm	1-3/16-12	60 to 100	81 to 135
1.0 inch 25.4 mm	1-5/16-12	75 to 117	102 to 158
1-1/4 inch 31.8 mm	1-5/8-12	125 to 165	169 to 223
1-1/2 inch 38.1 mm	1-7/8-12	210 to 250	285 to 338

Tube OD Hose ID	Thread Size	Pound-Inches	Newton metres
Straight Threads with O-ring			
1/4 inch 6.4 mm	7/16-20	144 to 228	16 to 26
5/16 inch 7.9 mm	1/2-20	192 to 300	22 to 34
3/8 inch 9.5 mm	9/16-18	300 to 480	34 to 54
1/2 inch 12.7 mm	3/4-16	540 to 804	57 to 91
Tube OD Hose ID	Thread Size	Pound-Inches	Newton metres
5/8 inch 15.9 mm	7/8-14	58 to 92	79 to 124
3/4 inch 19.0 mm	1-1/16-12	80 to 128	108 to 174
7/8 inch 22.2 mm	1-3/16-12	100 to 160	136 to 216
1.0 inch 25.4 mm	1-5/16-12	117 to 187	159 to 253
1-1/4 inch 31.8 mm	1-5/8-12	165 to 264	224 to 357
1-1/2 inch 38.1 mm	1-7/8-12	250 to 400	339 to 542

Split Flange Mounting Bolts		
Size	Pound-Inches	Newton metres
5/16-18	180 to 240	20 to 27
3/8-16	240 to 300	27 to 34
7/16-14	420 to 540	47 to 61
Size	Pound-Feet	Newton metres
1/2-13	55 to 65	74 to 88
5/8-11	140 to 150	190 to 203


Section 2002

ENGINE AND RADIATOR REMOVAL AND INSTALLATION

ENGINE

Removal

STEP 1

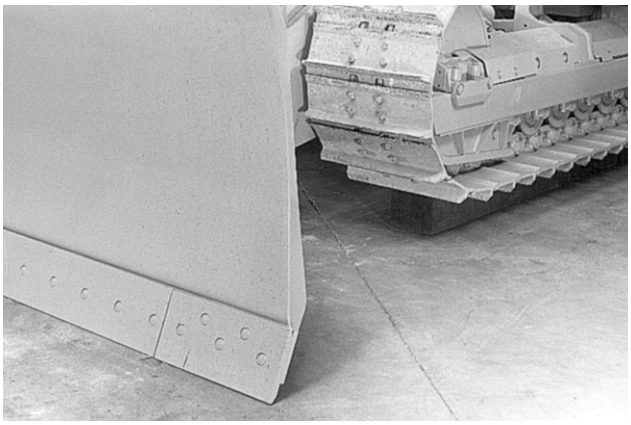

RP95H150

Put the crawler on blocks at least 203 mm (8 inches) high to allow the C-frame to drop below the bolts securing the radiator shroud. An alternate method is to remove the dozer blade and C-frame as an assembly.


STEP 2



RP95H151

Raise and support the dozer blade. Use a floor jack to support the undercarriage guards. Remove the guards from under the engine and torque converter.

STEP 3

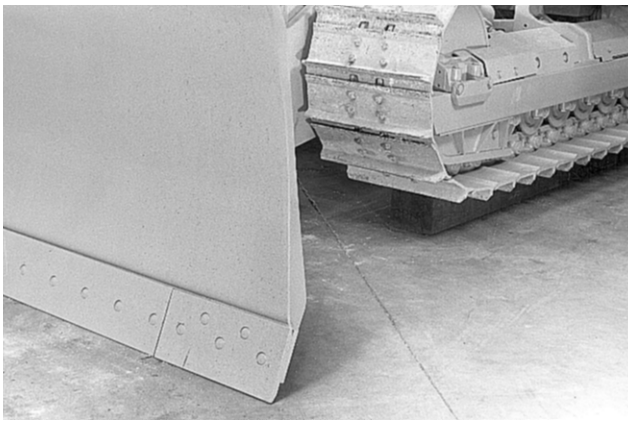

RP95H150

Remove the supports from under the dozer blade. Lower the dozer blade to the ground.

STEP 4




BD99N041

Put the battery disconnect switch in the OFF position.

STEP 5

Get three 20 liter (5 gallon) containers. Remove the drain plug in the bottom of the transmission housing. Drain the transmission oil into the clean containers. Store the transmission oil in a safe and clean area if the oil is to be reused.


STEP 6

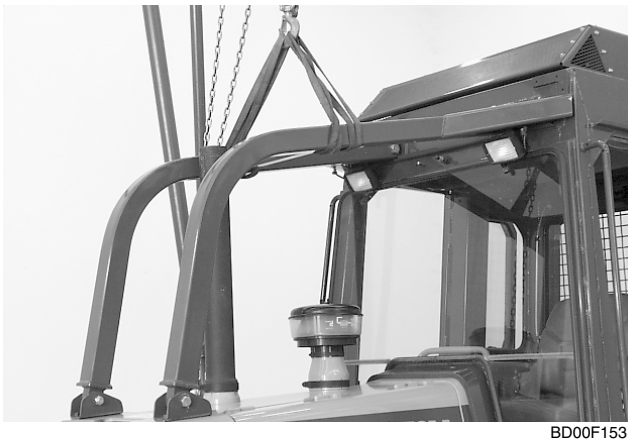

BD00F153

If the machine is equipped with a brush guard, connect suitable lifting equipment to brush guard. Remove four bolts and lock nuts securing brush guard. Remove brush guard.


STEP 7

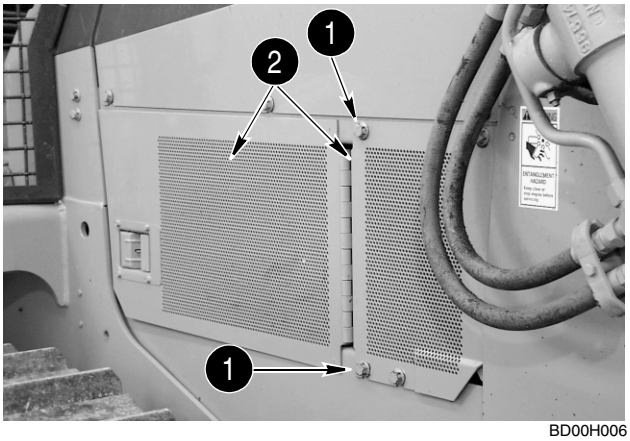

BD00H006

Remove bolts (1) securing the upper RH and LH side shield covers (2). Remove both side shield covers.


STEP 8

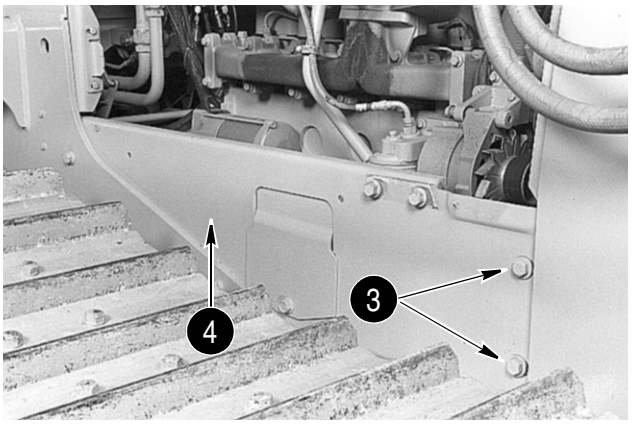

RP95H122

Remove the bolts (3) securing the lower RH and LH side shield covers (4). Remove the side shield covers.


STEP 9

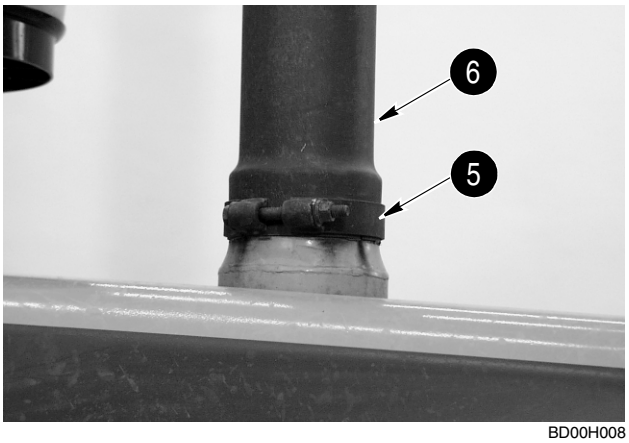

BD00H008

Loosen the clamp (5) securing the exhaust pipe (6). Remove the exhaust pipe.


STEP 10

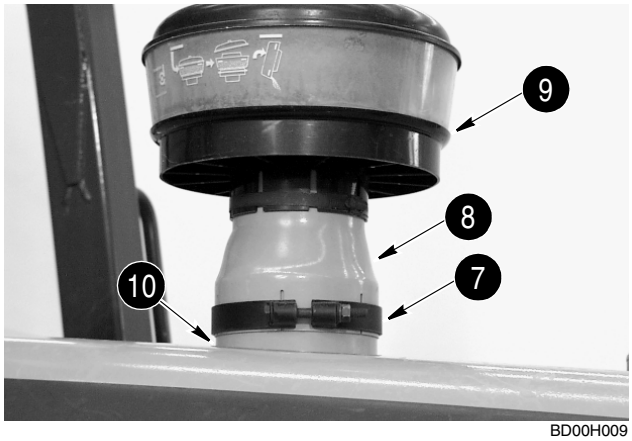

BD00H009

Loosen the clamp (7) securing the air cleaner stack (8). Remove the air cleaner stack (8) and precleaner (9) as an assembly then remove the pad (10).

STEP 11

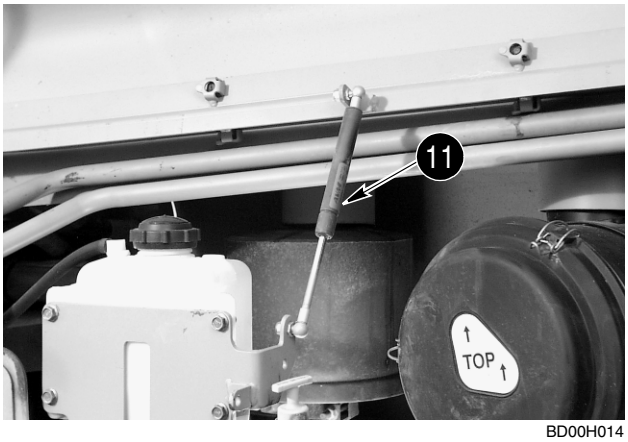

BD00H014

Open the LH engine hood. Remove the lock nut securing the bottom of the spring (11). Support the hood and disconnect the bottom of the spring from the bracket. Close but do not latch the hood.

Click on the image link below for the full version of the service manual

