SERVICE MANUAL

TRACTORS

MX100, MX110
MX120 MX135
Series

Binder 1

7-65907

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

TRACTORS

MX100, MX110
MX120 MX135
Series

Binder 1

7-65907

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

TRACTORS

MX100, MX110
MX120, MX135
Series

Binder 2

7-65907

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

TRACTORS

MX100, MX110
MX120, MX135
Series

Binder 2

7-65907

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

MX100, MX110, MX120 and MX135 Tractors

Service Manual Don 7-65907

Table of Contents

Binder 1 Contains Tabs 1 to 6
Binder 2 Contains Tabs 7 to 10

		Section	Pub. No.
1	**GENERAL**		
	Loctite Product Chart		8-98902
	Safety Rules, General Information and Torque Specifications	1001	8-86531
	General Specifications and Torques	1002	7-39021
	Special Tools	1005	7-73502
2	**ENGINE**		
	NOTE: *For Service and Overhaul procedures refer to your Engine Service Manual.*		
3	**FUEL SYSTEM**		
	Fuel Tank Removal and Servicing	3005	7-73330
4	**ELECTRICAL**		
	Electrical Troubleshooting and Schematics	4001	7-73650
	Instrument Cluster Programming	4002	7-71332
	Battery Servicing and Testing	4004	7-73211
	Alternator	4008	7-68501
5	**STEERING**		
	How It Works	5	7-72230
	Steering Column and Steering Hand Pump	5001	7-72241
	Danfoss Steering Hand Pump	5002	7-73341
	Eaton Steering Hand Pump	5002	7-73351
	Rexroth Steering Hand Pump	5002	7-73960
	2WD Front Axle	5003	7-73220
6	**TRANSMISSION**		
	How It Works	6	7-72260
	Separating the Tractor (Between Engine and Speed Transmission)	6002	7-66060
	Separating the Tractor (Between Speed and Range Transmission)	6003	7-66070
	Transmission Input Drive Shaft and Torque Dampener	6004	7-66080
	Servicing the Synchromesh Speed Transmission	6005	7-66090
	Servicing the Powershift Transmission	6006	7-66100
	Servicing the Range Transmission	6007	7-66111
	Powershift Valve	6009	7-66131
	Shuttle Valve	6010	7-66141
	Synchronizer Creep Transmission	6011	7-66150

continued ....

NOTE: *Information contained in this Manual may cover features that are not available in all markets worldwide.*

Differential and Differential Lock 6012 7-66161
MFD Drive Shaft 6014 7-66170
MFD Output Shaft and Bearing 6015 7-67821
MFD Clutch 6017 7-66180
Rear Axles and Planetaries 6018 7-66190
PTO - Reversible and Shiftable 6019 7-66201
MFD Axle 6021 7-66210
Independent Front Suspension Axle 6022 7-73530
PTO Front Drive Shaft and Hydraulic Pump Drive Gear
up to Transmission Serial Number JKA118657 ..... 6023 7-66221
PTO Front Drive Shaft and Hydraulic Pump Drive Gear
from Transmission Serial Number JKA118658 ..... 6023 7-72710

7 BRAKES
How It Works 7 7-72380
Parking Brake 7001 7-66240
Service Brakes 7002 7-66251
Hydraulic Trailer Brake Valve 7004 7-67711

8 HYDRAULICS
How it Works 8 7-72320
How to Read Hydraulic Schematics 8000 8-94372
Hydraulic Troubleshooting and Schematic 8001 7-73630
Hydraulic Pump 8002 7-73230
Charge Pump/Transfer Pump 8003 7-66290
Hydraulic Valves 8006 7-66331
Front Hitch 8007 7-73240
Remote Valves 8008 7-73250
Hydraulic Schematic Poster 7-67150

9 CHASSIS AND MOUNTED EQUIPMENT
Pedal, Lever Adjustments 9001 7-66351
Air Conditioner Troubleshooting (Visual and Operating) 9002 7-85050
Air Conditioner Gauges and Testing 9003 7-85060
Air Conditioner System Service
(Refrigerant Recovery, System Evacuation and Recharging) 9004 7-85070
Air Conditioner System Components Service 9005 7-85080
Cab Removal and Tilting the Cab Roof 9006 7-73260
Platform and ROPS Removal 9007 7-73270
Cab Mountings 9008 7-73300

10 CONTROLLER SYSTEMS
Hitch/MFD/Differential Lock Controller Calibration, Error Codes
and Schematics up to PIN JJE956905 (Europe) or
PIN JJA96840 (North America) 10002 7-73290
Hitch/MFD/Differential Lock Controller Calibration, Error Codes
and Schematics from PIN JJE956906 (Europe) or
PIN JJA96841 (North America) 10002 7-73542
Independent Front Suspension Axle
Calibration, Error Codes, Troubleshooting and Schematics 10003 7-73900
PTO/FNR Controller and Powershift
Configuration, Error Codes and Schematics 10006 7-73281
Programming the PTO/FNR Controller and
Hitch/MFD/Differential Lock Controller 10010 7-74001

Section

1001


SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

SAFETY

This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the key switch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier.

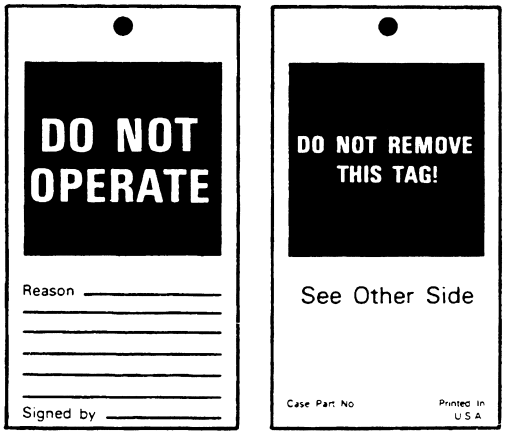

WARNING: Read the operators manual to familiarize yourself with the correct control functions.

WARNING: Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.

WARNING: This is one a man machine, no riders allowed.

WARNING: Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.
It is your responsibility to understand and follow manufacturers instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from you J.I.Case dealer.

WARNING: If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.

WARNING: When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.

WARNING: When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.

WARNING: When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.

Click on the image link below for the full version of the service manual

